

LINK:
CONTENT & A-Z



MINI ELECTRIC

OWNER'S MANUAL.
MINI COUNTRYMAN PLUG-IN HYBRID.



Online Edition for Part no. 01402628632 - VI/19



WELCOME TO MINI.

OWNER'S MANUAL. MINI COUNTRYMAN PLUG IN HYBRID.

Thank you for choosing a MINI.

The more familiar you are with your vehicle, the better control you will have on the road. We therefore strongly suggest:

Read this Owner's Manual before starting off in your new MINI. Also use the Integrated Owner's Manual in your vehicle. It contains important information on vehicle operation that will help you make full use of the technical features available in your MINI. The manual also contains information designed to enhance operating reliability and road safety, and to contribute to maintaining the value of your MINI.

Any updates made after the editorial deadline can be found in the appendix of the printed Owner's Manual for the vehicle.

Get started now. We wish you driving fun and inspiration with your MINI.

TABLE OF CONTENTS

Navigation, Entertainment and Communication can be called up via the Integrated Owner's Manual in the vehicle.

NOTES

Information.....	8
------------------	---

QUICK REFERENCE

Entering.....	20
Set-up and use.....	25
On the road.....	29

AT A GLANCE

Cockpit.....	40
Central Information Display (CID).....	44
Voice activation system.....	51
General settings.....	55
Owner's Manual media.....	67
MINI eDRIVE.....	69
Safety of the hybrid system.....	72

CONTROLS

Opening and closing.....	76
Seats, mirrors, and steering wheel.....	100
Transporting children safely.....	112
Driving.....	118
Displays.....	140
Lights.....	163
Safety.....	169
Driving stability control systems.....	189
Driving comfort.....	193

Climate control.....	213
Interior equipment.....	222
Storage compartments.....	230
Cargo area.....	233

DRIVING TIPS

Things to remember when driving.....	242
Saving fuel.....	247

MOBILITY

Charging the vehicle.....	254
Refueling.....	263
Fuel.....	266
Wheels and tires.....	268
Engine compartment.....	285
Engine oil.....	288
Coolant.....	292
Maintenance.....	294
Replacing components.....	296
Breakdown assistance.....	306
Care.....	313

REFERENCE

Technical data.....	320
Appendix.....	322
Everything from A to Z.....	324



! NOTES

Information	8
-------------------	---

Information

Using this Owner's Manual

Orientation

The fastest way to find information on a particular topic is by using the index.

An initial overview of the vehicle is provided in the first chapter.

Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the Integrated Owner's Manual in the vehicle.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

Owner's Manual for Navigation, Entertainment, Communication

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as a printed book from the service center.

The topics are also discussed in the Integrated Owner's Manual in the vehicle.

Additional sources of information

Service center

A service center will be glad to answer questions at any time.

Internet

Vehicle information and general information on MINI, e.g., on technology, are available on the Internet: www.mini.jp.

Vehicle information and general information on MINI, e.g., on technology, are available on the Internet: www.miniusa.com.

Integrated Owner's Manual in the vehicle

The Integrated Owner's Manual specifically describes features and functions found in the vehicle. The Integrated Owner's Manual can be displayed on the Control Display. Additional information, refer to page 67.

MINI Motorer's Guide app



The app specifically describes features and functions found in the vehicle. The app can be displayed on smartphones and tablets.

MINI Driver's Guide Web

Driver's Guide Web shows the most suitable information for the selected vehicle. If possible, only equipment and functions that are actually installed in the vehicle will be explained. Driver's Guide Web can be displayed in any current browser.

Symbols and displays

Symbols in the Owner's Manual

Symbol	Meaning
	Precautions that must be followed in order to avoid the possibility of injury to yourself and to others as well as serious damage to the vehicle.
	Measures that can be taken to help protect the environment.
"..."	Control Display texts used to select individual functions.
>...<	Verbal instructions to use with the voice activation system..
>>...<<	Responses generated by the voice activation system.

Action steps

Action steps to be carried out are presented as a numbered list. The steps must be carried out in the defined order.


1. First action step.
2. Second action step.


Enumerations

Enumerations without mandatory order or alternative possibilities are presented as a list with bullet points.

- First possibility.
- Second possibility.

Symbols on vehicle components

 This symbol on a vehicle component indicates that further information on the component is available in the Owner's Manual.

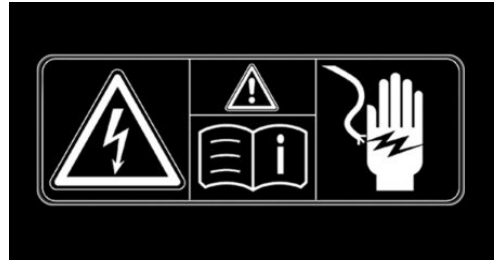

The symbols on parts of the vehicle indicate that incorrect use of high-voltage equipment or of orange-colored high-voltage components results in the risk of life-threatening injury from electric shock.

Vehicle features and options

This Owner's Manual describes all models and all standard, country-specific and optional equipment that is offered in the model series. Therefore, this Owner's Manual also describes and illustrates features and functions that are not available in a vehicle, for example because of the selected optional features or the country-specific version.

This also applies to safety-related functions and systems.

When using these functions and systems, the applicable laws and regulations must be observed.

For any options and equipment not described in this Owner's Manual, refer to the Supplementary Owner's Manuals.

Your dealer's service center is happy to answer any questions that you may have about the features and options applicable to your vehicle.

Status of the Owner's Manual

Basic information

The manufacturer of your vehicle pursues a policy of constant development that is conceived to ensure that our vehicles continue to embody the highest quality and safety standards. In rare cases, therefore, the features described in this Owner's Manual may differ from those in your vehicle.

Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the Integrated Owner's Manual in the vehicle.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

For Your Own Safety

Manufacturer

The manufacturer of this MINI is Bayerische Motoren Werke Aktionengesellschaft, BMW AG.

Intended use

Heed the following when using the vehicle:

- Owner's Manual.
- Information on the vehicle. Do not remove stickers.
- Technical vehicle data.
- The traffic, speed, and safety laws where the vehicle is driven.
- Vehicle documents and statutory documents.

Warranty

Your vehicle is technically configured for the operating conditions and registration requirements applying in the country of first delivery, also known as homologation. If your vehicle is to be operated in a different country it might be necessary to adapt your vehicle to potentially differing operating conditions and registration requirements. If your vehicle does not comply with the homologation requirements in a certain country you may not be able to lodge warranty claims for your vehicle there. Further information on warranty is available from a service center.

Maintenance and repairs

Advanced technology, for instance the use of modern materials and high-performance electronics, requires suitable maintenance and repair work.

The manufacturer of your vehicle recommends that you entrust corresponding procedures to a MINI dealer's service center. If you choose to use another service facility, the manufacturer of your vehicle recommends use of a facility that performs work, e.g., maintenance and repair, according to MINI specifications with properly trained personnel, referred to in the Owner's Manual as "another qualified service center or repair shop".

If work is performed improperly, for instance maintenance and repair, there is a risk of subsequent damage and related safety risks.

Improperly performed work on the vehicle paint can lead to a failure or malfunction of components, e.g., the radar sensors, and thereby result in a safety risk.

Parts and accessories

The manufacturer of your vehicle recommends the use of parts and accessory prod-

ucts approved by the manufacturer of the MINI.

Approved parts and accessories, and advice on their use and installation are available from a MINI dealer's service center.

MINI parts and accessories were tested by the manufacturer of the MINI for their safety and suitability in MINI vehicles.

The manufacturer of your vehicle warrants genuine MINI parts and accessories.

The manufacturer of your vehicle does not evaluate whether each individual product from another manufacturer can be used with MINI vehicles without presenting a safety hazard, even if a country-specific official approval was issued. The manufacturer of your vehicle does not evaluate whether these products are suitable for MINI vehicles under all usage conditions.

California Proposition 65 Warning

For vehicles sold in California, the law requires vehicle manufacturers to provide the following warning:

Warning

Engine exhaust and a wide variety of Automobile components and parts, including components found in the interior furnishings in a vehicle, contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Battery posts, terminals and related accessories contain lead and lead compounds. Batteries also contain other chemicals known to the State of California to cause cancer. Wash your hands after handling. Used engine oil contains chemicals that have caused cancer in labo-

ratory animals. Always protect your skin by washing thoroughly with soap and water. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

Warning

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

Service and warranty

We recommend that you read this publication thoroughly. Your vehicle is covered by the following warranties:

- New Vehicle Limited Warranty.
- Rust Perforation Limited Warranty.
- Federal Emissions System Defect Warranty.
- Federal Emissions Performance Warranty.
- California Emission Control System Limited Warranty.

Detailed information about these warranties is listed in the Service and Warranty Information Booklet for US models or in the Warranty and Service Guide Booklet for Canadian models.

Your vehicle has been specifically adapted and designed to meet the particular operating conditions and homologation requirements in your country and continental region in order to deliver the full driving pleasure while the vehicle is operated under those conditions. If you wish to operate your vehicle in another country or region, you may be required to adapt your vehicle to meet different prevailing operating conditions and homologation requirements. You should also be aware of any applicable warranty limitations or exclusions for such country or region. In such case, please contact Customer Relations for further information.

Maintenance

Maintain the vehicle regularly to sustain the road safety, operational reliability and the New Vehicle Limited Warranty.

Specifications for required maintenance measures:

- MINI Maintenance system.
- Service and Warranty Information Booklet for US models.
- Warranty and Service Guide Booklet for Canadian models.

If the vehicle is not maintained according to these specifications, this could result in damaging the vehicle. Such damage is not covered by the MINI New Vehicle Limited Warranty.

Data memory

General information

Electronic control devices are installed in the vehicle. Electronic control units process data they receive from vehicle sensors, self-generate or exchange with each other. Some control units are necessary for the vehicle

to function safely or provide assistance during driving, for instance driver assistance systems. Furthermore, control units facilitate comfort or infotainment functions.

Information about stored or exchanged data can be requested from the manufacturer of the vehicle, in a separate booklet, for example.

Personal reference

Each vehicle is marked with a unique vehicle identification number. Depending on the country, the vehicle owner can be identified with the vehicle identification number, license plate and corresponding authorities. In addition, there are other options to track data collected in the vehicle to the driver or vehicle owner, for instance via utilized services.

Operating data in the vehicle

Control units process data to operate the vehicle.

For example, this includes:

- Status messages for the vehicle and its individual components, e.g., wheel rotational speed, wheel speed, deceleration, transverse acceleration, engaged safety belt indicator.
- Ambient conditions, e.g., temperature, rain sensor signals.

The processed data is only processed in the vehicle itself and generally volatile. The data is not stored beyond the operating period.

Electronic components, e.g. control units and ignition keys, contain components for storing technical information. Information about the vehicle condition, component usage, maintenance requirements events or faults can be stored temporarily or permanently.

This information generally records the state of a component, a module, a system, or the environment, for instance:

- Operating states of system components, for instance, fill levels, tire inflation pressure, battery status.
- Malfunctions and faults in important system components, for instance lights and brakes.
- Responses by the vehicle to special situations such as airbag deployment or engagement of the driving stability control systems.
- Information on vehicle-damaging events.

The data is required to perform the control unit functions. Furthermore, it also serves to recognize and correct malfunctions, and helps the vehicle manufacturer to optimize vehicle functions.

The majority of this data is volatile and is only processed within the vehicle itself. Only a small share of data is stored in event or fault memories based on an event.

When servicing, for instance during repairs, service processes, warranty cases, and quality assurance measures, this technical information can be read out from the vehicle together with the vehicle identification number.

A dealer's service center or another qualified service center or repair shop can read out the information. The socket for OBD On-board Diagnosis required by law in the vehicle is used to read out the data.

The data is collected, processed, and used by the relevant organizations in the service network. The data documents technical conditions of the vehicle, helps with the identification of the fault, compliance with warranty obligations and quality improvement. Furthermore, the manufacturer has product monitoring duties to meet in line with prod-

uct liability law. To fulfill these duties, the vehicle manufacturer needs technical data from the vehicle. The data from the vehicle can also be used to check customer claims for warranty and guaranty.

Fault and event memories in the vehicle can be reset when a dealer's service center or another qualified service center or repair shop performs repair or servicing work.

Data entry and data transfer into the vehicle

General information

Depending on the vehicle equipment, comfort and individual settings can be stored in the vehicle and modified or reset at any time.

For example, this includes:

- Settings for the seat and steering wheel positions.
- Suspension and climate control settings.

If necessary, data can be transferred to the entertainment and communication system of the vehicle, for instance via smartphone.

This includes the following depending on the respective equipment:

- Multimedia data such as music, films or photos for playback in an integrated multimedia system.
- Address book data for use in conjunction with an integrated hands-free system or an integrated navigation system.
- Entered navigation destinations.
- Data on the use of Internet services.

This data can be stored locally in the vehicle or is found on a device that has been connected to the vehicle, e.g., a smartphone, USB stick or MP3 player. If this data is stored in the vehicle, it can be deleted at any time.

This data is only transmitted to third parties upon personal request as part of the use of online services. The transmission depends on the selected settings for the use of the services.

Incorporation of mobile devices

Depending on the vehicle equipment, mobile devices connected to the vehicle, for instance smartphones, can be controlled via the vehicle control elements.

The sound and picture from the mobile device can be played back and displayed through the multimedia system. Certain information is transferred to the mobile device at the same time. Depending on the type of incorporation, this includes, for instance position data and other general vehicle information. This optimizes the way in which selected apps, for instance navigation or music playback, work.

There is no further interaction between the mobile device and the vehicle, such as active access to vehicle data.

How the data will be processed further is determined by the provider of the particular app being used. The extent of the possible settings depends on the respective app and the operating system of the mobile device.

Services

General information

If the vehicle has a wireless network connection, this enables data to be exchanged between the vehicle and other systems. The wireless network connection is realized via an in-vehicle transmitter and receiver unit or via personal mobile devices brought into the vehicle, for instance smartphones. This wireless network connection enables 'online functions' to be used. These include online services and apps supplied by the vehicle manufacturer or by other providers.

Services from the vehicle manufacturer

Where online services from the vehicle manufacturer are concerned, the corresponding functions are described in the appropriate place, for instance the Owner's Manual or manufacturer's website. The relevant legal information pertaining to data protection is provided there too. Personal data may be used to perform online services. Data is exchanged over a secure connection, for instance with the IT systems of the vehicle manufacturer intended for this purpose.

Any collection, processing, and use of personal data above and beyond that needed to provide the services must always be based on a legal permission, contractual arrangement or consent. It is also possible to activate or deactivate the data connection as a whole. That is, with the exception of functions and services required by law such as Assist systems.

Services from other providers

When using online services from other providers, these services are the responsibility of the relevant provider and subject to their data privacy conditions and terms of use. The vehicle manufacturer has no influence on the content exchanged during this process. Information on the way in which personal data is collected and used in relation to services from third parties, the scope of such data, and its purpose, can be obtained from the relevant service provider.

Event Data Recorder EDR

This vehicle is equipped with an event data recorder EDR. The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that

will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger safety belts were fastened.
- How far, if at all, the driver was depressing the accelerator and/or brake pedal.
- How fast the vehicle was traveling.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur.


EDR data is recorded by your vehicle only if a nontrivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data, for instance name, gender, age, and crash location, are recorded.

However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.


Vehicle identification number

Engine compartment

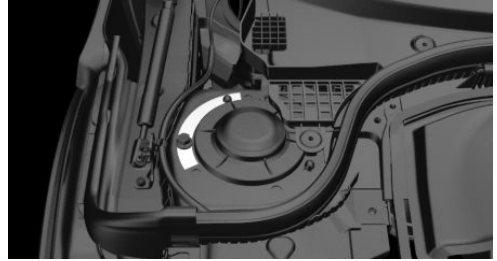

The vehicle identification number can be found in the engine compartment, on the right-hand side of the vehicle.

Windshield

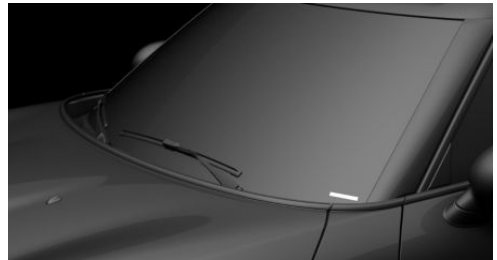

The vehicle identification number can also be found behind the windshield.

Reporting safety defects

For US customers

The following only applies to vehicles owned and operated in the US.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration NHTSA, in addition to notifying MINI of North America, LLC, P.O. Box

1227, Westwood, New Jersey 07675-1227,
Telephone 1-800-831-1117.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your dealer, or MINI of North America, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>

For Canadian customers

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from <http://www.tc.gc.ca/roadsafety>.




QUICK REFERENCE

Entering	20
Set-up and use	25
On the road	29

Entering

Opening and closing

Buttons on the vehicle key

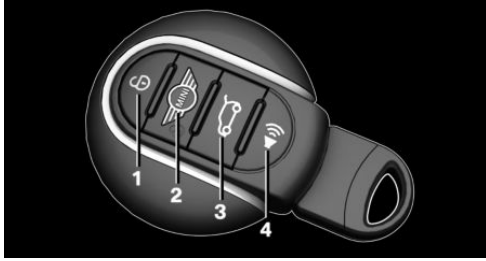


- 1 Unlocking
- 2 Locking
- 3 Unlocking the tailgate
With automatic tailgate operation: open the tailgate
- 4 Panic mode

Unlocking the vehicle

 Press the button on the vehicle key.

Depending on the settings, either only the driver's door or all vehicle access points are unlocked.

If only the driver's door is unlocked, press the button on the vehicle key again to unlock the other vehicle access points.

 Press and hold the button on the vehicle key after unlocking.

The windows and the glass sunroof are opened, as long as the button on the vehicle key is pressed.

Locking the vehicle

 Press the button on the vehicle key.

All vehicle access points are locked.


Buttons for the central locking system

Overview




Buttons for the central locking system.

Locking

 Pressing the button locks the vehicle if the front doors are closed.

Unlocking

 Pressing the button unlocks the vehicle.

Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.

 Press the button on the vehicle key and hold for at least 3 seconds.

To switch off the alarm: press any button.

Comfort Access


Concept

The vehicle can be accessed without operating the vehicle key.

Carrying the vehicle key with you, e.g., in your pants pocket, is sufficient.


The vehicle automatically detects the vehicle key when it is in close proximity or in the car's interior.

Unlocking the vehicle

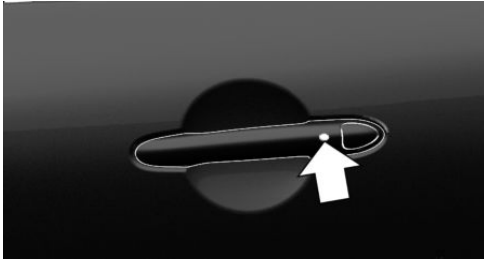

On the driver's or front passenger's door handle, press the button.

Locking the vehicle

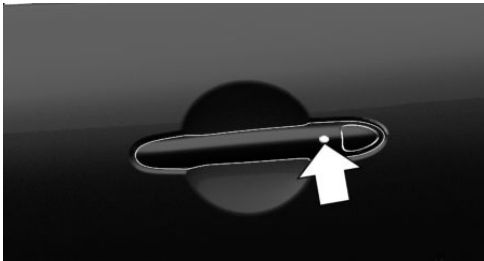

On the driver's or front passenger's door handle, press the button.

Opening and closing the tailgate with no-touch activation

Concept

The tailgate can be opened and closed with no-touch activation using the vehicle key you are carrying.

Performing the foot movement


1. Stand in the middle behind the vehicle at approx. one arm's length away from the rear of the vehicle.
2. Wave a foot under the vehicle in the direction of travel and immediately pull it back.



Tailgate

Without automatic tailgate: unlocking




- Unlock the vehicle and then press the button on the outside of the tailgate.
-  Press and hold the button on the vehicle key for approx. 1 second.

Depending on the setting, the doors may also be unlocked.

With automatic tailgate: Opening




- Unlock the vehicle and press the button on the tailgate.
-  Press and hold the button on the vehicle key for approx. 1 second.

Depending on the setting, the doors may also be unlocked.

Without automatic tailgate: Closing

Closing the tailgate manually.

With automatic tailgate: Closing

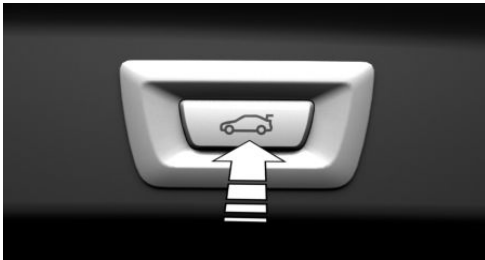

Press the button on the inside of the tailgate.

Displays and control elements

In the vicinity of the steering wheel



- 1 Low beams, fog lights
- 2 High beams, headlight flasher, turn signal
- 3 Instrument cluster
- 4 Wiper system

Indicator/warning lights

Instrument cluster

The indicator/warning lights can light up in a variety of combinations and colors.


Several of the lights are checked for proper functioning and light up temporarily when the engine is started or the ignition is switched on.

Driver's door



- 1 Safety switch
- 2 Power windows
- 3 Exterior mirrors

All around the selector lever

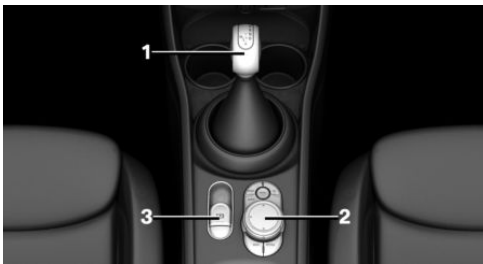

- 1 Selector lever
- 2 Controller with buttons
- 3 Parking brake

Central Information Display (CID)

Concept








The Central Information Display (CID) combines the functions of a multitude of switches. These functions can be operated via the Controller.

Controller

General information

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.


Buttons on the Controller


Button	Function
	Press once: calls up the main menu. Press twice: open recently used menus.
	Opens the Communication menu.
	Opens the Media/Radio menu.
	Opens destination input menu for navigation.
	Opens navigation map.
	Opens the previous display.
	Opens the Options menu.

Voice activation

Using the voice activation system

Activating the voice activation system

1.  Press the button on the steering wheel.
2. Wait for the signal.
3. Say the command.

 This symbol in the instrument cluster indicates that the voice activation system is active.

If no other commands are available, operate the function via the Central Information Display (CID).

Terminating the voice activation system



Press the button on the steering wheel or ›Cancel‹.

Help on the voice activation system

- To have information on the operating principle of the voice activation system read out loud: ›General information on voice control‹.
- To have help for the current menu read out loud: ›Help‹.

Information on Emergency Requests

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.

Instead, use the SOS button close to the interior mirror.

Set-up and use


Seats, mirrors, and steering wheel

Manually adjustable seats



- 1 Forward/backward
- 2 Thigh support
- 3 Height
- 4 Backrest tilt


Electrically adjustable seats

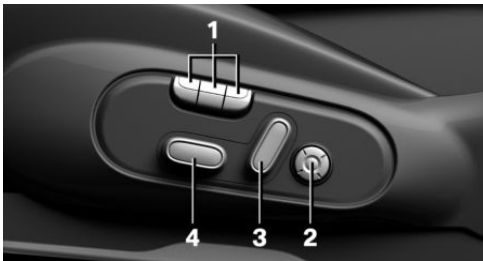

- 1 Memory function
- 2 Lumbar support
- 3 Backrest tilt
- 4 Forward/backward, height, seat tilt


Adjusting the head restraint

Height

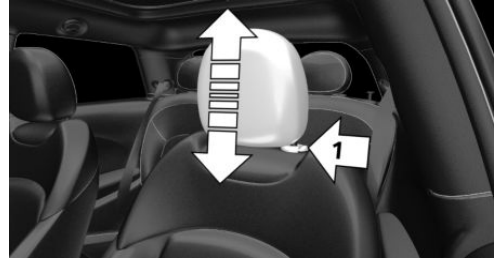

- To raise: push the head restraint up.
- To lower: press the button, arrow 1, and push the head restraint down.

Adjusting the exterior mirrors

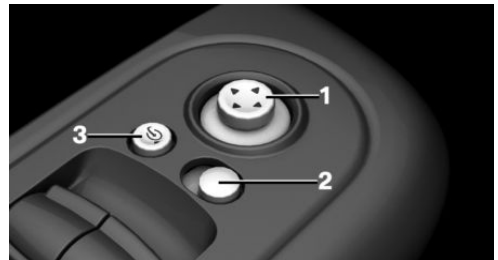

- 1 Adjusting
- 2 Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

Adjusting the steering wheel

In four directions



1. Fold the lever down.
2. Move the steering wheel to the preferred height and angle to suit your seating position.
3. Fold the lever back up.


Memory function

Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- Seat position.
- Exterior mirror position.
- Height of the Head-up Display.

Storing

1. Switch on the ignition.
2. Set the desired position.
3.  Press the button. The LED in the button lights up.
4. Press the desired button 1 or 2 on the seat while the LED is illuminated. The LED goes out.

Calling up settings

The stored position is called up automatically.

Press the desired button 1 or 2.

The procedure stops when a seat adjustment switch or one of the memory buttons is pressed.

Once underway, adjustment of the seat position on the driver's side is disabled after a short while.

Infotainment

Radio

Control elements





- 1 Changing the waveband
- 2 Changing the entertainment source
- 3 Sound output on/off, volume
- 4 Changing the station/track
- 5 Programmable memory buttons

Navigation destination entry

Entering a destination via address

State/province

1.  "Navigation"
2.  "Enter address"
3. "State/Province?"
4. Select the country from the list.

Entering the address

The address can be entered in any order.

Example: entering the address via the town/city

1. "City/Postal code?"
2. Enter the town/city.
The list is narrowed down further with each entry.
3. **OK** Select the symbol.
4. Select a town/city from the list.
5. If necessary, enter the street.
6. Select the street as you would the town/city.
7. If necessary, enter a house number.
8. **OK** Select the symbol.
9. Select a house number or range of house numbers from the list.

Starting destination guidance

"Start guidance"

If only the town/city was entered: destination guidance is started to the town/city center.

Pairing the mobile phone

After the mobile phone is paired once with the vehicle, the mobile phone can be operated using the Central Information Display (CID), the steering wheel buttons and spoken instructions.

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Connect new device"

The vehicle's Bluetooth name is displayed on the Control Display.

5. Select the functions for which the mobile phone is to be used.

6. To perform additional steps on the mobile phone, refer to the mobile phone owner's manual: e.g., search for or connect the Bluetooth device or a new device.

The Bluetooth name of the vehicle appears on the mobile phone display. Select the Bluetooth name of the vehicle.

7. Depending on the mobile device, a control number is displayed or the control number must be entered.
 - Compare the control number displayed on the Control Display with the control number on the display of the device.

Confirm the control number on the device and on the Control Display.

- Enter and confirm the same control number on the device and via the Central Information Display (CID).

The device is connected and displayed in the device list.

The mobile phone is connected and will appear at the top of the list of mobile phones.

Using the phone

Accepting a call

Incoming call can be accepted via the Central Information Display (CID) or the button on the steering wheel.

Via the Central Information Display (CID)

 "Accept"

Via the button on the steering wheel




Press the button.

Via the instrument cluster

Use the OK button on the steering wheel to select: "Accept"

Dialing a number

1. "Communication"
2. "Dial number"
3. Select the numbers individually.
4.  Select the symbol.

Establish the connection via the additional phone:

1. Press the button.



2. "Call via"

Apple CarPlay preparation

Concept


CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and the Central Information Display (CID).

Functional requirements

- Compatible iPhone.
iPhone 5 or later with iOS 7.1 or later.
- Corresponding mobile contract.
- Bluetooth, WiFi, and Siri voice operation are switched on on the iPhone.

Switching on Bluetooth and CarPlay

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Settings"
5. Select the following settings:
 - "Bluetooth®"
 - "Apple CarPlay"

Pairing the iPhone with CarPlay

Pair iPhone via Bluetooth with the vehicle.

Select CarPlay as the function:

 "Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list.

On the road

Driving

Activate/deactivate drive-ready state

Ignition on/off



- On: press the Start/Stop button.
Most of the indicator/warning lights light up for a varied length of time.
- Off: press the Start/Stop button again.
All indicator lights go out.
- Radio-ready state: when the ignition is switched off, press the ON/OFF button on the radio or when the engine is running, press the Start/Stop button.
Some electronic systems/power consumers remain ready for operation.

Activate/deactivate drive-ready state

Activating

1. Close the driver's door.
2. Depress the brake pedal.
3. Press the Start/Stop button.

The drive-ready state is active: electric driving is possible, or the engine can be started.

Deactivating

1. Engage selector lever position P with the vehicle stopped.
2. Press the Start/Stop button.
3. Set the parking brake, if needed.


Auto Start/Stop function

The Auto Start/Stop function helps save fuel. The system switches off the combustion engine when conditions for electric driving have been met. The ignition remains switched on.


READY appears on the tachometer. If necessary, the combustion engine starts automatically.

Parking brake

Setting

-  Pull the switch.
The LED and indicator light light up.

Releasing

-  Steptronic transmission: press the switch while the brake is pressed or selector lever position P is set.
The LED and indicator light go out.
The parking brake is released.

Steptronic transmission

Selector lever positions

Parking position P.

R is reverse.

Neutral N.

Drive mode D.

Engage selector lever position P or R only when the vehicle is stationary.

To prevent the vehicle from creeping after you select a drive mode or reverse, maintain pressure on the brake pedal until you are ready to start.

Selector lever lock

A lock prevents an inadvertent change from selector lever position P to another selector lever position and, depending on the transmission version, inadvertent switching to selector lever position P or R.



To release the lock: with the brake pedal depressed, press the button on the front of the selector lever, see arrow.

Steptronic transmission, Sport and manual mode



Sport program:

Press the selector lever to the left from selector lever position D.

Manual mode:

- To shift down: press the selector lever forward.
- To shift up: pull the selector lever rearwards.

High beams, headlight flasher, turn signal, roadside parking light


High beams, headlight flasher



Push the lever forward or pull it backward.


- High beams on, arrow 1.
The high beams light up when the low beams are switched on.
- High beams off/headlight flasher, arrow 2.

Turn signal

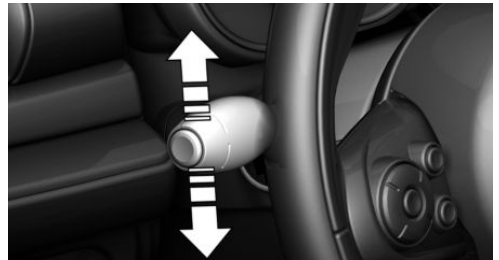

- On: press the lever past the resistance point.
- Off: lightly tap the lever to the resistance point.
- Off: press the lever past the resistance point in the opposite direction.
- Triple turn signal activation: lightly tap the lever up or down.
- Brief signaling: press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

Canada: roadside parking light

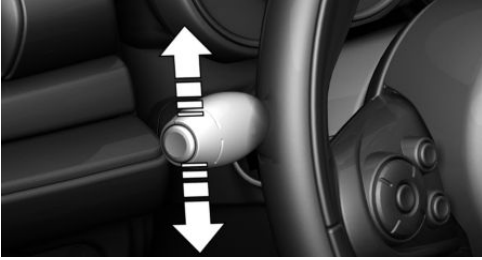







To illuminate the vehicle on one side.

- On: with the ignition switched off, press the lever either up or down past the resistance point for approx. 2 seconds.
- Off: briefly press the lever to the resistance point in the opposite direction.

Lights and lighting

Light functions

Symbol	Function
	Front fog lights.
	Automatic headlight control.
	Lights off. Daytime running lights.
	Parking lights.
	Low beams.
	Instrument lighting.

Wiper system

Switching the wipers on/off and brief wipe

Switching on



Press the lever up until the desired position is reached.

- Resting position of the wipers: position 0.
- Rain sensor: position 1.
- Normal wiper speed: position 2.
- Fast wiper speed: position 3.

Brief wipe and switching off



Press the lever down.

- Switching off: press the lever down until it reaches its standard position.
- Brief wipe: press the lever down from the standard position.

Rain sensor

Activating/deactivating



To activate: press the lever up once from its standard position, arrow 1.

To deactivate: press the lever back into the standard position.

Set interval or sensitivity of the rain sensor



Turn the thumbwheel on the wiper lever.

Cleaning the windshield



Pull the lever.

Canada: wiper system

Switching the wipers on/off and brief wipe

Switching on



Tap up the lever or press it past the resistance point.

- Normal wiper speed: tap up once.
- Fast wiper speed: tap up twice or tap once beyond the resistance point.

Brief wipe and switching off



Press the lever down.

- To switch off fast wipe: press down twice.
- To switch off normal wipe: press down once.
- Brief wipe: press down once.

Rain sensor

Activating/deactivating



Press the button on the wiper lever.

Set interval or sensitivity of the rain sensor



Turn the thumbwheel on the wiper lever.







Cleaning the windshield







Pull the lever.








Climate control

Air conditioner

Button	Function
	Temperature.
	Air conditioning.
	Recirculated-air mode.
	Controls the air flow, manual.
	Controls the air distribution manually.
	Windshield defroster.

Automatic climate control

Button	Function
	Temperature.
	Air conditioning.
	Maximum cooling.
	AUTO program.

Button	Function
	Recirculated-air mode.
	Automatic recirculated-air control AUC/recirculated-air mode.
	Controls the air flow, manual.
	Air distribution, manual.
	Defrosts and defogs the windows.
	Windshield defroster.
	Rear window defroster.

Refueling

Charging the vehicle

Charging socket flap



The charging socket flap is located on the left side of the vehicle.

Always keep charging socket clean and unobstructed.

Keep the charging socket flap closed when the charging socket is not used.

Connecting the charging cable

To connect, engage selector lever position P, deactivate drive-ready state, and unlock the vehicle. Set the parking brake, if needed.

1. To open the charging socket flap, press on the rear edge, arrow. The charging socket flap opens.



2. Remove the cover of the charging cable plug, if needed.
3. Connect Level 1 charging cable to the household socket or Level 2 charging cable to the port on the charging station.
4. Insert the appropriate charging cable plug, and push it in until it engages.

Removing

When the vehicle is locked, the charging cable is locked. Unlock the vehicle before removing the cable.

If necessary, clean the area between the charging socket flap and charging socket, for instance from snow, before removing it.

1. Unlock the vehicle with the vehicle key if it is locked.
Charging cable is unlocked.
2. Press the release button on the handle, arrow 1, and grasp the charging cable at the gripping areas.

Charging process is interrupted.



3. Remove the charging cable from the charging socket, arrow 2.
4. Put the charging socket lid back on.
5. Press on the charging socket flap until it engages.
6. Attach cover of the charging cable plug, if needed.
7. Disconnect Level 1 charging cable from the household socket or Level 2 charging cable from the port on the charging station as applicable.
8. Stow the charging cable.

At a charging station, insert the permanently installed charging cable in the place provided for it.

Refueling

Venting the tank

Excess pressure may build up in the fuel tank as a result of gasoline vapors; this pressure is dissipated before the fuel cap is opened.

The switch is located in the storage compartment of the driver's door.

1. Switch off drive-ready state.



2. Pull the switch to start the pressure equalization.

The tank venting status is displayed in the instrument cluster. In rare cases, tank venting can last several minutes.

When tank venting has finished, a message is displayed in the instrument cluster. The fuel filler flap is released for opening.


3. Open the fuel filler flap.

If it is not possible to open the fuel filler flap after tank venting, press the button again.

If it is still not possible to open the fuel filler flap even after pressing the button again, unlock the fuel filler flap manually.

Fuel cap

1. To open the fuel filler flap, press on the rear edge, arrow. The fuel filler flap opens.

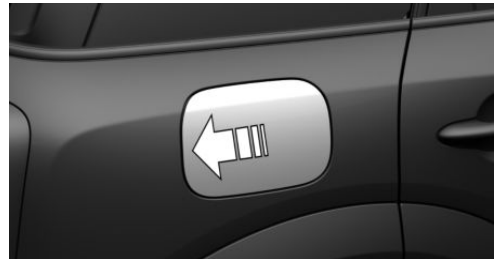

2. Turn the fuel cap counterclockwise.
3. Place the fuel cap in the bracket attached to the fuel filler flap.

Gasoline

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Refuel only with unleaded gasoline without metallic additives.

Information on the recommended fuel grade can be found in the Owner's Manual.

Wheels and tires

Tire inflation pressure specifications



The tire inflation pressure values can be found on the sign on the door pillar.

Checking the tire inflation pressure

Regularly check the tire inflation pressure and correct it as needed:

- At least twice a month.
- Before embarking on an extended trip.

After correcting the tire inflation pressure

Reinitialize the Flat Tire Monitor.

Reset the Tire Pressure Monitor.



Electronic oil measurement

Requirements

A current measured value is available after approx. 30 minutes of driving. During a shorter trip, the status of the last, sufficiently long trip is displayed.

Displaying the engine oil level

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Engine oil level"


The engine oil level is displayed.

Adding engine oil

General information

Safely park the vehicle and switch off the ignition and drive-ready state before adding engine oil.

Adding

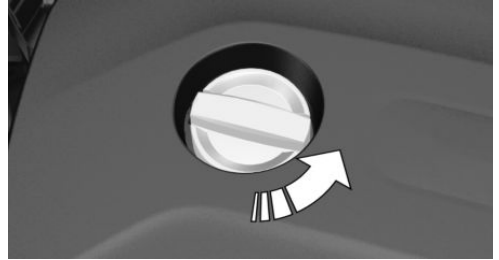

Only add engine oil when the message is displayed in the instrument cluster.

Observe the quantity to be added in the message.

Take care not to add too much engine oil.

Observe recommended engine oil types.

Providing assistance

Hazard warning flashers




The button is located above the Control Display.

Breakdown assistance

MINI Roadside Assistance

This service can be reached around the clock in many countries.

1.  "MINI Connected"
2. "MINI Assist"
3. "MINI Roadside Assistance"

The contact to the MINI Roadside Assistance is established.

A telephone number is displayed, if needed. Select to dial the telephone number on a connected mobile phone.



AT A GLANCE

Cockpit	40
Central Information Display (CID)	44
Voice activation system	51
General settings	55
Owner's Manual media	67
MINI eDRIVE	69
Safety of the hybrid system	72


Cockpit

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for

instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

In the vicinity of the steering wheel

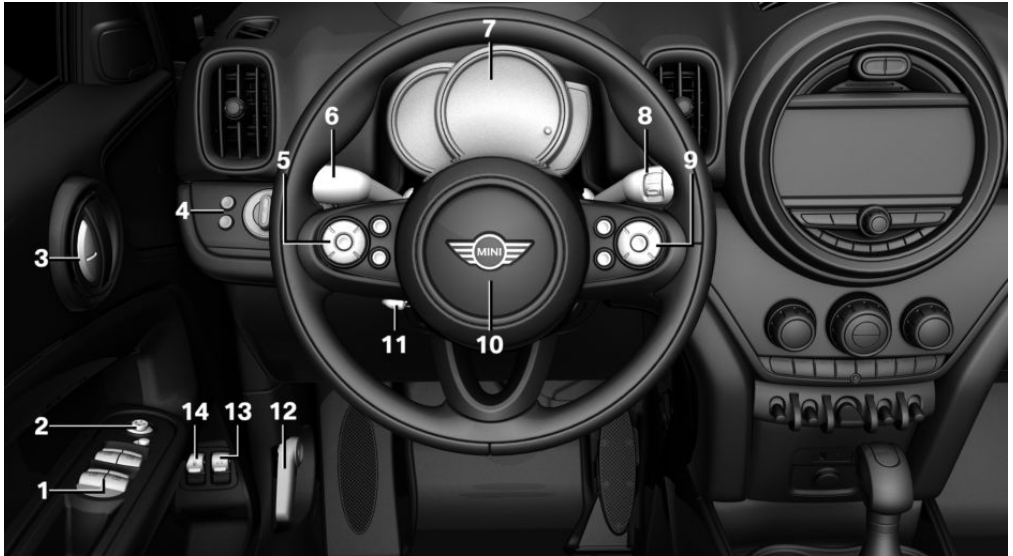

- 1 Power windows 95
- 2 Exterior mirror operation 109
- 3 Buttons of the central locking system 81
- 4 Lights



Front fog lights 166



Light switch 163































Lights off
Daytime running lights 165



Parking lights 163



Low beams 163


- | | | | |
|---|--|---|--|
|  | Automatic headlight control 164 |  | Canada: roadside parking light 164 |
| | Cornering light 165 |  | Onboard Computer 153 |
| | High-beam Assistant 165 | | |
|  | Instrument lighting 167 | | |
| 5 | Steering wheel buttons, left | 7 | Instrument cluster 140 |
|  | Camera-based cruise control on/off 193 | 8 | Steering column stalk, right |
|  | Cruise control on/off 200 |  | Wipers 128 |
|  | Cruise control: to store the speed |  | Wiper on Canadian models 131 |
|  | Pausing, continuing cruise control |  | Rain sensor 129 |
|  | Cruise control: increase speed |  | Rain sensor on Canadian models 132 |
|  | Cruise control: reduce speed |  | Cleaning windows 129 |
|  | Camera-based cruise control: reduce distance |  | Rear window wiper in Canadian models 130 |
|  | Camera-based cruise control: increase distance |  | Rear window wiper 130 |
| 6 | Steering column stalk, left |  | Clean the rear window 130 |
|  | Turn signal 127 | 9 | Steering wheel buttons, right |
|  | High beams, headlight flasher 127 |  | Voice activation 51 |
|  | High-beam Assistant 165 |  | Telephone |
| | |  | Confirm the selection 153 |
| | |  | Move selection up 153 |
| | |  | Move selection down 153 |



Increase volume



Reduce volume



Horn, entire surface

11 Adjusting the steering wheel 111


12 Unlocking the hood 286

13 Operate the tailgate 86

14  Tank vent 263

In the vicinity of the center console



1  Hazard warning system 306



Intelligent Safety 180

2 Control Display 44

3 Radio/Multimedia

4 Glove compartment 230

5 Climate control 213

6  PDC Park Distance Control 202

Rearview camera 205

Parking assistant 208

eDRIVE 122



Starting/stopping the engine, switching drive-ready state modes and the ignition on/off 118



DSC Dynamic Stability Control
189

7 Steptronic transmission selector
lever 136



MINI Driving Modes
switch 191

8 Controller with buttons 46


9 Parking brake 125

In the vicinity of the roofliner



1  Emergency Request,
SOS 307

4  Ambient light 167

2  Indicator light, front-seat pas-
senger airbag 172

5  Panoramic glass sunroof 97

3  Reading lights 167

6  Interior lights 167

Central Information Display (CID)

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Concept

The Central Information Display (CID) combines the functions of a multitude of switches. These functions can be operated via the Controller.

Safety information



Warning

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of accident. Only use the systems or devices when the traffic situation allows. As warranted, stop and use the systems and devices while the vehicle is stationary.

Input and display

Letters and numbers

Depending on the menu, you can switch between entering upper and lower case letters, numbers and characters:

Symbol	Function
abc or ABC	Change between capital and lower-case letters.
	Insert blank space.
	Use voice activation.
OK	Confirm entry.

Without navigation system

@^A A^a a[@] Select the symbol.

Entry comparison

When entering names and addresses, the choice is narrowed down with every letter entered and letters may be added automatically.

Entries are continuously compared with data stored in the vehicle.

- Only those letters are offered during entry for which data is available.
- Destination search: place names can be entered in all languages that are available on the Control Display.

Activating/deactivating the functions

Several menu items are preceded by a checkbox. The checkbox indicates whether the function is activated or deactivated. Selecting the menu item activates or deactivates the function.



- Function is activated.
- Function is deactivated.

Status information











General information

The status field can be found in the upper area of the Control Display. Status information is displayed in the form of symbols.




Radio

Symbol	Meaning
	HD Radio station is being received.
	Satellite radio is switched on.






Telephone

Symbol	Meaning
	Incoming or outgoing call.
	Missed call.
	Signal strength of cellular network.
	Symbol flashes: network search.
	Cellular network is not available.
	Roaming is active.
	SMS text message received.
	Message received.
	Reminder.
	Sending not possible.

Entertainment

Symbol	Meaning
	Bluetooth audio.
	USB audio interface.
	Mobile phone audio interface.

Other symbols

Symbol	Meaning
	Check Control message.
	The sound output has been switched off.
	Encrypted connection not active.
	Request for the current vehicle position.
	Checking the current vehicle position.


Split screen

General information

Additional information can be displayed on the right side of the split screen, for instance information from the Onboard Computer.

In the divided screen view, the so-called split screen, this information remains visible even when switching to another menu.

Switching the split screen on/off

1.  Press the button.
2. "Split screen"

Selecting the display

The display can be selected in menus which support the split screen function.

1. Move the Controller to the right until the split screen is selected.
2. Press the Controller.
3. Select the desired setting.

Specifying the number of displays

It is possible to specify the number of displays.

1. Move the Controller to the right until the split screen is selected.
2. Press the Controller.
3. "Personalize menu"
4. Select the desired setting.
5. Move the Controller to the left.

Control elements

Overview



- 1 Control Display with touchscreen
- 2 Controller with buttons

Control Display

General information

To clean the Control Display, follow the care instructions, refer to page 317.

In the case of very high temperatures on the Control Display, for instance due to intense solar radiation, the brightness may be reduced down to complete deactivation. Once the temperature is reduced, for instance through shade or air conditioning, the normal functions are restored.

Safety information

⚠ NOTICE

Objects in the area in the front of the Control Display can shift and damage the Control Display. There is a risk of damage to property. Do not place objects in the area in front of the Control Display.

Switching on/off automatically

The Control Display is switched on automatically after unlocking.

In certain situations, the Control Display is switched off automatically, for instance if no operation is performed on the vehicle for several minutes.

Switching on/off manually

The Control Display can also be switched off manually.

1.  Press the button.

2. "Turn off control display"

Press the Controller or any button on the Controller to switch it back on again.

Controller with navigation system

General information

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.

Operation

- Turn to switch between menu items, for example.





- Press to select a menu item, for example.









- Tilt in four directions to switch between displays, for example.




Buttons on the Controller

Button	Function
	Press once: calls up the main menu.
	Press twice: open recently used menus.

Button	Function
	Opens the Communication menu.
	Opens the Media/Radio menu.
	Opens destination input menu for navigation.
	Opens navigation map.
	Opens the previous display.
	Opens the Options menu.

Operating via the Controller

Opening the main menu

-  Press the button.



The main menu is displayed.

All Central Information Display (CID) functions can be called up via the main menu.

Selecting menu items

Highlighted menu items can be selected.

1. Turn the Controller until the desired menu item is highlighted.




2. Press the Controller.

Changing between displays

After a menu item is selected, for instance "System settings", a new display appears.

- Move the Controller to the left.
The current display closes and the previous display is shown.

-  Press the button.
The previous display re-opens.

- Move the Controller to the right.
The new display opens.


An arrow indicates that additional displays can be opened.

Opening recently used menus

The recently used menus can be displayed.

-  Press the button twice.

Opening the Options menu

-  Press the button.


The "Options" menu is displayed.

The menu consists of various areas:

- Screen settings, for instance "Split screen".
- Control options for the selected main menu, for instance for "Media/Radio".
- If applicable, further operating options for the selected menu, for instance "Save station".

Changing settings

Settings, such as brightness, can be entered. Via the Central Information Display (CID):



1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Control display"
5. "Brightness at night"
6. Turn the Controller until the desired setting is displayed.
7. Press the Controller.

Entering letters and numbers

Input

1. Turn the Controller: select letters or numbers.
2. **OK** : confirm entry.

Deleting

Symbol	Function
	Press the Controller: delete letters or number.
 or ABC	Hold the Controller down: delete all letters or numbers.

Using alphabetical lists

For alphabetical lists with more than 30 entries, the letters for which there is an entry are displayed at the left edge.

1. Turn the Controller to the left or right quickly.
All letters for which there are entries are displayed on the left edge.
2. Select the first letter of the desired entry.
The first entry of the selected letter is displayed.


Operation via touchscreen

General information

The Control Display is equipped with a touchscreen.

Touch the screen with your fingers. Do not use any objects.

Opening the main menu

 Tap on the symbol.



The main menu is displayed.

All Central Information Display (CID) functions can be called up via the main menu.

Selecting menu items

Tap the desired menu item.



Changing between displays



After a menu item is selected, a new display opens.

An arrow indicates that additional displays can be opened.

- Swipe to the left.
- Tap arrow.

The new display opens.




Opening recently used menus

1.  Tap on the symbol.
2.  Tap on the symbol.

Changing settings


Settings such as brightness can be changed via the touchscreen.

Via the Central Information Display (CID):



1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Control display"
5. "Brightness at night"
6. To perform the desired setting:
 - Slide in the selected field to the right or left, until the desired setting is displayed.
 -  ,  Tap on the symbol.

Entering letters and numbers

Input

1.  Tap the symbol on the touchscreen. A keyboard appears in the Control Display.
2. Enter letters and numbers.

Deleting

Symbol	Function
	Tapping the symbol: deletes the letter or number.
	Tapping and holding the symbol all letters: deletes all letters or numbers.

Operating navigation map

The navigation map can be moved using the touchscreen.

Function	Operation
Enlarge/shrink map.	Drag in or out with the fingers.


Programmable memory buttons

General information


The Central Information Display (CID) functions can be stored on the programmable memory buttons and called up directly, for instance radio stations, navigation destinations, phone numbers and menu entries.

Settings are stored for the driver profile currently used.

Storing a function

1. Select the function via the Central Information Display (CID).
2.  Press and hold the desired button, until a signal sounds.

Executing a function

 Press the button. The function will work immediately. This means, for instance that the number is dialed when a phone number is selected.

Displaying the key assignment

Touch buttons with finger. Do not wear gloves or use objects.

The button assignment is displayed at the top edge of screen.

Deleting the button assignments

1. Press buttons 1 and 6 simultaneously for approx. 5 seconds.
2. "OK"

Voice activation system

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Concept

Most functions displayed on the Control Display can be operated by voice commands via the voice activation system. The system supports you with announcements during input.

General information

- Functions that can only be used when the vehicle is stationary can only be operated via the voice activation system to a limited extent.
- The system uses a special microphone on the driver's side.
- >...< in the Owner's Manual denotes verbal instructions to use with the voice activation system.

Functional requirements


- A language must be set via the Control Display that is supported by the voice


activation system. To set the language, refer to page 55.

- Always say commands in the language of the voice activation system.

Using the voice activation system

Activating the voice activation system

1.  Press the button on the steering wheel.
2. Wait for the signal.
3. Say the command.

 This symbol in the instrument cluster indicates that the voice activation system is active.

No other commands may be available. In this case, operate the function via the Central Information Display (CID).

Terminating the voice activation system

 Press the button on the steering wheel or >Cancel<.

Possible commands

General information


Most menu items on the Control Display can be spoken as commands.

Commands from other menus can also be spoken.

You can also select list entries such as phone list entries via voice activation. Read these list entries out loud exactly as they are shown in the respective list.

Displaying possible commands

The following is displayed in the top area of the Control Display:


- Some possible commands for the current menu.
- Some possible commands from other menus.
- Status of the voice recognition.
-  Encrypted connection is not available.

Help on the voice activation system

- To have information on the operating principle of the voice activation system read out loud: >General information on voice control<.
- To have help for the current menu read out loud: >Help<.

Example: opening the tone settings

The commands of the menu items are spoken just as they are selected via the Controller.


1. Switch on the Entertainment sound output, if needed.
2.  Press the button on the steering wheel.
3. >Media and radio<
4. >Tone<

Adjusting

Setting the language

The language to be used for voice activation and system announcements can be set.

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. If necessary, "Language"
4. "Language:"
5. Select the desired language.

Setting the voice dialog

You can set the system to use standard dialog or a short version.

The short version of the voice dialog plays back short messages in abbreviated form.


Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Language"
4. "Speech mode:"
5. Select the desired setting.

Speaking during voice output

It is possible to answer during inquiries of the voice activation system. The function can be deactivated if inquiries are often undesirably interrupted, for instance due to background noise or talking.


Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Language"
4. "Speaking during voice output"

Activating voice recognition via the server

The voice recognition feature via the server provides a dictation function and a natural method of entering destinations while improving the quality of voice recognition. To use the functions, data is transmitted to a service provider via an encrypted connection and stored locally there.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Language"
4. "Server speech recognition"

Adjusting the volume

Turn the volume button during the spoken instructions until the desired volume is set.

- The volume remains constant even if the volume of other audio sources is changed.
- The volume is stored for the profile currently used.

Information on Emergency Requests

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.

Instead, use the SOS button, refer to page 307, close to the interior mirror.



System limits

- Certain noises can be detected and may lead to problems. Keep the doors, windows, and glass sunroof closed.
- Noises from the front passenger or the rear seat bench can impair the system. Avoid making other noise in the vehicle while speaking.
- Major language dialects can cause problems with the voice recognition feature. Speak loud and clear.

Using the voice activation system of the smartphone

A smartphone connected to the vehicle can be used via voice activation.

Activate voice command response on the smartphone for this purpose.

1.  Press and hold the button on the steering wheel for approx. 3 seconds. Voice command response is activated on the smartphone.
2.  Release the button. If activation is successful, a confirmation appears on the Control Display.

If it was not possible to activate voice command response, the list of Bluetooth devices appears on the Control Display.

Amazon Alexa Car Integration

Concept

Alexa is a digital assistant by Amazon. With Amazon Alexa Car Integration, Alexa can be used in the vehicle.

General information

Some of the Alexa functions are limited in the vehicle to prevent any impairment of safety while driving.

Functional requirement

- Amazon Alexa Car Integration purchased via MINI Connected Store.
- The ConnectedDrive account in the vehicle is the same as in the MINI Connected app.
- The vehicle is connected in the MINI Connected app.
- Amazon account and MINI account are connected in the MINI Connected app.
- Bluetooth connection or USB connection between vehicle and mobile device is active.


Activation in the MINI Connected app

The Amazon Alexa Car Integration is activated in the MINI Connected app.

Follow the instructions in the app.

Activation in the vehicle

An authorization for the use of Amazon Alexa Car Integration is required every time before starting a trip.

1. Authorizing Amazon Alexa Car Integration:
 - Pair mobile device with the vehicle via Bluetooth.
 - Select driver profile, refer to page 89.
2.  Press the button on the steering wheel.
3. Wait for the signal.
4. Say activation word ›Alexa‹ and desired command.

Information about the active function is displayed on the Control Display.

Malfunction

In case of a malfunction, switch off the vehicle and start the engine again.

General settings


Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Language

Setting the language

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. If necessary, "Language"
4. "Language:"
5. Select the desired setting.

The setting is stored for the driver profile currently used.


Setting the voice dialog

For voice dialog for the voice activation system, refer to page 52.

Time

Setting the time zone

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"

3. "Date and time"
4. "Time zone:"
5. Select the desired setting.

The setting is stored for the driver profile currently used.


Setting the time

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Date and time"
4. "Time:"
5. Turn the Controller until the desired hours are displayed.
6. Press the Controller.
7. Turn the Controller until the desired minutes are displayed.
8. Press the Controller.

Setting the time format

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. "Date and time"
4. "Time format:"
5. Select the desired setting.

The setting is stored for the driver profile currently used.

Date


Setting the date

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Date and time"
4. "Date:"
5. Turn the Controller until the desired day is displayed.
6. Press the Controller.
7. Make the settings for the month and year.

Setting the date format

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. "Date and time"
4. "Date format:"
5. Select the desired setting.

The setting is stored for the driver profile currently used.

Setting the units of measurement

You can set the units of measurement for some values, for example, consumption, distances and temperature.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Units"

4. Select the desired menu item.
5. Select the desired setting.

The setting is stored for the driver profile currently used.


Activating/deactivating the display of the current vehicle position

Concept

If vehicle tracking has been activated, the current vehicle position can be displayed in the MINI Connected app.

Activating/deactivating


Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Vehicle tracking"
4. "Vehicle tracking"
5. Select the desired setting.

Activating/deactivating popup windows

For some functions, popup windows are displayed automatically on the Control Display. Some of these popup windows can be activated or deactivated.

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. "Pop-ups"
4. Select the desired setting.

The setting is stored for the driver profile currently used.

Control Display

Brightness

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Control display"
5. "Brightness at night"
6. Turn the Controller until the desired brightness is set.
7. Press the Controller.


The setting is stored for the driver profile currently used.

Depending on the light conditions, the brightness settings may not be clearly visible.

Screensaver

If no entries are made via the Central Information Display (CID), a screensaver can be displayed after an adjustable time.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Control display"
5. "Screensaver"
6. Select the desired setting.

The setting is stored for the driver profile currently used.

Messages

Concept

The menu centrally displays all messages arriving in the vehicle in list form.

General information


The following messages can be displayed:

- Traffic messages.
- Communication messages, for example e-mails, SMS text messages or reminders.
- Check Control messages.
- Service requirements messages.
- Messages from the vehicle manufacturer.

Messages are additionally displayed in the status field.

Retrieving messages

Via the Central Information Display (CID):

1.  "Notifications"
2. Select the desired message.


The respective menu is opened, where the message is displayed.


Deleting messages

All messages, except Check Control messages or messages from the vehicle manufacturer, can be deleted from the list.

Check Control messages or messages from the vehicle manufacturer are displayed as long as they are relevant.

Via the Central Information Display (CID):

1.  "Notifications"
2. Select the desired message.


3.  Press the button.
4. "Delete this notification" or "Delete all notifications"

Adjusting

The following settings can be adjusted:

- Select the applications, from which messages will be permitted.
- Sort the messages according to date or priority.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Notifications"
4. Select the desired setting.

Data protection

Data transfer

Concept

The vehicle offers various functions which require data to be transferred to MINI or a service provider. The data transfer can be deactivated for some functions.

General information


With data transfer deactivated, the respective function cannot be used.

Only make these settings while stationary.

Activating/deactivating

Follow the instructions on the Control Display.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"

3. "Data privacy"
4. Select the desired setting.

Deleting personal data in the vehicle

Concept

Depending on the usage, the vehicle stores personal data, such as stored radio stations. This personal data can be permanently deleted via the Central Information Display (CID).

General information

Depending on the vehicle equipment, the following data is deleted:

- Driver profile settings.
- Stored radio stations.
- Stored programmable memory buttons.
- Travel and Onboard Computer information.
- Music hard disk.
- Navigation, for instance stored destinations.
- Phone book.
- Office data, for instance voice notes.
- Login accounts.

Altogether, the deletion of the data can take up to 15 minutes.


Functional requirement

Data can only be deleted while stationary.

Deleting data

Note and follow the instructions on the Control Display.

Via the Central Information Display (CID):

1. Switch on the ignition.
2.  "My MINI"

3. "System settings"
4. "Data privacy"
5. "Delete personal data"
6. "Delete personal data"
7. "OK"
8. Exit and lock the vehicle.

The deletion process takes 15 minutes to complete.

If not all data was deleted, repeat the deletion.

Canceling deletion

Start the engine to cancel deletion of the data.

Connections

Concept

Various connection types are available for using mobile devices in the vehicle. The connection type to select depends on the mobile device and the desired function.

General information

The following overview shows possible functions and the suitable connection types for them. The scope of functions depends on the mobile device.

Function	Connection type
Making calls via the hands-free system.	Bluetooth.
Using phone functions via the Central Information Display (CID).	
Using the smartphone Office functions.	
Playing music from the smartphone or the audio player.	Bluetooth or USB.
Using compatible apps via the Central Information Display (CID).	Bluetooth or USB.
USB storage device:	USB.
Exporting and importing driver profiles.	
Performing software updates.	
Playing music.	
Playing videos from the smartphone or the USB storage device.	USB.
Using Apple CarPlay apps via the Central Information Display (CID) and voice operation.	Bluetooth and WiFi.

The following connection types require one-time pairing with the vehicle:

- Bluetooth.
- Apple CarPlay

Paired devices are automatically recognized later on and connected to the vehicle.

Safety information

Warning

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of accident. Only use the systems or devices when the traffic situation allows. As warranted, stop and use the systems and devices while the vehicle is stationary.

Compatible devices


General information

Malfunctions may occur with devices not listed or deviating software versions.

Displaying the vehicle identification number and software part number

When looking for compatible devices, you may have to state the vehicle identification number and the software part number. These numbers can be displayed in the vehicle.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Settings"
5. "Bluetooth® info"
6. "System information"

A software update, refer to page 65, can be performed, if needed.

Bluetooth connection


Functional requirements

- Compatible device, refer to page 60, with Bluetooth interface.

- The vehicle key is in the vehicle.
- The device is ready for operation.
- Bluetooth is activated on the device and in the vehicle, refer to page 60.
- Bluetooth presets, such as visibility, may be required on the device; refer to the owner's manual of the device.

Switching on Bluetooth


Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Settings"
5. "Bluetooth®"

Activating/deactivating telephone functions

To use all supported functions of a mobile phone, the following functions must be activated prior to pairing.

Via the Central Information Display (CID):






1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Settings"
5. Select the desired setting:
 - "Office"

Activate function to transmit short messages, e-mails, calendars, tasks, notes, and reminders to the vehicle. Costs can be incurred by transmitting all data to the vehicle.
 - "Contact images"

Activate function to show the contact pictures.
6. Move the Controller to the left.

Pairing the mobile device with the vehicle

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Connect new device"
5. Select the functions for which the device will be used:
 -  "Telephone"
 -  "Bluetooth® audio"
 -  "Apps"
 -  "Apple CarPlay"

The vehicle's Bluetooth name is displayed on the Control Display.

6. On the mobile device, search for Bluetooth devices in the vicinity.

The Bluetooth name of the vehicle appears on the mobile device display.

Select the Bluetooth name of the vehicle.

7. Depending on the mobile device, a control number is displayed or the control number must be entered.
 - Compare the control number displayed on the Control Display with the control number on the display of the device.

Confirm the control number on the device and on the Control Display.

- Enter and confirm the same control number on the device and via the Central Information Display (CID).

The device is connected and displayed in the device list.

If connection was not successful: Frequently Asked Questions, refer to page 61.

Frequently Asked Questions

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help:

Why could the mobile phone not be paired or connected?

- There are too many Bluetooth devices connected to the mobile phone or vehicle.

In the vehicle, delete Bluetooth connections with other devices.

Delete all known Bluetooth connections from the device list on the mobile phone and start a new device search.

- The mobile phone is in power-save mode or has only a limited remaining battery life.

Charge the mobile phone.

Why does the mobile phone no longer react?

- The applications on the mobile phone do not function anymore.

Switch the mobile phone off and on again.

- Possibly too high or too low ambient temperatures for mobile phone operation.

Do not subject the mobile phone to extreme ambient temperatures.

Why can phone functions not be used via the Central Information Display (CID)?

- The mobile phone may not be properly configured, for instance as Bluetooth audio device.

Connect the mobile phone with the telephone or additional phone function.

Why are no or not all phone book entries displayed or why are they incomplete?

- Transmission of the phone book entries is not yet complete.
- It is possible that only the phone book entries of the mobile phone or the SIM card are transmitted.
- It may not be possible to display phone book entries with special characters.
- It may not be possible to transmit contacts from social networks.
- The number of phone book entries to be stored is too high.
- Data volume of the contact too large, for instance due to stored information such as notes.

Reduce the data volume of the contact.

- A mobile phone is only connected as an audio source.

Reconfigure the mobile phone and connect it with the telephone or additional phone function.

How can the phone connection quality be improved?

- The strength of the Bluetooth signal on the mobile phone can be adjusted, depending on the mobile phone.
- Insert the mobile phone into the wireless charging tray.
- Adjust the volume of the microphone and loudspeakers separately.

If all points in this list have been checked and the required function is still not available, contact the hotline, a dealer's service center or another qualified service center or repair shop.

USB connection

General information

Mobile devices with a USB port are connected to the USB interface.

- Mobile phones.

- Audio devices with USB port, for instance MP3 players.

- USB storage devices.

Common file systems are supported. FAT32 and exFAT are the recommended formats.

A connected USB storage device will be supplied with charge current via the USB interface if the device supports this. Follow the maximum charge current of the USB interface.

Vehicles: the following uses are possible on USB interfaces with data transfer:

- Exporting and importing driver profiles, refer to page 89.
- Playing music files via USB audio.
- Playing videos via USB video.
- Loading of software updates, refer to page 65.

Follow the following when connecting:

- Do not use force when plugging the connector into the USB interface.
- Use a flexible adapter cable.
- Protect the USB storage device against mechanical damage.
- Due to the large number of USB storage devices available on the market, it cannot be guaranteed that every device is operable on the vehicle.
- Do not expose USB storage devices to extreme environmental conditions, such as very high temperatures; refer to the owner's manual of the device.
- Due to the many different compression techniques, proper playback of the media stored on the USB storage device cannot be guaranteed in all cases.
- To ensure proper transmission of the stored data, do not charge a USB storage device via the onboard socket, when it is connected to the USB interface.

- Depending on how the USB storage device is being used, settings may be required on the USB storage device, refer to the owner's manual of the device.

Not compatible USB media:

- USB hard drives.
- USB hubs.
- USB memory card readers with multiple slots.
- HFS-formatted USB storage devices.
- Devices such as fans or lamps.

Functional requirement

Compatible device, refer to page 60, with USB interface.

Connecting the device

Connect the USB storage device using a suitable adapter cable to a USB interface, refer to page 228.

The USB storage device is connected to the vehicle and displayed in the device list.

Apple CarPlay preparation

Concept

CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and the Central Information Display (CID).

Functional requirements

- Compatible iPhone, refer to page 60.
iPhone 5 or later with iOS 7.1 or later.
- Corresponding mobile contract.
- Bluetooth, WiFi, and Siri voice operation are switched on on the iPhone.
- Booking the MINI Connected service: Apple CarPlay preparation.

Switching on Bluetooth and CarPlay

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Settings"
5. Select the following settings:
 - "Bluetooth®"
 - "Apple CarPlay"

Pairing the iPhone with CarPlay

Pairing an iPhone with the vehicle, refer to page 61, via Bluetooth

Select CarPlay as the function:

 "Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list, refer to page 64.

Operation

For more information, refer to the Integrated Owner's Manual or the Owner's Manual for Navigation, Entertainment, Communication.

Frequently Asked Questions

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help:

- The iPhone has already been paired with Apple CarPlay. When a new connection is established, CarPlay can no longer be selected.
 - Delete the iPhone concerned from the device list.

- On the iPhone, delete the vehicle concerned from the list of stored vehicles under Bluetooth and under WiFi.
- Pair the iPhone as a new device.

If the steps listed have been carried out and the required function is still not available: contact the hotline, a dealer's service center or another qualified service center or repair shop.

Managing mobile devices


General information

- After one-time pairing, the devices are automatically recognized and reconnected when the ignition is switched on.
- The data stored on the SIM card or in the mobile phone is transferred to the vehicle after recognition.
- For some devices, certain settings may be necessary, for instance authorization, see owner's manual of the device.






Displaying the device list

All devices paired and/or connected with the vehicle are displayed in the device list.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"


A symbol indicates, for which function a device is used.

Symbol	Function
	"Telephone"
	"Additional telephone"
	"Bluetooth® audio"
	"Apps"
	"Apple CarPlay"

Configuring the device

Functions can be activated or deactivated for paired and connected devices.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. Select the desired device.
5. Select the desired setting.


If a function is assigned to a device, the function will be deactivated where appropriate for a device that is already connected and the device will be disconnected.

Disconnecting the device

The device's connection to the vehicle is disconnected.

The device remains paired and can be connected again, refer to page 64.


Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. Select device.
5. "Disconnect device"

Connecting the device

A disconnected device can be reconnected.

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. Select device.
5. "Connect device"

The functions that were assigned to the device before disconnecting are assigned to the device when it is reconnected. The func-

tions may be deactivated on a device already connected.

Deleting the device

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. Select device.
5. "Delete device"

The device is disconnected and removed from the device list.

Swapping the telephone and additional phone

If two mobile phones are connected to the vehicle, the functions of the phone and additional phone can be switched.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Mobile devices"
4. "Settings"
5. "Swap telephone/additional tel."

Software update

General information


The vehicle supports a large number of mobile devices, for example mobile phones and MP3 players. Software updates are available for many of the supported devices. The vehicle is kept up-to-date via regular vehicle software updates.

Contact a dealer's service center or another qualified service center or repair shop for information on available software updates.

Displaying the version of the installed software

The software version installed in the vehicle is displayed.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Software update"
4. "Show current version"

If an update has been carried out before, select the desired version to display additional information.

Updating software via USB

The software may only be updated when the vehicle is stationary.

Via the Central Information Display (CID):


1. Store the file for the software update in the main directory of a USB flash drive.
2. Connect the USB data storage to a USB interface.
3.  "My MINI"
4. "System settings"
5. "Software update"
6. "Update software"
7. "USB"
8. "Install software"
9. "OK"
10. Wait for the update to complete.
11. Confirm system restart.

Restoring the software version

You can restore the software to the version prior to the last update or to its factory settings.

The software may only be restored when the vehicle is stationary.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Software update"
4. "Restore software"
5. – "Previous version"
 The previous software version is re-
 stored.
- "Default software settings"
 The first software version is re-
 stored.
6. "Remove software"
7. "OK"
8. Wait for restore.
9. Confirm system restart.

Owner's Manual media

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

You can use the following media formats to call up the content in the Owner's Manual:

- Printed Owner's Manual, refer to page 67.
- Integrated Owner's Manual in the vehicle, refer to page 67.

Printed Owner's Manual

Concept

The printed Owner's Manual describes all standard, country-specific, and optional features offered with the series.

General information

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as a printed book from the service center.

Supplementary Owner's Manuals



Also follow the Supplementary Owner's Manuals, which are included in addition to the onboard literature.

Integrated Owner's Manual in the vehicle

Concept

The Integrated Owner's Manual specifically describes features and functions found in the vehicle. The Integrated Owner's Manual can be displayed on the Control Display.

Selecting the Owner's Manual

1.  Press the button.
2.  "My MINI"
3. "Owner's Manual"
4. Select the desired method of accessing the contents.

Scrolling through the Owner's Manual

Turn the Controller, until the next or previous contents are displayed.


Context help

General information

The section of the Owner's Manual relating to the function that is currently selected can be displayed directly.

Opening via Central Information Display (CID)

Change directly to the Options menu from the function on the Control Display:

1.  Press the button.
2. "Owner's Manual"




Opening when a Check Control message is displayed

Directly from the Check Control message on the Control Display:

-  "Owner's Manual"

Changing between a function and the Owner's Manual

To switch from a function, for instance radio, to the Owner's Manual on the Control Display and to alternate between the two displays:

1.  Press the button.
2. "Owner's Manual"
3. Select the desired page in the Owner's Manual.
4.  Press the button again to return to the last displayed function.
5.  Press the button to return to the page of the Owner's Manual displayed last.


To alternate continuously between the last displayed function and the last displayed page of the Owner's Manual, repeat steps 4 & 5. Opens a new display every time.

Programmable memory buttons


General information

The Owner's Manual can be stored on the programmable memory buttons and called up directly.

Storing

1. Select the desired entry point via the Central Information Display (CID):
 - "Quick reference"
 - "Search by pictures"
 - "Keyword search"
 - "Animations"
2.  Press and hold the desired button, until a signal sounds.

Executing

-  Press the button.
 The Owner's Manual is displayed immediately.

MINI eDRIVE

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Hybrid system

Concept

This MINI is a hybrid vehicle. In addition to the combustion engine, the vehicle features a high-voltage system that consists of an electric motor and a high-voltage battery among other things.

The hybrid system can move the vehicle entirely on battery power. It can also support the combustion engine in certain situations.


General information

The vehicle does not consume any fuel while driving purely electrically. This enables environmentally friendly driving without emissions in certain conditions, for example, in city traffic. If the combustion engine is used, the hybrid system support reduces fuel consumption even further.

In addition to this, the electric motor acts as an alternator: during braking and coasting, the electric motor converts the vehicle's kinetic energy into electrical energy. The electrical energy is stored in the high-voltage battery and is used to drive the electric motor.

The vehicle can be charged, refer to page 254, via the charging socket at charging stations or household sockets.

Overview

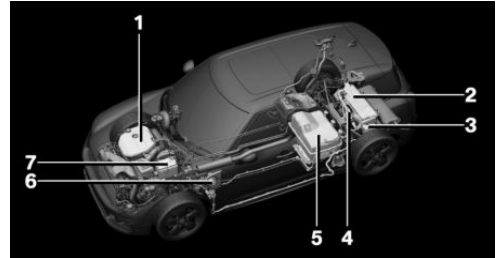

- 1 Combustion engine
- 2 Control-system electronics, electric motor
- 3 Electric motor
- 4 High-voltage cables: orange
- 5 High-voltage battery
- 6 Charging socket
- 7 Vehicle battery

Functions while driving

Electric driving: ePOWER

Under certain conditions, refer to page 122, the vehicle is powered only by the electric motor.

Variable drive type

The combustion engine drives the front axle and the electric motor the rear axle. Depending on the operating condition, the vehicle has the options of front-wheel drive, rear-wheel drive or combined for four-wheel drive.

Follow the information about electric driving ePOWER, driving with the combustion engine POWER, and the driving stability control systems.

Assistance from the electric motor

Driving off and accelerating require a lot of energy.

To optimize acceleration and to reduce fuel consumption, the electric motor boosts the combustion engine, refer to page 125. To do this, the electric motor uses the energy saved in the high-voltage battery.

Driving with the combustion engine: POWER

The combustion engine, refer to page 124, provides the main drive power to move the vehicle. If required, the high-voltage battery is charged at the same time.

The hybrid system always starts the combustion engine automatically.

Auto Start/Stop function, coasting

The Auto Start/Stop function, refer to page 121, switches the combustion engine off while the vehicle is moving, when braking, when rolling to a halt, and while the vehicle is stopped. The condition of rolling with the combustion engine switched off is referred to as coasting. Convenience functions such as the automatic climate control are supplied by the high-voltage battery and can remain switched on.

Energy recovery: CHARGE

The high-voltage battery of the hybrid system is charged through energy recovery while driving.

The electric motor acts as a generator and converts the kinetic energy of the vehicle into electrical energy, refer to page 125.

Charging the vehicle

The high-voltage battery of the vehicle can be charged, refer to page 254, via the charging socket at charging stations or household sockets.

Regular and complete charging of the high-voltage battery reduces the fuel consumption by using electric energy.

Climate control while parking and charging

The hybrid system makes it possible to operate the automatic climate control prior to driving off and with the combustion engine switched off.

During vehicle charging or if the high-voltage battery is sufficiently charged, the car's interior can be cooled or heated in advance of the trip, refer to page 261.

The stationary climate control can also be switched on directly.

Display

The displays of the hybrid system, refer to page 141, provide information about the current state of hybrid operation.

Energy-saving driving

To save energy while driving, read the following descriptions:

- Saving fuel, refer to page 247.
- Using the hybrid system efficiently, refer to page 248.
- GREEN Mode.
- Adapting to the course of the road.

Safety of the hybrid system

Follow the information on safety, refer to page 72.



Long-term vehicle storage

Observe the information on vehicle storage and for longer idle periods, refer to page [317](#).

Safety of the hybrid system

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Working on the hybrid system

General information

The manufacturer of your vehicle recommends that no changes be made to the vehicle, for instance the retrofitting of accessories, that will have an effect on the vehicle's hybrid system.

Safety information

DANGER

Improperly performed work, in particular maintenance and repair on the high-voltage system, can lead to electric shock. There is a risk of injury, fire and danger to life.

The manufacturer of your vehicle recommends that the work on the vehicle, in particular maintenance and repair, be performed by a dealer's service center or another qualified service center or repair shop.

Contact with water

The hybrid system is typically safe even in the following example situations:

- Water in the footwell, for instance after a rainstorm when sunroof was kept open.
- Vehicle is in water but only up to the allowed height.
- Fluid escapes in the cargo area.

Automatic deactivation

If an accident occurs, the hybrid system is switched off automatically to prevent risk of danger to occupants and other road users.

Read the information on What to do after an accident, refer to page [312](#).



CONTROLS

Opening and closing	76
Seats, mirrors, and steering wheel	100
Transporting children safely	112
Driving	118
Displays	140
Lights	163
Safety	169
Driving stability control systems	189
Driving comfort	193
Climate control	213
Interior equipment	222
Storage compartments	230
Cargo area	233

Opening and closing

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Vehicle key

General information

The vehicle is supplied with two vehicle keys with integrated key.

Each vehicle key contains a replaceable battery, refer to page 79.

Depending on the equipment and country version, various settings, refer to page 91, can be configured for the button functions.

A personal driver profile, refer to page 89, for each vehicle key is stored in the vehicle.

To provide information on maintenance requirements, the service data is stored in the vehicle key, refer to page 294.

To prevent possible locking in of the vehicle key, take the vehicle key with you when exiting the vehicle.

Safety information

 **Warning**

People or animals in the vehicle can lock the doors from the inside and lock themselves in. In this case, the vehicle cannot be opened from the outside. There is a risk

of injury. Take the vehicle key with you so that the vehicle can be opened from the outside.

 **Warning**

Unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.


 **Warning**

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

Overview

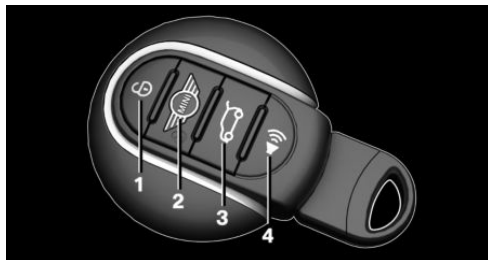

- 1 Unlocking
- 2 Locking
- 3 Unlocking the tailgate

With automatic tailgate operation: open the tailgate

- 4 Panic mode

Unlocking

 Press the button on the vehicle key.

Depending on the settings, refer to page 91, the following access points are unlocked.

- Driver's door.
Press the button on the vehicle key again to unlock the other vehicle access points.

- All doors and tailgate.


In addition, the following functions are executed:

- Unlocking is confirmed by the turn signals and the horn. This function must be activated in the settings, refer to page 91.
- The settings stored in the driver profile, refer to page 89, are applied.
- The driver's seat is set to the last position saved in the driver's profile. This function must be activated in the settings, refer to page 91.

- The interior lights, refer to page 167, and the MINI logo projection are switched on, provided that the interior lights were not switched off manually.
- Depending on the settings, the welcome light and headlight courtesy delay feature, refer to page 164, are switched on.
- Exterior mirrors folded through convenient closing are folded open.
- The alarm system, refer to page 93, is switched off.


The light functions may depend on the ambient brightness.

Convenient opening

 Press and hold the button on the vehicle key after unlocking.

The windows and the glass sunroof are opened, as long as the button on the vehicle key is pressed.

Locking

1. Close the driver's door.
2.  Press the button on the vehicle key.

The following functions are executed:

- All doors and the tailgate are locked.
- Locking is confirmed by the turn signals and the horn. This function must be activated in the settings, refer to page 91.
- The alarm system, refer to page 93, is switched on.

If the drive-ready state is still switched on when you lock the vehicle, the vehicle horn honks twice. In this case, the drive-ready state must be switched off by means of the Start/Stop button.

With Comfort Access: convenient closing

Safety information

 **Warning**

With convenient closing, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the doors is clear during convenient closing.

Closing



Press and hold the button on the vehicle key in the area close to the vehicle.

The windows and the glass sunroof are closed, as long as the button on the vehicle key is pressed.

The exterior mirrors are folded in.

Switch on interior lights and courtesy light



Press the button on the vehicle key with the vehicle locked.

The MINI logo projection is also switched on.

These functions are not available if the interior lights were switched off manually.

The light functions may depend on the ambient brightness.

After locking, wait 10 seconds before pressing the button again.

Tailgate

General information

To avoid locking the vehicle key in the vehicle, do not place the remote control in the cargo area.

Depending on the equipment and country version, it is possible to specify whether the tailgate can be activated with the vehicle key and how the vehicle doors will respond to this. To perform settings, refer to page 91.

Safety information

 **Warning**

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

 **NOTICE**

The tailgate swings back and up when it opens. There is a risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.

 **NOTICE**

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

Opening



Press and hold the button on the vehicle key for approx. 1 second.

Without automatic tailgate operation:


The tailgate is unlocked and can be swung upward.

With automatic tailgate operation:

The tailgate opens automatically.

Panic mode


You can trigger the alarm system if you find yourself in a dangerous situation.

-  - Press the button on the vehicle key and hold for at least 3 seconds.
- Briefly press the button on the vehicle key three times in succession.

To switch off the alarm: press any button.

Replacing the battery


1. Remove the integrated key from the vehicle key, refer to page 81.
2. Slide the integrated key into the opening and raise the cover. The battery compartment is accessible.

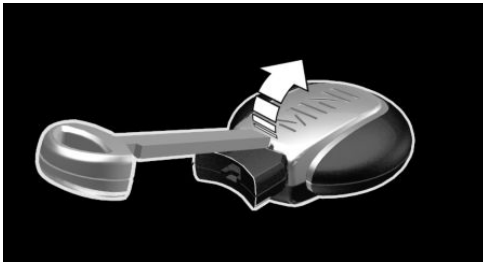

3. Slide the integrated key in the cover of the battery compartment and raise the cover.



4. Push battery in the direction of the arrow using a pointed object and lift it out.

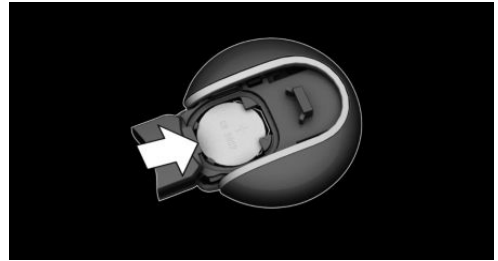

5. Insert a type CR 2032 battery with the positive side facing up.
6. Insert lid and cover.
7. Push the integrated key into the vehicle key until it engages.



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop or take them to a collection point.

Additional vehicle keys

Additional vehicle keys are available from a service center or another qualified service center or repair shop.

Loss of vehicle keys

A lost vehicle key can be blocked and replaced by a dealer's service center or another qualified service center or repair shop.

Malfunction

General information

A Check Control message is displayed. Vehicle key recognition by the vehicle may malfunction under the following circumstances:

- The battery of the vehicle key is discharged. For replacing the battery, refer to page 79.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the vehicle key due to metal objects.
Do not transport the vehicle key together with metal objects.
- Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the vehicle key.
Do not transport the vehicle key together with electronic devices.
- Interference of radio transmission by a charging process of mobile devices, for instance charging of a mobile phone.
- The vehicle key is in direct proximity of the wireless charging tray.
Place the vehicle key in a different location.

In the case of interference, the vehicle can be unlocked and locked from the outside with the integrated key, refer to page 80.

Switching on the drive-ready state via emergency detection of the vehicle key



It is not possible to switch on the drive-ready state if the vehicle key has not been detected.

Proceed as follows in this case:

1. Hold the vehicle key against the mark on the steering column as shown. Pay attention to the display in the instrument cluster.
2. If the vehicle key is detected:
Switch on drive-ready state within 10 seconds.

If the vehicle key is not recognized, slightly change the position of the vehicle key and repeat the procedure.

Frequently Asked Questions

What precautions can be taken to be able to open a vehicle with an accidentally locked in vehicle key?

- The options provided by the Remote Services of the MINI Connected app include the ability to lock and unlock a vehicle.

This requires an active MINI Connected contract and the MINI Connected app must be installed on a smartphone.

- Unlocking the vehicle can be requested via the MINI Connected Call Center.

An active MINI Connected contract is required.

Integrated key

General information

The driver's door can be locked and unlocked without the vehicle key using the integrated key.

Safety information

Warning


Unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.

NOTICE

The door lock is permanently joined with the door. The door handle can be moved. When pulling the door handle with the integrated key inserted, paint or the integrated key can be damaged. There is a risk of damage to property. Remove the integrated key before pulling the outside door handle.

Removing

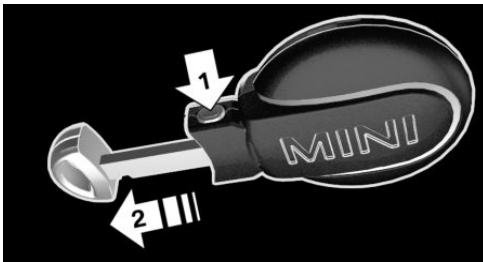


Press the button, arrow 1, and pull out the integrated key, arrow 2.

Locking/unlocking via the door lock

1. Remove lid on the door lock.

To do this, slide the integrated key into the opening from below and remove the lid.

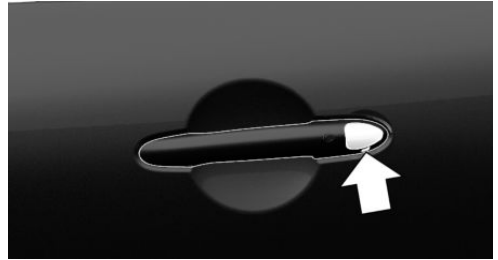

2. Unlock or lock the door lock using the integrated key.

The other doors must be unlocked or locked from the inside.

Alarm system

The alarm system is not switched on if the vehicle is locked with the integrated key.

The alarm system is triggered when the door is opened, if the vehicle has been unlocked via the door lock.

Buttons for the central locking system

General information


In the event of a severe accident, the vehicle is automatically unlocked. The hazard warning system and interior lights come on.

Overview




Buttons for the central locking system.

Locking


 Press the button with the front doors closed.

The vehicle is not secured against theft when locking.

Unlocking

 Press the button.

Opening

-  Press button to unlock the doors together, and then pull the door handle above the armrest.
- Front doors: pull the door handle on the door to open the door. The other doors remain locked.
- Back doors: pull twice on the door handle on the door to be opened; the first time unlocks the door, the second time opens it. The other doors remain locked.

Comfort Access

Concept

The vehicle can be accessed without operating the vehicle key.

Carrying the vehicle key with you, e.g., in your pants pocket, is sufficient.

The vehicle automatically detects the vehicle key when it is in close proximity or in the car's interior.

General information

Comfort Access supports the following functions:


- Unlocking and locking the vehicle.
- Convenient closing.
- Open the tailgate.
- Opening/closing the tailgate with no-touch activation.

This function must be activated in the settings, refer to page 91.

Functional requirements

- To lock the vehicle, the vehicle key must be outside of the vehicle near the doors.
- The next unlocking and locking cycle is not possible until after approx. 2 seconds.

Unlocking

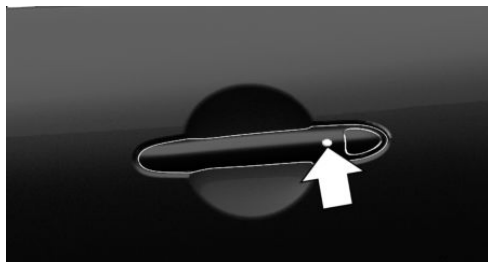


On the driver's or front passenger's outer door handle, press the button.

Depending on the settings, refer to page 91, only the driver's door may be unlocked. Unlike when unlocking with the vehicle key, pressing the button on the outer door handle again does not unlock the other

vehicle access points. Rather, the vehicle is locked again.

If the vehicle was locked automatically after driving off or with the button of the central locking system from the inside, note the following: if a door on a locked vehicle is opened from the inside with the door opener, pressing the button on the outer door handle will first lock the vehicle again. To unlock, the button on the outer door handle must be pressed again.

Locking

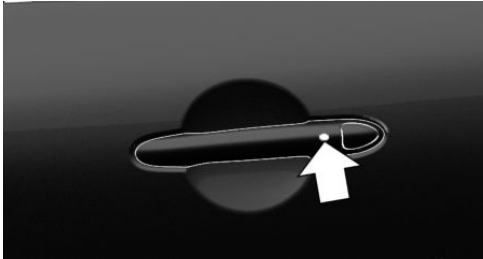

On the driver's or front passenger's outer door handle, press the button.


Convenient closing

Safety information

Warning

With convenient closing, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the doors is clear during convenient closing.

Closing

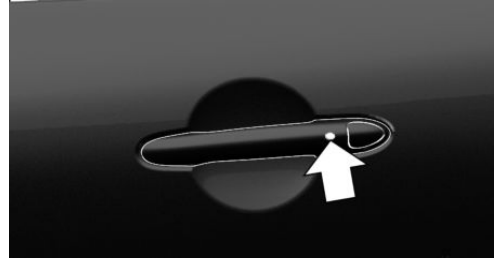

Press and hold down the button on the driver's or front passenger's outer door handle.

In addition to locking, the windows and glass sunroof will be closed.

The exterior mirrors are folded in.

To open the tailgate

General information

If the tailgate is opened via Comfort Access, locked doors are not unlocked.

To avoid locking the vehicle key in the vehicle, do not place the vehicle key in the cargo area.

Safety information

Warning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

NOTICE

The tailgate swings back and up when it opens. There is a risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.

⚠ NOTICE

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

Opening



Press button next on tailgate.

Without automatic tailgate operation:

The tailgate is unlocked and can be swung upward.

With automatic tailgate operation:

The tailgate opens automatically.

Opening and closing the split doors with no-touch activation

Concept

The tailgate can be opened and closed with no-touch activation using the vehicle key you are carrying. Two sensors detect a forward-directed foot motion in the central rear area and the tailgate is opened or closed.

General information

To avoid locking the vehicle key in the vehicle, do not place the vehicle key in the cargo area.

If the vehicle key is in the sensor area, the tailgate may open or close inadvertently if you unintentionally move your foot or if a foot movement is detected.

The sensor has an approximate range of 5 ft/1.50 m extending from the rear of the vehicle.

If the tailgate is opened with no-touch activation, locked doors are not unlocked.

Contactless opening and closing of the tailgate must be activated in the settings.

Safety information

⚠ Warning

During no-touch activation, vehicle parts may be touched, such as the hot exhaust gas system. There is a risk of injury. When moving your foot, make sure you have a firm stance and do not touch the vehicle.

⚠ Warning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

⚠ NOTICE

The tailgate swings back and up when it opens. There is a risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.

Adjusting

1. "My MINI"
2. "Vehicle settings"
3. "Doors/Key"

4. "Tailgate"
5. Select the desired setting:
 - "Open by foot movement"
Contactless opening of the tailgate is switched on or off.
 - "Close by foot movement"
Contactless closing of the tailgate is switched on or off.

Performing the foot movement

1. Stand in the middle behind the vehicle at approx. one arm's length away from the rear of the vehicle.
2. Wave a foot under the vehicle in the direction of travel and immediately pull it back. With this movement, the leg must pass through the ranges of both sensors.



Opening

Perform the foot movement described earlier.

Before the opening, the hazard warning system flashes.

If touchless closing is switched on:

Moving a foot again will stop the opening process.

The subsequent foot movement will close the tailgate again.

Closing

Perform the foot movement described earlier.

Before closing, the hazard warning system flashes and an acoustic signal sounds.

Moving a foot again will stop the closing process.

When the touchless opening is switched on: the subsequent foot movement will open the tailgate again.

Malfunction

Vehicle key recognition by the vehicle may malfunction under the following circumstances:

- The battery of the vehicle key is discharged. For replacing the battery, refer to page 79.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the vehicle key due to metal objects.
Do not transport the vehicle key together with metal objects.
- Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the vehicle key.
Do not transport the vehicle key together with electronic devices.

Wet or snowy conditions may disrupt the locking request recognition function on the door handles.

In the case of a malfunction, unlock and lock the vehicle using the buttons of the vehicle key or use the integrated key, refer to page 80.

Tailgate

General information

To avoid locking the vehicle key in the vehicle, do not place the remote control in the cargo area.

Depending on the equipment and country version, it is possible to specify whether the tailgate can be activated with the vehicle key and how the vehicle doors will respond to this. To perform settings, refer to page 91.

Safety information

Warning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

NOTICE

The tailgate swings back and up when it opens. There is a risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.


NOTICE

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

Without automatic tailgate operation



Opening from the outside



- Without Comfort Access: unlock vehicle.
With Comfort Access: unlock the vehicle or have the vehicle key with you.
Press button next on tailgate.
-  Press and hold the button on the vehicle key for approx. 1 second.
Depending on the setting, the doors may also be unlocked. Unlocking with the vehicle key, refer to page 78.

The tailgate is unlocked and can be swung upward.

Opening from the inside

-  With Steptronic transmission:
With the vehicle stationary, pull the button in the storage compartment of the driver's door upwards.
If the vehicle is locked, selector lever position P must be engaged first.
-  With manual transmission:
With the vehicle stationary, pull the button in the storage compartment of the driver's door upwards twice in quick succession.

Closing



Recessed grips on the interior trim of the tailgate can be used to conveniently pull down the tailgate.

With automatic tailgate operation


Opening

Adjusting the opening height

You can set how far the tailgate should open.


When adjusting the opening height, ensure that there is a clearance of at least 4 in/10 cm above the tailgate.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Doors/Key"
4. "Tailgate"
5. Monitor the tailgate and set the desired opening height.


From the outside




- Without Comfort Access: unlock vehicle. With Comfort Access: unlock the vehicle or have the vehicle key with you. Press the button on tailgate's exterior.
-  Press and hold the button on the vehicle key for approx. 1 second. Depending on the setting, the doors may also be unlocked. Unlocking using the vehicle key, refer to page 78.

If the vehicle is stationary, the tailgate opens automatically to the adjusted opening height.

From the inside

-  With Steptronic transmission:
Pull button in the storage compartment of the driver's door upward.

If the vehicle is locked, selector lever position P must be engaged first.

-  With manual transmission:
With the vehicle stationary, pull the button in the storage compartment of the driver's door upwards twice in quick succession.

If the vehicle is stationary, the tailgate opens automatically to the adjusted opening height.

Interruption of the opening procedure

The opening procedure is interrupted in the following situations:


- When the vehicle starts moving.
- By pressing the button on the outside of the tailgate. Pressing again closes the tailgate.
- By pressing the button on the inside of the tailgate. Pressing again closes the tailgate.
- By pressing the button on the vehicle key. Pressing again continues the opening motion.
- By pressing or pulling the button in the storage compartment of the driver's door. Pulling again continues the opening motion.

Closing

From the outside

Press the button on tailgate's exterior.

From the inside


 Press and hold the button in the storage compartment of the driver's door.

The vehicle key must be located in the car's interior for this function.

An acoustic signal sounds before the tailgate is closed.

From inside the tailgate

Without Comfort Access:

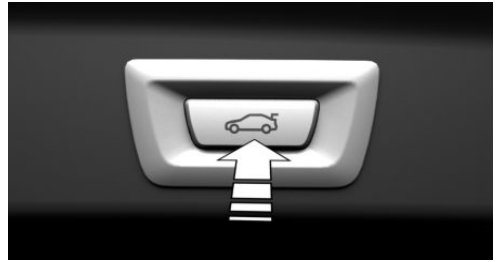

Press the button on the inside of the tailgate.

With Comfort Access:



- Press button on the inside of the tailgate, arrow 1.
- Press button, arrow 2.

The vehicle will be locked after closing the tailgate. The driver's door must be closed for this purpose and the vehicle key must be outside of the vehicle in the area of the tailgate.

Interruption of the closing procedure

The closing procedure is interrupted in the following situations:

- If the vehicle starts off with a jerky movement.
- By pressing the button on the outside of the tailgate. Pressing again closes the tailgate.
- By pressing the button on the inside of the tailgate. Pressing again closes the tailgate.

- By releasing the button in the storage compartment of the driver's door. Pressing again and holding continues the closing motion.

Malfunction

Safety information

Warning

With manual operation of a blocked tailgate, it can release itself unexpectedly from the blockage. There is a risk of injury or risk of damage to property. Do not operate the tailgate manually if it is blocked. Have it checked by a dealer's service center or another qualified service center or repair shop.

Manual operation

Operate the unlocked tailgate manually with a slow and smooth motion.

To close the tailgate fully, press down lightly only. Closing occurs automatically.

Driver profiles

Concept

In the driver profiles, individual settings for several drivers can be stored and called up again when required.

General information

There are three driver profiles with which personal vehicle settings can be stored. Every vehicle key has been assigned one of these driver profiles.

If the vehicle is unlocked using the vehicle key, the assigned personal driver profile will be activated. All settings stored in the driver profile are automatically applied.

If several drivers use their own vehicle keys, the vehicle will apply the personal settings as it is being unlocked. These settings are also restored, if the vehicle has been used in the meantime by a person with a different vehicle key.

Changes to the settings are automatically stored in the driver profile currently activated.

If another driver profile is selected via the Central Information Display (CID), the settings stored in it will be applied automatically. The new driver profile is assigned to the vehicle key that is currently in use.

There is an additional guest profile available that is not assigned to any vehicle key: it can be used to apply settings in the vehicle without changing the personal driver profiles.

Functional requirements

For the system to be able to identify the driver profile associated to a particular driver, the detected vehicle key must be clearly allocated to the driver.

This is the case when:

- The driver is only carrying his or her own vehicle key.
- The driver unlocks the vehicle.
- The driver gets into the vehicle through the driver's door.

Adjusting

The settings for the following systems and functions are stored in the active profile. The scope of storable settings depends on country and equipment.

- Unlocking and locking.
- Lights.
- Radio.
- Instrument cluster.
- Programmable memory buttons.



- Volumes, tone.
- Control Display.
- Climate control.
- Navigation.
- PDC Park Distance Control.
- Rearview camera.
- Head-up Display.
- MINI Driving Modes.
- Intelligent Safety.
- Driver's seat position, exterior mirror position.


Both the positions saved via the seat memory and the last position set are saved.

Profile management

Selecting a driver profile

Regardless of the vehicle key in use, a different driver profile may be activated. This allows you to call up personal vehicle settings, even if you did not unlock the vehicle with your own remote control.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Driver profiles"
3. Select driver profile.
4. "OK"

- All settings stored in the selected driver profile are automatically applied.
- The called-up driver profile is assigned to the vehicle key being used at the time.
- If the driver profile is already assigned to a different vehicle key, this driver profile will apply to both vehicle keys.

Using a guest profile

The guest profile is for individual settings that are stored in none of the three personal driver profiles.

Via the Central Information Display (CID):



1.  "My MINI"
2. "Driver profiles"
3. "Drive off (guest)"
4. "OK"

The guest profile cannot be renamed. It is assigned to the vehicle key that is not used at the time.

Renaming a driver profile

A personal name can be assigned to the active driver profile to avoid confusion between the driver profiles.



Via the Central Information Display (CID):

1.  "My MINI"
2. "Driver profiles"
3. Select driver profile.
 -  The driver profile marked with this symbol can be renamed.
4. "Change driver profile name"
5. Enter profile name.
6. **OK** Select the symbol.

Resetting a driver profile

The settings of the driver profile currently in use are reset to their factory settings.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Driver profiles"
3. Select driver profile.
 -  The driver profile marked with this symbol can be reset.

4. "Reset driver profile"
5. "OK"

Exporting driver profiles

Most settings of the active driver profile can be exported.

Exporting is helpful when storing and retrieving personal settings, for instance before delivering the vehicle to a workshop. The stored driver profiles can be taken into another vehicle.

Via the Central Information Display (CID):



1.  "My MINI"
2. "Driver profiles"
3. Select driver profile.
 -  The driver profile marked with this symbol can be exported.
4. "Export driver profile (USB)"
 - Select USB storage device as needed.

Importing driver profiles

Profiles stored on a USB storage device can be imported via the USB interface.

The existing settings of the active driver profile are overwritten with the settings of the imported driver profile.


Via the Central Information Display (CID):

1.  "My MINI"
2. "Driver profiles"
3. Select the driver profile to overwrite.
 -  The driver profile marked with this symbol can be overwritten.
4. "Import driver profile (USB)"
 - Select USB storage device as needed.
5. Select the driver profile to be imported.

Displaying driver profiles during start

The driver profiles can be displayed at each startup to select the desired profile.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Driver profiles"
3. "Show driver profiles at startup"

System limits

A clear assignment between the vehicle key and driver may not be possible in the following cases, for example.

- The passenger unlocks the vehicle with his or her own vehicle key, but another person is driving.
- The driver unlocks the vehicle via Comfort Access and has multiple vehicle keys with him or her.
- The driver changes, but the vehicle is not locked and unlocked.
- Multiple vehicle keys are located outside of the vehicle.

Adjusting

General information


Depending on the package and country version, various settings are available for the vehicle key functions.

These settings are stored for the driver profile, refer to page 89, currently used.

Unlocking

Doors

Via the Central Information Display (CID):



1.  "My MINI"
2. "Vehicle settings"
3. "Doors/Key"
4. "Driver's door" or "All doors"
5. Select the desired setting:



- "Driver's door only"
Only the driver's door is unlocked.
Pressing again unlocks the entire vehicle.
- "All doors"
The entire vehicle is unlocked.

Tailgate

Via the Central Information Display (CID):



1.  "My MINI"
2. "Vehicle settings"
3. "Doors/Key"
4. 

The text next to the symbol indicates the current setting.
5. Select the desired setting:
 - "Tailgate"
Depending on your vehicle's optional features, the tailgate is either unlocked or opened.
 - "Tailgate and door(s)"
Depending on your vehicle's optional features, the tailgate is either unlocked or opened and the doors unlocked.
 - "Tailgate opens after unlocking"
The vehicle must be unlocked before the tailgate can be used with the vehicle key.
 - "Button lock"
It is not possible to use the tailgate via the vehicle key.

Depending on the vehicle equipment and country version, this setting may not be offered.

Adjusting the last seat and mirror position

Via the Central Information Display (CID):


1.  "My MINI"
2. "Driver profiles"
3. Select driver profile.
 -  The setting can be made for the driver profile marked with this symbol.
4. "Last seat position automatic"

When the vehicle is unlocked, the driver's seat and exterior mirrors resume their last set positions.

The most recent position is independent of the positions saved via the seat memory.


Automatic locking

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Doors/Key"
4. Select the desired setting:
 - "Lock automatically"
The vehicle locks automatically after a while if no door is opened after unlocking.
 - "Lock after starting to drive"
The vehicle locks automatically after you drive off.

Automatic unlocking


Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Doors/Key"
4. "Unlock at end of trip"
After the engine is switched off by pressing the Start/Stop button, the

locked vehicle is automatically unlocked.

Confirmation signals from the vehicle

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Doors/Key"
4. Deactivate or activate the desired confirmation signals.
 - "Flash for lock/unlock"
Unlocking is signaled by two flashes, locking by one.
 - With alarm system:
"Acoustic signal for lock/unlock"
Unlocking is signaled by one honk of the horn.

Alarm system

General information


When the vehicle is locked, the vehicle alarm system reacts to the following changes:

- Unauthorized opening of a door, the hood or the tailgate.
- Movements in the car's interior.
- Changes in the vehicle tilt, for instance, during attempts at stealing a wheel or when towing the vehicle.
- Disconnected battery voltage.
- Improper use of the socket for Onboard Diagnosis.
- Locking the vehicle while a device is connected to the socket for the OBD Onboard-Diagnosis. For socket for the OBD Onboard Diagnosis, refer to page 295.


The alarm system signals these changes visually and acoustically:

- Acoustic alarm:
Depending on local regulations, the acoustic alarm may be suppressed.
- Visual alarm:
By flashing the exterior lighting.

Overview

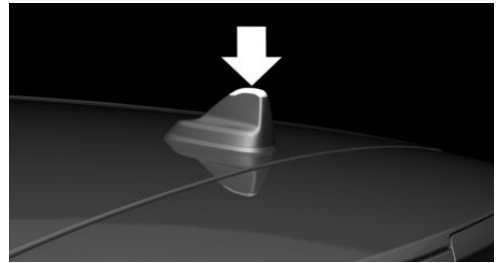

Indicator light in the roof fin.

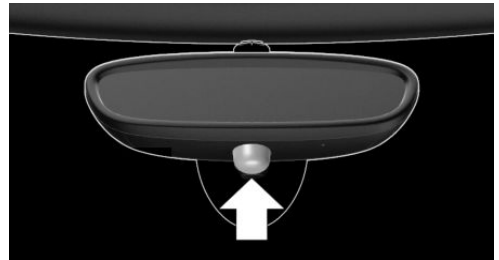

Indicator light on the interior mirror.

Switching on/off

When you unlock and lock the vehicle, either with the vehicle key or via Comfort Access, the alarm system is switched off and on at the same time.

Opening the doors with the alarm system switched on

The alarm system is triggered when a door is opened if the door was unlocked using the integrated key in the door lock.



Switching off the alarm, refer to page 95.


Opening the tailgate with the alarm system switched on

The tailgate can be opened even when the alarm system is switched on.

After the tailgate is closed, it is locked and monitored again provided the doors are locked. The hazard warning system flashes once.

Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.

 – Press the button on the vehicle key and hold for at least 3 seconds.

- Briefly press the button on the vehicle key three times in succession.

To switch off the alarm: press any button.

Signals of the indicator lights

- The indicator light flashes briefly every 2 seconds:

The alarm system is switched on.

- Indicator light flashes for approx. 10 seconds, then it flashes briefly every 2 seconds:

Interior motion sensor and tilt alarm sensor are not active, as doors, hood, or tailgate are not correctly closed. Correctly closed access points are secured.

When the still open access points are closed, the interior motion sensor and tilt alarm sensor will be switched on.

- The indicator light goes out after unlocking:
The vehicle has not been tampered with.
- The indicator light flashes after unlocking until the engine ignition is switched

on, but no longer than approx. 5 minutes:

An alarm has been triggered.

Tilt alarm sensor

The tilt of the vehicle is monitored.

The alarm system responds in situations such as attempts to steal a wheel or when the vehicle is towed.

Interior motion sensor

The windows and the glass sunroof must be closed for the system to function properly.

Avoiding unintentional alarms

General information

The tilt alarm sensor and interior motion sensor can trigger an alarm, although no unauthorized action occurred.

Possible situations for an unwanted alarm:

- In automatic vehicle washes.
- In duplex garages.
- During transport on trains carrying vehicles, at sea or on a trailer.
- With animals in the vehicle.
- When the vehicle is locked after start of fueling.

The tilt alarm sensor and the interior motion sensor can be switched off in such situations.

Switching off the tilt alarm sensor and interior motion sensor



Press the button on the vehicle key within 10 seconds as soon as the vehicle is locked.

The indicator light lights up for approx. 2 seconds and then continues to flash.

The tilt alarm sensor and interior motion sensor are switched off until the vehicle is locked again.

Switching off the alarm

- Unlock the vehicle with the vehicle key.
- Unlock the vehicle with the integrated remote control or switch on the ignition using the emergency detection of remote control, refer to page 79.
- With Comfort Access: if you have the vehicle key with you, unlock the vehicle using the button on the driver's side or passenger side door.

Power windows

General information

If an accident of a certain severity occurs, the windows are automatically closed except a gap.


Safety information

Warning

When operating the windows, body parts and objects can be jammed. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the windows is clear during opening and closing.



Overview





 Power windows.

 Safety switch.

Opening

-  Press the switch to the resistance point.
The window opens while the switch is being held.
 -  Press the switch beyond the resistance point.
The window opens automatically. Pressing the switch again stops the motion.
- Convenient opening with the vehicle key, refer to page 77.

Closing

-  Pull the switch to the resistance point.
The window closes while the switch is being held.
-  Pull the switch beyond the resistance point.
The window closes automatically if the door is closed. Pulling the switch again stops the motion.

Convenient closing with the vehicle key, refer to page 78.

Closing via Comfort Access, refer to page 83.

Jam protection system

Concept

The jam protection prevents objects or body parts becoming jammed between the door frame and window while a window is being closed.

General information

If resistance or a blockage is detected while a window is being closed, the closing action is interrupted.

The window opens slightly.


Safety information


Warning

Accessories on the windows such as antennas can impact jam protection. There is a risk of injury. Do not install accessories in the area of movement of the windows.

Closing without the jam protection system

In case of danger from the outside or if ice might prevent normal closing, proceed as follows:

-  Pull the switch past the resistance point and hold it there.
The window closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.

-  Pull the switch past the resistance point again within approx. 4 seconds and hold it there.

The window closes without jam protection.

Safety switch

General information

The safety switch can be used to prevent children, for instance from opening and closing the rear windows using the switches in the rear.

If an accident of a certain severity occurs, the safety function is switched off automatically.

Switching on/off



Press the button.

The LED lights up if the safety function is switched on.

Malfunction

General information

In certain situations a window can only be operated to a limited extent.

- After a power failure during the opening or closing process, the a window can only be operated to a limited extent. The system must be initialized in this case.
- The power window motors are equipped with overheating protection. If a window is opened and closed several times within a short period of time, the overheating protection switches the motor off temporarily. Depending on the degree of overheating, it may only be possible to close the window or it may not be possible to operate it at all.

In this case: allow the power window motor to cool down.



Initializing the system

The system can be initialized when the vehicle is stationary and the engine is running.

During initialization, the affected window closes without jam protection.

Warning

When operating the windows, body parts and objects can be jammed. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the windows is clear during opening and closing.

1. Open the affected window completely.
2.  Pull the switch to the resistance point and hold.
The window closes.
3.  Continue holding the switch pulled to the resistance point.
The window opens and closes once or twice after approx. 15 seconds, depending on the vehicle's equipment.
4. Release switch.

Panoramic glass sunroof

General information

In the event of a severe accident, the glass sunroof is automatically closed.

Safety information


Warning

Body parts can be jammed when operating the glass sunroof. There is a risk of injury. Make sure that the area of movement of the glass sunroof is clear during opening and closing.

Overview



Tilting the glass sunroof

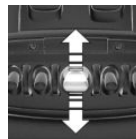


Press back the switch up to or beyond the resistance point and release it.

The glass sunroof is raised.

Opening glass sunroof

When the glass sunroof is closed

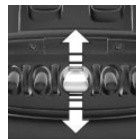

Press the switch back beyond the resistance point and release it twice.

The glass sunroof is opened.

Pressing the switch again stops the motion.

With the glass sunroof completely raised



- Slide switch back to the resistance point and hold.
The glass sunroof is opened as long as the switch is pressed.

- Press the switch back beyond the resistance point and release it.
The glass sunroof is opened.
Pressing the switch again stops the motion.

Comfort position

In some models, the wind noises in the car's interior are lowest when the glass sunroof is not fully open. In these models, the automatic function initially only opens the glass sunroof up to this comfort position.

Pressing the switch again opens the glass sunroof fully.

Closing glass sunroof

With the glass sunroof open



- Slide switch forward to the resistance point and hold.
The glass sunroof is closed as long as the switch is pressed and stops in the raised position.

- Press the switch forward beyond the resistance point and release it.
The glass sunroof is closed and stops in the raised position.
Pressing the switch again stops the motion.
- Press the switch forward beyond the resistance point and release it twice.
The glass sunroof is closed.

Pressing the switch again stops the motion.

With the glass sunroof completely raised



- Press the switch forward beyond the resistance point and release it.
The glass sunroof is closed.

Jam protection system

Concept

The jam protection prevents objects or body parts from becoming jammed between the roof and glass sunroof while the glass sunroof is closing.

General information

If resistance or a blockage is detected while the glass sunroof is being closed, the closing action is interrupted.

The glass sunroof opens slightly.

Closing without the jam protection system

If there is an external danger, proceed as follows:



1. Push the switch forward past the resistance point and hold it.
The glass sunroof closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.
2. Push the switch forward again past the resistance point and hold until the glass

sunroof closes without jam protection.
Make sure that the closing area is clear.

Initializing after a power interruption

After a power failure during the opening or closing process, the glass sunroof can only be operated to a limited extent. The system must be initialized in this case. MINI recommends having this work performed only by a dealer's service center or another qualified service center or repair shop.

Seats, mirrors, and steering wheel

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Sitting safely

An ideal seating position that meets the needs of the occupants can make a vital contribution to relaxed, fatigue-free driving.

In the event of an accident, the correct seating position plays an important role. Follow the information in the following chapters:

- Seats, refer to page 100.
- Safety belts, refer to page 104.
- Head restraints, refer to page 106.
- Airbags, refer to page 169.

Front seats

Safety information

Warning

Seat adjustments while driving can lead to unexpected movements of the seat. Vehicle control could be lost. There is a risk of accident. Only adjust the seat on the driver's side when the vehicle is stationary.

Warning


With a backrest inclined too far to the rear, the efficacy of the safety belt can no longer be ensured. There is a risk of sliding under the safety belt in an accident. There is a risk of injuries or danger to life. Adjust the seat prior to starting the trip. Adjust the backrest so that it is in the most upright position as possible and do not adjust again while driving.

Warning

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

Manually adjustable seats

Overview

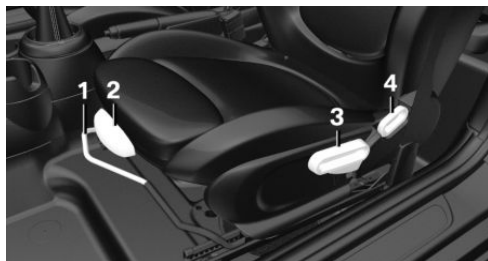

- 1 Forward/backward
- 2 Thigh support
- 3 Height
- 4 Backrest tilt


Forward/backward



Pull the lever and slide the seat in the desired direction.

After releasing the lever, move the seat forward or back slightly making sure it engages properly.

Height

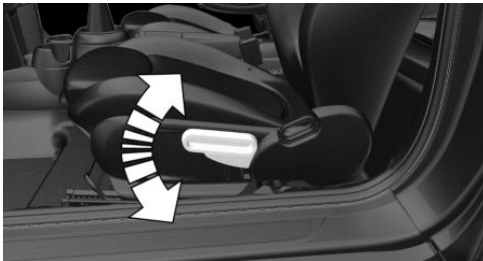

Pull the lever up or press it down as often as needed to reach the desired height.

Backrest tilt



Pull the lever, and apply your weight to the backrest or lift it off, as necessary.

Lumbar support

The curvature of the seat backrest can be adjusted in a way that it supports the lumbar region of the spine. The lower back and the spine are supported for upright posture.



Turn the wheel in order to increase or decrease the curvature.


Electrically adjustable seats

General information

The seat setting for the driver's seat is stored for the profile currently used. When the vehicle is unlocked via the vehicle key, the position is automatically retrieved if the function, refer to page 92, is activated for this purpose.

The current seat position can be stored using the memory function, refer to page 108.

Overview

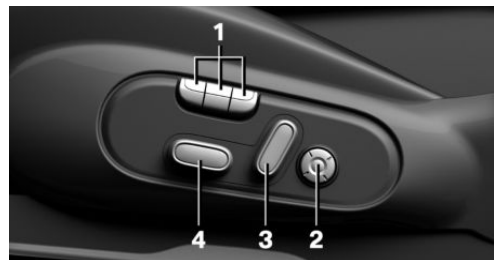

- 1 Memory function
- 2 Lumbar support

- 3 Backrest tilt
- 4 Forward/backward, height, seat tilt

Forward/backward



Push switch forward or backward.

Height




Push switch up or down.

Seat tilt



Move switch up or down.

Backrest tilt

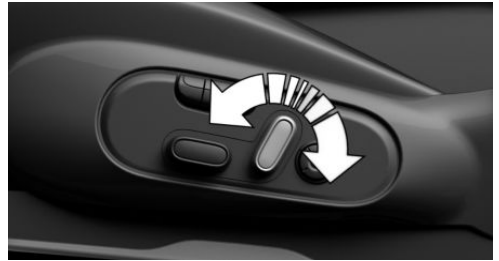

Move switch forward or backward.

Lumbar support

Concept


The curvature of the seat backrest can be adjusted in a way that it supports the lumbar region of the spine. The lower back and the spine are supported for upright posture.

Adjusting



- Press the front/rear section of the button:
The curvature is increased/decreased.
- Press the upper/lower section of the button:
The curvature is shifted up/down.

Thigh support

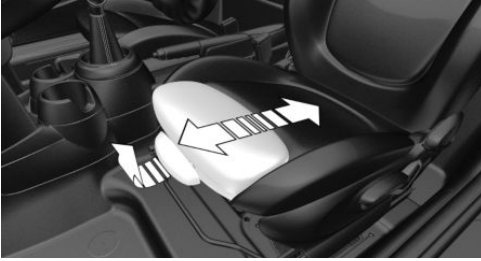

Pull the lever at the front of the seat and adjust the thigh support.


Front seat heating

Overview



 Seat heating

Switching on


 Press the button once for each temperature level.

The maximum temperature is reached when three LEDs are lit.

If the trip is continued within approx. 15 minutes after a stop, seat heating is activated automatically with the temperature selected last.

When GREEN Mode is activated, refer to page 249, the heating output is reduced.

Switching off

 Press and hold the button until the LEDs go out.

Rear seats

Safety information


Warning

There is a risk of jamming when folding down the center armrest in the rear. There is a risk of injury. Make sure that the area of movement of the center armrest is clear during folding down.

Warning

Unexpected movements of the rear seat backrest while driving may occur due to unintentional unlocking of the rear seat backrests by the straps. There is a risk of injury. Do not fasten any objects to the straps for unlocking the rear backrests.

Backrest tilt

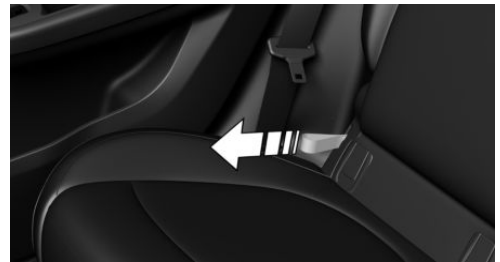

Pull the strap and apply your weight to the backrest or lift it off, as necessary.

After the adjustment, move the backrest slightly forward or back to engage it correctly.

Safety belts

Number of safety belts and safety belt buckles

The vehicle is fitted with five safety belts to ensure occupant safety. However, they can only offer protection when adjusted correctly.

The two outer safety belt buckles of the rear seat are intended for the persons sitting on the left and right.

The center safety belt buckle of the rear seat is intended for the person sitting in the middle.

General information

Always make sure that safety belts are being worn by all occupants before driving off. Although airbags enhance safety by providing added protection, they are not a substitute for safety belts.

If needed, disengage the safety belt in the rear from the belt buckle on the side.

The upper shoulder strap's anchorage point will be correct for adult seat occupants of every build if the seat is correctly adjusted.

Safety information

Warning

Use of a safety belt to buckle more than one person will potentially defeat the ability of the safety belt to serve its protective function. There is a risk of injuries or danger to life. Do not allow more than one person to wear a single safety belt. Infants and children are not allowed on an occupant's lap, but must be transported and secured in designated child restraint systems.

Warning

The efficacy of safety gear, including safety belts, can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Make sure that all occupants are wearing safety belts correctly.

Warning

The efficacy of safety gear, including safety belts, may not be fully functional or fail in the following situations:

- The safety belts or safety belt buckles are damaged, soiled, or changed in any other way.
- Belt tensioners or belt retractors were modified.

Safety belts can be imperceptibly damaged in the event of an accident. There is a risk of injuries or danger to life. Do not modify safety belts, safety belt buckles, belt tensioners, belt retractors or belt anchors and keep them clean. Have the safety belts checked after an accident at the dealer's service center or another qualified service center or repair shop.

Correct use of safety belts

- Wear the safety belt twist-free and tight to your body over your lap and shoulders.
- Wear the safety belt deep on your hips over your lap. The safety belt may not press on your stomach.

- Do not rub the safety belt against sharp edges, or guide it or jam it in across hard or fragile objects.
- Avoid thick clothing.
- Re-tighten the safety belt frequently upward around your upper body.

Buckling the safety belt

1. Guide the safety belt slowly over shoulder and hip to put it on.
2. Insert the tongue plate into the safety belt buckle. The safety belt buckle must engage audibly.




Unbuckling the safety belt

1. Hold the safety belt firmly.
2. Press the red button in the belt buckle.
3. Guide the safety belt back into its roll-up mechanism.

Middle safety belt in the rear


Buckling the safety belt

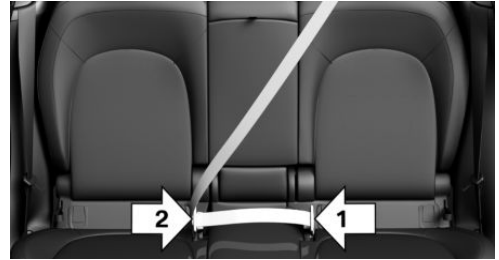

1. Pull the buckle tongues out of the mounts in the roof.
 2. Insert the lower buckle tongue in the belt buckle, arrow 1.
 3. Insert the upper buckle tongue in the belt buckle, arrow 2.
- Safety belt buckles must audibly click into place.

Unbuckling the safety belt

1. Hold the safety belt firmly.
2. Press the red button in the belt buckle.
3. Use the buckle tongue, arrow 1, to open the second safety belt buckle, arrow 2.

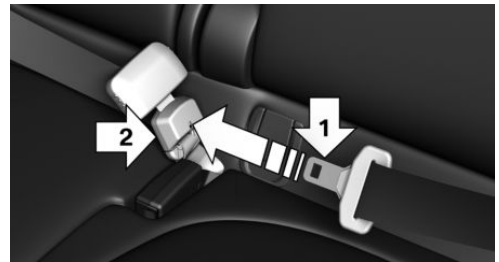

4. Guide the safety belt to the mount in the roofliner.

Safety belt reminder for driver's seat and front passenger seat

Display in the instrument cluster



The indicator light lights up and a signal sounds. Make sure that the safety belts are positioned correctly.

The safety belt reminder can also be activated if objects are placed on the front passenger seat.

Front head restraints

Safety information

Warning

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury.

- Before driving, install the removed head restraints on the occupied seats.
- Adjust the head restraint so its center supports the back of the head at as close to eye level as possible.
- Adjust the distance so that the head restraint is as close as possible to the back of the head. Adjust the distance via the backrest tilt as needed.

Warning

Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.

Warning


Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- Do not use seat or head restraint covers.
- Do not hang objects, for instance clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.
- Do not use any accessories, for instance pillows, while driving.

Adjusting the height: John Cooper Works sport seat

The height of the head restraints cannot be adjusted.

Adjusting the height

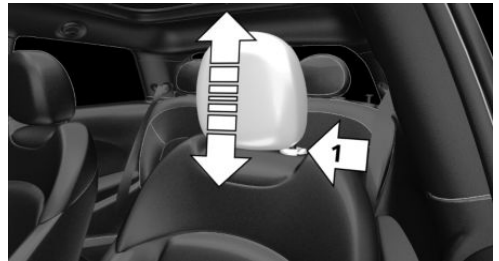

- To lower: press the button, arrow 1, and push the head restraint down.
- To raise: push the head restraint up.


After setting the height, make sure that the head restraint engages correctly.

Removing: John Cooper Works sport seat

The head restraints cannot be removed.

Removing

Only remove the head restraint if no one will be sitting in the seat in question.

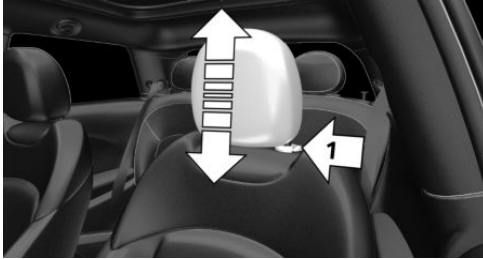

1. If necessary, fold the rear seat backrest forward.
2. Pull head restraint up as far as possible.
3. Press the button, arrow 1, and pull the head restraint out completely.

Installing

Proceed in the reverse order to install the head restraint.

Rear head restraints

Safety information

Warning

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury.

- Before driving, install the removed head restraints on the occupied seats.
- Adjust the head restraint so its center supports the back of the head at as close to eye level as possible.
- Adjust the distance so that the head restraint is as close as possible to the back of the head. Adjust the distance via the backrest tilt as needed.

Warning


Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.

Warning

Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- Do not use seat or head restraint covers.
- Do not hang objects, for instance clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.
- Do not use any accessories, for instance pillows, while driving.


Adjusting the height

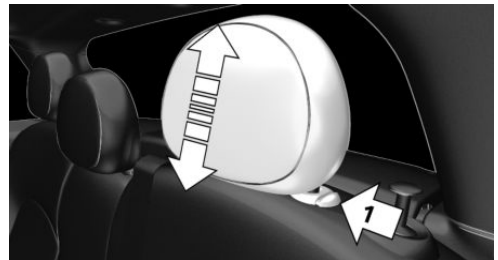

- To lower: press the button, arrow 1, and push the head restraint down.
- To raise: push the head restraint up.

After setting the height, make sure that the head restraint engages correctly.

Fold down

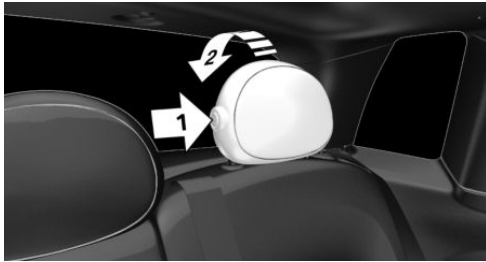

- To fold down: press the button, arrow 1, and press down the head restraint, arrow 2.
- Forward: fold the head restraint toward the front as far as it will go. Make sure that the head restraint engages correctly.

Removing

The head restraints cannot be removed.

Memory function

Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- Seat position.
- Exterior mirror position.
- Height of the Head-up Display.

General information

Different settings can be assigned to two memory locations.

The adjustment of the lumbar support is not stored.

Safety information

Warning

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.


Warning

Using the memory function while driving can lead to unexpected movements of the seat. Vehicle control could be lost. There is a risk of accident. Only retrieve the memory function when the vehicle is stationary.

Overview



Storing

1. Switch on the ignition.
2. Set the desired position.
3.  Press the button. The LED in the button lights up.
4. Press the desired button 1 or 2 while the LED is lit. The LED goes out.

Calling up settings

The stored position is called up automatically.

Press the desired button 1 or 2.

The procedure stops when a seat adjustment switch or one of the memory buttons is pressed.

Once underway, adjustment of the seat position on the driver's side is disabled after a short while.

Call up deactivated

After a brief period, calling up stored seat positions is deactivated to save battery power.

To reactivate calling up of a seat position:

- Open or close the door or tailgate.
- Press a button on the vehicle key.
- Press the Start/Stop button.

Mirrors

Exterior mirrors

General information

The mirror on the front passenger side is more curved than the driver's side mirror.

The mirror setting is stored for the driver profile currently in use. When the vehicle is unlocked via the vehicle key, the position is automatically retrieved if the function, refer to page 92, is activated for this purpose.

The current exterior mirror position can be stored using the memory function, refer to page 108.


Safety information

Warning

Objects reflected in the mirror are closer than they appear. The distance to the traffic behind could be incorrectly estimated, for instance while changing lanes. There is a risk of accident. Estimate the distance to

the traffic behind by looking over your shoulder.

Overview

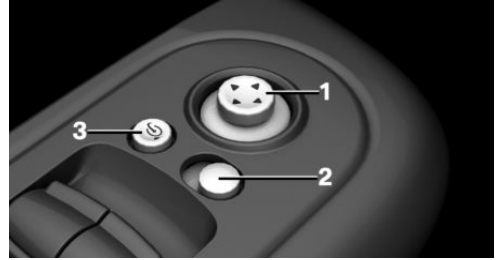

- 1 Adjusting
- 2 Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

Selecting a mirror



To change over to the other mirror:
Slide the switch.

Adjusting electrically



Press the button.

The mirror movement follows the button movement.


Malfunction

In case of an electrical malfunction, adjust the mirror by pressing the edges of the mirror glass.

Folding in and out

NOTICE

Depending on the vehicle width, the vehicle can be damaged in vehicle washes. There is a risk of damage to property. Before washing, fold in the mirrors by hand or with the button.

 Press the button.

Folding is only possible up to a speed of approx. 15 mph/20 km/h.

Folding the mirrors in and out is helpful in the following situations:

- In vehicle washes.
- On narrow roads.

Mirrors that were folded in are folded out automatically at a speed of approx. 25 mph/40 km/h.

Automatic heating

Both exterior mirrors are automatically heated as needed and when the ignition is switched on.

Automatic dimming feature


The exterior mirror on the driver's side is automatically dimmed. Photocells in the car's interior mirror, refer to page 111, are used to control this.

Automatic Curb Monitor, exterior mirror

Concept

If reverse gear is engaged, the mirror glass on the front passenger side is tilted downward. This improves your view of the curb and other formatting issue - low-lying obstacles when parking, for instance.

Activating


1.  slide the switch to the driver's side mirror position.
2. Engage selector lever position R.

Deactivating

Slide the switch to the passenger's side mirror position.


Interior mirror, manually dimmable

Flip lever

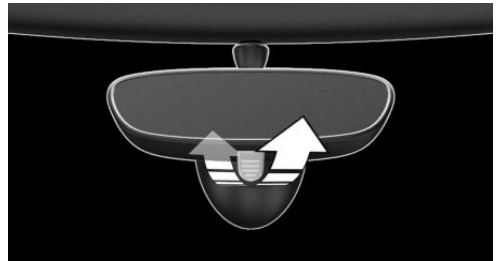

To reduce the blinding effect of the interior mirror, flip the lever forward.


Turn knob

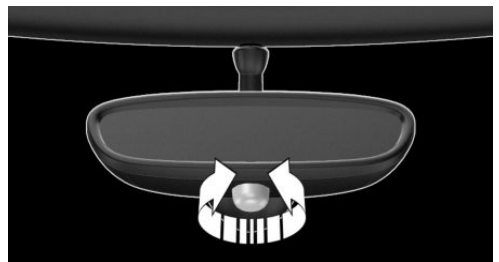

Turn the knob to reduce the blinding effect by the interior mirror.

Interior mirror, automatic dimming feature

Overview

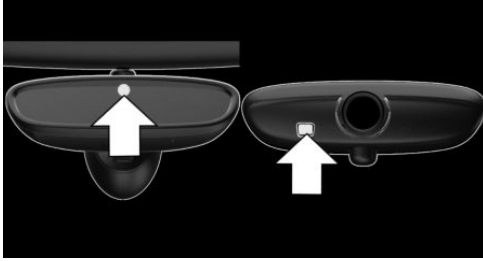

Photocells are used for control:

- In the mirror glass.
- On the back of the mirror.

Functional requirements

- Keep the photocells clean.
- Do not cover the area between the interior mirror and the windshield.


Steering wheel

Safety information

Warning

Steering wheel adjustments while driving can lead to unexpected steering wheel movements. Vehicle control could be lost. There is a risk of accident. Adjusting the steering wheel while the vehicle is stationary only.

Adjusting

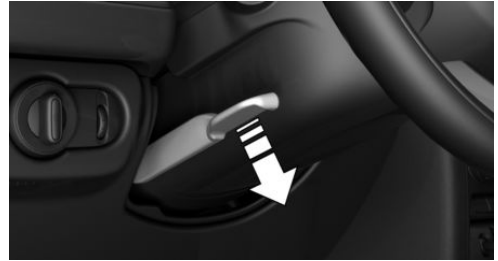

1. Fold the lever down.
2. Move the steering wheel to the preferred height and angle to suit your seating position.
3. Fold the lever back up.

Transporting children safely

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for

instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

The right place for children

Safety information

 **Warning**

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

child. Children 13 years of age or older must wear a safety belt as soon as a suitable child restraint system can no longer be used due to their age, weight, or size.

Safety information

 **Warning**

The safety belt cannot be fastened correctly on children shorter than 5 ft, 150 cm without suitable additional child restraint systems. The efficacy of safety gear, including safety belts, can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Secure children shorter than 5 ft, 150 cm using suitable child restraint systems.

Always transport children in the rear seat

General information

Accident research shows that the safest place for children is in the rear seat.

Transport children younger than 13 years of age or shorter than 5 ft/150 cm only in the rear seat in suitable child restraint systems designed for the age, weight and size of the

Children on the front passenger seat

General information

Before using a child restraint system on the front passenger seat, ensure that the front, knee, and side airbags on the front passenger side are deactivated. For automatic de-

activation of front-seat passenger airbags, refer to page 171.

Safety information

Warning

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSENGER AIRBAG OFF indicator light lights up.

Warning

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

Installing child restraint systems

General information

Pay attention to the specifications of the child restraint system manufacturer when selecting, installing, and using child restraint systems.

Safety information

Warning

The protective effect of child restraint systems and their fastening systems which have been damaged or exposed to an accident can be limited or lost. A child cannot be properly restrained in the event of an accident or braking and evasive maneuvers. There is a risk of injuries or danger to life.

Do not use child restraint systems which have been damaged or exposed to an accident.

If a child restraint system and its fastening system has been damaged or exposed to an accident, have these systems checked and replaced by the dealer's service center or another qualified service center or repair shop.

Warning

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

On the front passenger seat

Deactivating airbags

Warning

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSENGER AIRBAG OFF indicator light lights up.

Before installing a child restraint system in the front passenger seat, make sure that the front, knee and side airbags on the front passenger side are deactivated.

Deactivate the front-seat passenger airbags automatically, refer to page 171.

Seat position and height

Before installing a child restraint system, move the front passenger seat as far back as possible and adjust its height to the highest and thus best possible position for the belt and to offer optimal protection in the event of an accident.

If the upper anchorage of the safety belt is located in front of the belt guide of the child seat, move the front passenger seat carefully forward until the best possible belt guide position is reached.

Child seat security



The rear safety belts and the front passenger safety belt can be permanently locked to fasten child restraint systems.

Locking the safety belt

1. Pull out the belt strap completely.
2. Secure the child restraint system with the safety belt.
3. Allow the belt strap to be pulled in and pull it tight against the child restraint system. The safety belt is locked.

Unlocking the safety belt

1. Unbuckle the safety belt buckle.
2. Remove the child restraint system.
3. Allow the belt strap to be pulled in completely.

In some cases it may be necessary to separate the lower belt attachment. Safety belts, refer to page 104.

LATCH child restraint fixing system

General information

LATCH: Lower Anchors and Tether for Children.

Pay attention to the operating and safety information from the child restraint system

manufacturer when installing and using LATCH child restraint fixing systems.

Mounts for the lower LATCH anchors


The lower anchors may be used to attach the CRS to the vehicle seat up to a combined child and CRS weight of 65 lbs/30 kg when the child is restrained by the internal harnesses.

Safety information

Warning

If the LATCH child restraint fixing systems are not correctly engaged, the protective effect of the LATCH child restraint fixing system can be limited. There is a risk of injuries or danger to life. Make sure that the lower anchors are securely engaged and that the LATCH child restraint fixing system fits securely against the backrest.

Position

Symbol	Meaning
	<p>The corresponding symbol shows the mounts for the lower LATCH anchors.</p> <p>Seats equipped with lower anchors are marked with a pair, (2), of LATCH symbols.</p> <p>For vehicles equipped with a middle seat:</p> <p>It is not recommended to use the inner lower anchors of standard outer LATCH positions to fasten a child restraint system on the middle seat. Use the vehicle safety belt instead for the middle seat.</p>

Before installing LATCH child restraint fixing systems

Pull the safety belt away from the area of the child restraint system.

Assembly of LATCH child restraint fixing systems

1. Install child restraint system, see manufacturer's information.
2. Ensure that both LATCH anchors are properly connected.

Child restraint systems with tether strap

Safety information

Warning

If the upper retaining strap is incorrectly used for the child restraint system, the protective effect can be reduced. There is a risk of injury. Make sure that the upper retaining strap does not run over sharp edges and is not twisted as it passes the upper anchor.

Warning

If the rear backrest is not locked, the protective effect of the child restraint system is limited or there is none. In certain situations, for instance braking maneuvers or in case of an accident, the rear backrest can fold forward. There is a risk of injuries or danger to life. Make sure that the rear backrests are locked.

NOTICE


The anchors for the upper retaining straps of child restraint systems are only provided for these retaining straps. When other objects are mounted, the anchors can be damaged. There is a risk of damage to property. Only mount child restraint systems to the upper anchors.

Anchors



The respective symbol shows the anchor for the upper retaining strap. Seats with an upper top tether are marked with this symbol. It can be found on the rear seat backrest or the rear window shelf.

Routing the retaining strap

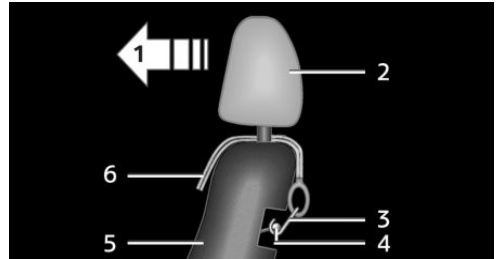

- 1 Direction of travel
- 2 Head restraint
- 3 Hook for upper retaining strap
- 4 Anchor
- 5 Seat backrest
- 6 Upper retaining strap

Attaching the upper retaining strap to the anchor

1. Raise the head restraint, if needed.
2. On the rear seat: Guide the upper retaining strap between or along both sides of the supports of the head restraint to the anchor.
3. Attach the hook of the retaining strap to the anchor on the rear seat.
4. Tighten the retaining strap by pulling it down.

Locking the doors and windows

Doors



Push the locking lever on the rear doors up. The door can now be opened from the outside only.

Safety switch for the rear



Press the button on the driver's door if children are being transported in the rear.

This locks various functions so that they cannot be operated from the rear: safety switch, refer to page [96](#).

Driving

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Start/Stop button, drive-ready state

Concept



The following ready states can be attained by pressing the Start/Stop button:

- Radio-ready state on/off.
- Ignition on/off.

- Activate/deactivate drive-ready state.

To activate drive-ready state, you need to press the brake pedal at the same time.

The drive-ready state cannot be activated as long as the charging cable, refer to page 256, is connected.

Switching radio-ready state on/off

The radio-ready state is activated by pressing the Start/Stop button in the following situations:

- When the engine is running.
- When drive-ready state is activated.

- When the engine is switched off automatically using the Auto Start/Stop function.

Some electronic systems/power consumers remain ready for operation.

Radio-ready state is switched off automatically:

- If the driver's or front passenger door is opened when exiting the vehicle, with drive-ready state switched off manually.
- If the ignition is switched off manually with the Start/Stop button.
- After approx. 8 minutes.
- When the vehicle is locked using the central locking system.
- Shortly before the battery is discharged completely, so that the engine can still be started.

If the engine is switched off and the ignition is switched on, the system automatically switches to the radio-ready state if the lights are switched off or, if correspondingly equipped, the daytime running lights are switched on.

Ignition on

Press the Start/Stop button, but do not press on the brake pedal at the same time.

All vehicle systems are ready for operation.

Most of the indicator/warning lights in the instrument cluster light up for a varied length of time.

To save battery power when the engine is off, switch off the ignition and any unnecessary electronic systems/power consumers.

Ignition off

Press the Start/Stop button again without stepping on the brake.

All indicator lights in the instrument cluster go out.

To save battery power when the engine is off, switch off the ignition and any unnecessary electronic systems/power consumers.

Safety measures

The ignition is switched off automatically in the following situations while the vehicle is stationary and the engine is off:

- When locking the vehicle, even if the low beams are switched on.
- Shortly before the battery is discharged completely, so that the engine can still be started. This function is only available when the low beams are switched off.
- When opening or closing the driver door, if the driver's safety belt is unbuckled and the low beams are switched off.
- While the driver's safety belt is unbuckled with driver's door open and low beams off.
- When the front doors are opened if there is no other person sitting in the front seats.

The low beams switch to parking lights after approx. 10 minutes of no use.

When the ignition is switched off automatically by opening or closing the driver's door, unbuckling the driver's safety belt or by the automatic switching of the low beams to parking lights, the radio-ready state remains active.

Drive-ready state

When drive-ready state is activated, the vehicle is operational. Activated drive-ready state is the equivalent of a running engine in conventional vehicles. Deactivated drive-ready state is equivalent to switching the engine off.

Drive-ready state in detail

Concept

The following are the different drive-ready state variants:

- Electric drive-ready state, refer to page 120.
The vehicle is powered by the electric motor.
- Starting of combustion engine, refer to page 120.
The vehicle is powered by the combustion engine.

Safety information

DANGER

If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain pollutants which are colorless and odorless. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

Warning

When driving in electric mode, pedestrians and other traffic might pay less attention to the vehicle due to the lack of engine noise. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Warning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

Warning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- Pressing the Start/Stop button.
- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

Activating drive-ready state

1. Close the driver's door.
2. Depress the brake pedal.
3. Press the Start/Stop button.

Depending on the prerequisite, the electric drive-ready state is possible or the engine can be started.

Electric drive-ready state

General information

The vehicle is ready for driving without starting the combustion engine.

Functional requirement

Electric drive-ready state is possible, if the prerequisites for electric driving, refer to page 122, are fulfilled.

Display



READY indicates drive-ready state.

Combustion engine start

Functional requirements

The combustion engine is started with activation of the drive-ready state, refer to page 120, under the following conditions:

- The temperature of the hybrid system is too high or too low.
- The high-voltage battery has an insufficient charge.

Driving away

1. Activate drive-ready state.
2. Engage selector lever position D, M/S or R.
3. Release the parking brake.
4. Drive away.

Deactivating drive-ready state

After stopping the vehicle:

1. Set the parking brake.
2. Engage selector lever position P.
3. Press the Start/Stop button.

After parking the vehicle, you may hear noises due to operation of the hybrid system, such as for cooling of the high-voltage battery.

Safety measure

The drive-ready state is deactivated automatically after approx. 10 minutes when the vehicle is stationary if, with the selector lever in position P or N, the driver's door has been opened and neither the brake pedal nor the accelerator pedal have been depressed.

Before driving into a vehicle wash

So that the vehicle can roll into a vehicle wash, follow instructions for going into an automatic vehicle wash, refer to page 314.

Auto Start/Stop function

Concept

The Auto Start/Stop function helps save fuel. The system switches off the combustion engine when conditions for electric driving have been met. The ignition or drive-ready state remains switched on.

General information

READY is displayed in the instrument cluster. If necessary, the combustion engine starts automatically.

The combustion engine is also stopped during the trip when rolling without acceleration or braking. This driving condition, in which the vehicle is traveling without

power and energy recovery is not active, is referred to as coasting, refer to page 124.

The combustion engine is not switched off automatically in the following situations:

- The combustion engine is not at operating temperature.
- The transmission selector lever is in position M/S.
- High-voltage battery is heavily discharged or vehicle electrical system is heavily burdened.
- High stress of the automatic climate control in the heating or cooling phase.
- The hood is unlocked.
- The vehicle is being optimized for the current driving style, for instance during the break-in period or after a service appointment.
- The hybrid system is malfunctioning.

Safety mode

An automatically stopped combustion engine does not start independently:

- When the driver's door is open and neither the brake nor accelerator pedal are depressed.
- When the hood is unlocked.

The indicator lights come on. The combustion engine can only be started via the Start/Stop button.

Switching off the vehicle during an automatic engine stop

During an automatic engine stop, the vehicle can be switched off permanently, for instance when leaving it.

1. Press the Start/Stop button.
 - The ignition is switched off.
 - The radio-ready state is activated.

- The Auto Start/Stop function is deactivated.
- Engage selector lever position P.

2. Set the parking brake.

Malfunction

The Auto Start/Stop function no longer switches off the combustion engine automatically in the event of a malfunction. A message is displayed. It is possible to continue driving. Have the system checked.

Electric driving: ePOWER

General information

In ePOWER, the vehicle is driven by electric power only. ePOWER works automatically.

Depending on the charge state of the high-voltage battery, maximum speed and range achieved can vary.

For electrical driving, certain conditions, refer to page 122, must be satisfied.

Displays of the hybrid system, refer to page 141.

Safety information

Warning

When driving in electric mode, pedestrians and other traffic might pay less attention to the vehicle due to the lack of engine noise. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Functional requirements

- State of charge and temperature of the high-voltage battery is sufficient.

- Selector lever position D or R engaged.
- The accelerator pedal is not depressed too far.
- The possible maximum speed for electric driving is not exceeded.
- The driver's door is closed.
- MID or GREEN driving mode is selected.

eDRIVE button

General information

Using the eDRIVE button, the characteristics of the hybrid system can be adjusted.

- MAX eDrive, refer to page 123
- Auto eDRIVE, refer to page 122
- SAVE BATTERY, refer to page 123

To switch between the individual function modes, press the eDRIVE button up or down.

Overview



eDRIVE eDRIVE button

Auto eDRIVE

General information


Auto eDRIVE is activated by default when the vehicle is started via the Start/Stop button.

In Auto eDRIVE, the vehicle is driven in hybrid mode corresponding to the various

driving situations, i.e. the drive combines combustion engine and electric motor. The respectively most effective drive type is preferred.

MAX eDRIVE

General information

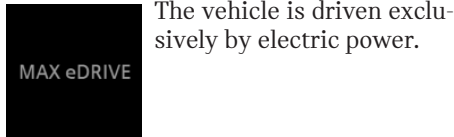

If necessary, the maximum electrical speed that applies to MAX eDRIVE may be deliberately exceeded with the aid of kickdown, refer to page 138. The combustion engine is automatically started and the system switches to AUTO eDRIVE mode. Automatic starting of the engine while driving, refer to page 124.

Activating MAX eDRIVE


 Press the button up repeatedly, until MAX eDRIVE is displayed in the instrument cluster.

When pressing the button, the current eDRIVE setting is graphically displayed on the Control Display.


Specifying eMAX eDRIVE as the default mode

MAX eDRIVE can be specified as the default mode instead of AUTO eDRIVE.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Configure MAX eDRIVE"
4. "MAX eDRIVE by default"


Using the button:

1.  Activate with the MAX eDRIVE button.
2. "Configure MAX eDRIVE"
3. "MAX eDRIVE by default"

The function is available, if the prerequisites for electric driving are fulfilled, refer to page 122.

SAVE BATTERY

General information

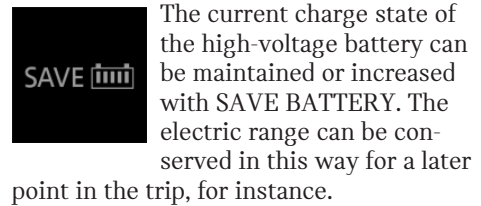


This charging process increases the average consumption.

The acceleration boost by the electric motor may be restricted.

The function is only available if sufficient fuel is available and in selector lever position D.

Activating SAVE BATTERY

 Press the button down repeatedly, until SAVE with the battery symbol is displayed in the instrument cluster.

When pressing the button, the current eDRIVE setting is graphically displayed on the Control Display.

Auto Start/Stop function, coasting

Concept

The combustion engine is automatically stopped and disengaged from the drivetrain. This driving condition of rolling is referred to as coasting.

Functional requirements

Coasting is possible:

- The high-voltage battery is sufficiently charged.
- Transmission position D is engaged.
- The drive system is at operating temperature.
- GREEN Mode: when coasting, without operating the brake, at speeds below 100 mph, approx. 160 km/h.

After coasting, the combustion or electric motor restarts depending on the operating state.

Acoustic pedestrian protection

Concept

Depending on the country-specific version, the system generates a continuous driving noise at standstill with the drive-ready state activated and during electric driving up to approx. 20 mph/30 km/h.

A speaker system broadcasts the noise to the surroundings.

As a result, other road users, for instance pedestrians or cyclists, can better perceive the vehicle.

Driving with the combustion engine: POWER

Concept

The combustion engine provides the main drive power to move the vehicle. If required, the high-voltage battery is charged at the same time.

Functional requirements

Automatic starting while driving

The combustion engine is automatically started under the following conditions while driving:

- When accelerating heavily or on uphill grades.
- By pressing the accelerator pedal beyond the resistance point at the full throttle position, kickdown.
- The high-voltage battery has an insufficient charge.
- Selector lever position M/S is engaged.
- The speed for electric driving is exceeded while accelerating.
- Adapting to the course of the road when destination guidance is activated.
- System-related demand from the hybrid components.

Automatic switching off while driving

When reducing speed, the combustion engine is switched off when the conditions for electric driving, refer to page 122, are met.

Assistance from the electric motor

Concept

The combustion engine provides the main drive power to move the vehicle.

The electric motor provides assistance as needed with additional propulsive power.

eASSIST

During normal vehicle operation, the electric motor assists the combustion engine, depending on the situation. This assistance reduces fuel consumption.

eBOOST

Accelerating quickly, such as when passing, requires the maximum available power from the electric motor. To do this, depress the accelerator pedal firmly.

Energy recovery: CHARGE

Concept

The hybrid system makes it possible to convert kinetic energy into electrical energy during braking and coasting. This recovered energy charges the high-voltage battery. If necessary, this stored electrical energy is output to the electric motor.

General information

Depending on the setting of the MINI Driving Modes switch, the high-voltage battery is charged at different speeds and the vehicle is decelerated differently while coasting.

Functional requirements

Conditions such as the following must be met to recover kinetic energy:

- The vehicle is moving.
- Selector lever position D, M/S is set.
- The high-voltage battery is not fully charged.

Displays in the instrument cluster

Energy recovery displays in the instrument cluster, refer to page 142.

Parking brake

Concept

The parking brake is used to prevent the vehicle from rolling when it is parked.

Safety information

Warning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

Warning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- Pressing the Start/Stop button.

- Releasing the parking brake.
- Opening and closing the doors or windows.
- Engaging selector lever position N.
- Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.


Overview




 Parking brake

Setting

With a stationary vehicle

-  Pull the switch.
The LED lights up.


 The indicator light lights up red. The parking brake is set.

Depending on the stopping situation, the parking brake is engaged automatically.

Steptronic transmission: in some parking situations, the parking brake is automatically engaged, when selector lever position P is engaged. In these cases, the parking brake is released automatically when you leave the selector lever position P.

While driving

To use as emergency brake while driving: Pull the switch and hold it. The vehicle brakes hard while the switch is being pulled.


 The indicator light lights up red, a signal sounds and the brake lights light up.

A Check Control message is displayed.

If the vehicle is decelerated to a complete stop, the parking brake is engaged.

Releasing

Releasing manually

1. Switch on the ignition.
2.  Steptronic transmission: press the switch while the brake is pressed or selector lever position P is set.
The LED and indicator light go out.
The parking brake is released.

Automatic release in cars with Steptronic transmission

For automatic release, step on the accelerator pedal.

The LED and indicator light go out.

The parking brake is automatically released when you step on the accelerator under the following conditions:

- Engine on.
- Drive mode engaged.
- Driver buckled in and doors closed.

Malfunction


If the parking brake fails or malfunctions, secure the vehicle against rolling before exiting.

A Check Control message is displayed.


Secure the vehicle against rolling away, for instance with a wheel chock, after exiting the vehicle.

After a power failure

Re-activating the parking brake

1. Switch on the ignition.
2.  Press the switch while stepping on the brake pedal or selector lever position P is set.


It may take several seconds for the brake to be reactivated. Some mechanical sounds associated with this process are normal.

 The indicator light in the instrument cluster goes out as soon as the parking brake is ready for operation.

Turn signal, high beams, headlight flasher

Turn signal

Using turn signals

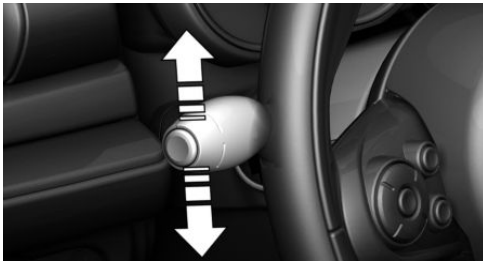


Press the lever past the resistance point.
Canada: the lever returns into its starting position after actuation. To switch off manually, slightly tap the lever to the resistance point.

Triple turn signal activation

Lightly tap the lever up or down.

The triple turn signal duration can be adjusted.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Lighting"
4. "Exterior lighting"
5. "One-touch turn signal"
6. Select the desired setting.

Settings are stored for the profile currently used.

Signaling briefly

Press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

Malfunction

Unusually rapid flashing of the indicator light indicates that a turn signal bulb has failed.

High beams, headlight flasher

Push the lever forward or pull it backward.



- High beams on, arrow 1.
The high beams light up when the low beams are switched on.

- High beams off/headlight flasher, arrow 2.

Wiper system

General information

Do not use the wipers if the windshield is dry, as this may damage the wiper blades or cause them to become worn more quickly.

Safety information

Warning

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

NOTICE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

Switching on



Press the lever up until the desired position is reached.

- Resting position of the wipers, position 0.
- Intermittent operation or rain sensor, position 1.
- Normal wiper speed, position 2.
- Fast wiper speed, position 3.

When travel is interrupted with the wiper system switched on: when travel continues, the wipers resume at their previous speed.

Switching off and brief wipe



Press the lever down.

- Switching off: press the lever down until it reaches its standard position.
- Brief wipe: press the lever down from the standard position.

The lever automatically returns to its initial position when released.

Interval mode or rain sensor

Concept

The rain sensor automatically controls the time between wipes depending on the intensity of the rainfall.

General information

The sensor is located on the windshield, directly in front of the interior mirror. Without the rain sensor, the frequency of the wiper operation is preset.

Safety information

NOTICE

If the rain sensor is activated, the wipers can accidentally start moving in vehicle washes. There is a risk of damage to property. Deactivate the rain sensor in vehicle washes.

Activating



Press the lever up once from its standard position, arrow 1.

Wiping is started.

The LED in the wiper lever is illuminated.

In frosty conditions, wiper operation may not start.

Deactivating

Press the lever back into the standard position.

Setting the frequency or sensitivity of the rain sensor



Turn the thumbwheel.

With deactivated rain sensor: set the interval.

With activated rain sensor: set the rain sensor sensitivity.

Up: short interval or high sensitivity of the rain sensor.

Down: long interval or low sensitivity of the rain sensor.

Windshield washer system

Safety information

Warning

The washer fluid can freeze onto the window at low temperatures and obstruct the view. There is a risk of accident. Only use the washer systems, if the washer fluid cannot freeze. Use washer fluid with anti-freeze, if needed.

NOTICE

When the washer fluid reservoir is empty, the wash pump cannot work as intended. There is a risk of damage to property. Do not use the washer system when the washer fluid reservoir is empty.

Cleaning the windshield



Pull the lever.

The system sprays washer fluid on the windshield and activates the wipers briefly.

Windshield washer nozzles

The washer jets are automatically heated whenever the ignition is switched on.

Rear window wiper

Overview



Switching on

Turn the outer switch upward.

- Resting position of the wiper, position 0.
- Intermittent mode, arrow 1. When reverse gear is engaged, the system switches to continuous operation.

Clean the rear window

Turn the outer switch in the desired direction.

- In resting position: turn the switch downward, arrow 3. The switch automatically returns to its idle position when released.
- In intermittent mode: turn the switch further, arrow 2. The switch automatically returns to its interval position when released.

The function is deactivated if the washer fluid reservoir level is low.

Fold-away position of the wipers

Concept

The fold-away position enables the wipers to be folded away from the windshield.

General information

Helpful when changing the wiper blades or under frosty conditions, for instance.

Safety information

Warning

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

⚠ NOTICE


If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

Folding away the wipers

1. Switch the ignition on and off again.
2. Press and hold the wiper lever down, until the wipers stop in a close to vertical position.



3. Fold the wipers all the way away from the windshield.

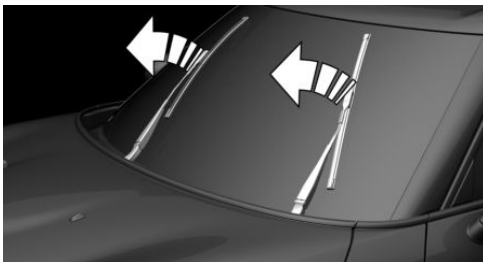**Folding down the wipers**

After the wipers are folded back down, the wiper system must be reactivated.

1. Fold the wipers back down onto the windshield.
2. Switch on the ignition.

3. Push wiper lever down. Wipers return to their resting position and are ready again for operation.

Canada: wiper system**General information**

Do not use the wipers if the windshield is dry, as this may damage the wiper blades or cause them to become worn more quickly.

Safety information**⚠ Warning**

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

⚠ NOTICE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

Switching on



Tap up the lever or press it past the resistance point.

- Normal wiper speed: tap up once.
- Fast wiper speed: tap up twice or tap once beyond the resistance point.

The lever automatically returns to its initial position when released.

Switching off and brief wipe



Press the lever down.

- To switch off from fast wiper speed: press down twice.
- To switch off from normal wiper speed: press down once.
- Brief wipe: press down once.

The lever automatically returns to its initial position when released.

Interval mode or rain sensor

Concept

The rain sensor automatically controls the time between wipes depending on the intensity of the rainfall.

General information

The sensor is located on the windshield, directly in front of the interior mirror. Without the rain sensor, the frequency of the wiper operation is preset.

Safety information

NOTICE

If the rain sensor is activated, the wipers can accidentally start moving in vehicle washes. There is a risk of damage to property. Deactivate the rain sensor in vehicle washes.

Activating/deactivating



Press the button on the wiper lever.

Wiping is started.

The LED in the wiper lever is illuminated.

In frosty conditions, wiper operation may not start.

If a journey is interrupted with the rain sensor switched on: if the trip is resumed within approx. 15 minutes, the rain sensor is automatically activated again.

Setting the frequency or sensitivity of the rain sensor



Turn the thumbwheel.

With deactivated rain sensor: set the interval.

With activated rain sensor: set the rain sensor sensitivity.

Up: short interval or high sensitivity of the rain sensor.

Down: long interval or low sensitivity of the rain sensor.

Windshield washer system

Safety information

Warning

The washer fluid can freeze onto the window at low temperatures and obstruct the view. There is a risk of accident. Only use the washer systems, if the washer fluid cannot freeze. Use washer fluid with anti-freeze, if needed.

NOTICE

When the washer fluid reservoir is empty, the wash pump cannot work as intended. There is a risk of damage to property. Do not use the washer system when the washer fluid reservoir is empty.

Cleaning the windshield



Pull the lever.

The system sprays washer fluid on the windshield and activates the wipers briefly.

Windshield washer nozzles

The washer jets are automatically heated whenever the ignition is switched on.

Rear window wiper

Overview



Switching on

Turn the outer switch upward.

- Resting position of the wiper, position 0.
- Intermittent mode, arrow 1. When reverse gear is engaged, the system switches to continuous operation.

Clean the rear window

Turn the outer switch in the desired direction.

- In resting position: turn the switch downward, arrow 3. The switch automatically returns to its idle position when released.
- In intermittent mode: turn the switch further, arrow 2. The switch automatically returns to its interval position when released.

The function is deactivated if the washer fluid reservoir level is low.

Fold-away position of the wipers

Concept

The fold-away position enables the wipers to be folded away from the windshield.

General information

Helpful when changing the wiper blades or under frosty conditions, for instance.

Safety information

Warning

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

NOTICE


If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

Folding away the wipers

1. Switch the ignition on and off again.
2. Press the wiper lever up past the point of resistance and hold it for approx. 3 seconds, until the wipers remain in a nearly vertical position.



3. Fold the wipers all the way away from the windshield.

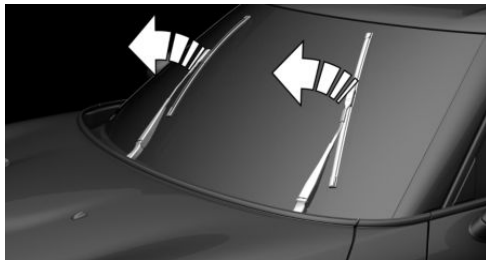

Folding down the wipers

After the wipers are folded back down, the wiper system must be reactivated.

1. Fold the wipers back down onto the windshield.
2. Switch on the ignition.
3. Push wiper lever down. Wipers return to their resting position and are ready again for operation.

Washer fluid

General information

All washer nozzles are supplied from one reservoir.

Use a mixture of tap water and windshield washer concentrate. If desired, a windshield washer concentrate containing antifreeze can be used.

Recommended minimum fill quantity:
0.2 US gal/1 liter.

Safety information

Warning

Some antifreeze agents can contain harmful substances and are flammable. There is a risk of fire and a risk of injury. Follow the instructions on the containers. Keep antifreeze away from ignition sources. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

United States: the washer fluid mixture ratio is regulated by the U.S. EPA and many individual states; do not exceed the allowable washer fluid dilution ratio limits that apply. Follow the usage instructions on the washer fluid container.

Use of BMW's Windshield Washer Concentrate or the equivalent is recommended.

Warning

Washer fluid can ignite and catch fire on contact with hot engine parts. There is a risk of injury or risk of damage to property. Only add washer fluid when the engine is cooled down. Next, fully close the lid of the washer fluid reservoir.

NOTICE

Silicon-containing additives in the washer fluid for the water-repelling effect on the windows can lead to damage to the washing system. There is a risk of damage to property. Do not add silicon-containing additives to the washer fluid.

NOTICE

Mixing different windshield washer concentrates or antifreeze can damage the washing system. There is a risk of damage to property. Do not mix different windshield washer concentrates or antifreeze. Follow the information and mixing ratios provided on the containers.

Overview



The washer fluid reservoir is located in the engine compartment.

Malfunction

The use of undiluted windshield washer concentrate or alcohol-based antifreeze can lead to incorrect readings at temperatures below +5 °F/-15 °C.

Steptronic transmission

Concept

The Steptronic transmission combines the functions of an automatic transmission with the possibility of manual shifting, if needed.

Safety information

Warning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

Selector lever version

General information

Depending on the vehicle equipment, a transmission with either a latching selector lever or a tap-operated selector lever is installed.

Transmission with a latching selector lever



The selector lever positions P, R, N, and D are selected by moving the selector lever into the respective selector lever position. The selector lever engages in the selector lever positions.

Selector lever positions

Drive mode D

Selector lever position for normal vehicle operation. All gears for forward travel are activated automatically.

R is reverse

Engage selector lever position R only when the vehicle is stationary.

Neutral N

The vehicle may be pushed or roll without engine power in selector lever position N, for instance in vehicle washes, refer to page 137.

Parking position P

General information

Selector lever position, for instance for parking the vehicle.

The transmission blocks the drive wheels in selector lever position P.

Engage selector lever position P only when the vehicle is stationary.

Before exiting the vehicle, make sure that selector lever position P is set. Otherwise, the vehicle may begin to move.

Engaging selector lever positions: with a latching selector lever

General information

To prevent the vehicle from creeping after you select a drive mode, maintain pressure on the brake pedal until you are ready to start.

Functional requirements

The selector lever can only be taken out of selector lever position P if the ignition is on or the engine is running.

Engaging selector lever position D, N, R, or P

With the vehicle stationary, depress the brake pedal before shifting out of selector lever position P or N; otherwise, the shift block will not be deactivated and the shift command will not be executed.

A selector lever lock prevents the following faulty operation:

- Unintentional shifting into selector lever position P or R.

- Unintentional shifting from selector lever position P into another selector lever position.
1. To release the selector lever lock: with the brake pedal depressed, press the button on the front of the selector lever.



2. Move the selector lever into the desired position.



Rolling or pushing the vehicle

General information

In some situations, the vehicle is to roll without its own power for a short distance, for instance in a vehicle wash, or be pushed.

Engaging selector lever position N: with a latching selector lever

1. Switch on drive-ready state.
2. If necessary, release the parking brake.
3. Depress the brake pedal.
4. Touch the selector lever lock and engage selector lever position N.
5. Release brake.

The vehicle can roll.

If there is a malfunction, you may not be able to change the selector lever position.

Manually unlock the transmission lock, if needed, refer to page 139.

Kickdown

Kickdown is used to achieve maximum driving performance. Step on the accelerator pedal beyond the resistance point at the full throttle position.

Sport program M/S

Concept

The shifting points and shifting times in the Sport program are designed for a sportier driving style. The transmission, for instance shifts up later and the shifting times are shorter.

Activating the Sport program



Press the selector lever to the left from selector lever position D.

The engaged gear is displayed in the instrument cluster, for instance S1.

The sport program of the transmission is activated.

eDRIVE electric driving and the Auto Start Stop function are deactivated. Coasting to a standstill and braking phases are used more often to recover energy. Depending on the driving situation, the high-voltage battery is

charged at different speeds. Fuel consumption can increase.

Ending the Sport program

Push the selector lever to the right.

D is displayed in the instrument cluster.

Manual mode M/S

Concept

Manual gear-shifting is possible in manual mode.

Activating manual mode

1. Press the selector lever to the left from selector lever position D, arrow 1.



2. Push the selector lever forward or pull it backward, arrows 2.

Manual mode M/S becomes active and the gear is changed.

The engaged gear is displayed in the instrument cluster, for instance M1.

Shifting

- To shift down: press the selector lever forward.
- To shift up: pull the selector lever rearwards.

The Steptronic transmission continues shifting automatically in certain situations, for instance when certain engine speed limits are reached.

Ending the manual mode

Push the selector lever to the right.

D is displayed in the instrument cluster.

Displays in the instrument cluster



The selector lever position is displayed, for example P.

Releasing the transmission lock manually: with a latching selector lever

If the selector lever is locked in selector lever position P despite the ignition being switched on, the brake pedal being depressed and the button on the selector lever being pressed, the transmission lock can be unlocked manually:


Before unlocking the transmission lock manually, set the parking brake to prevent the vehicle from rolling away.

1. Loosen the selector lever sleeve, together with the lower retaining ring, from the center console. To do so, pull the retaining ring upward at the rear edge.



2. Lift the sleeve. Unplug the cable connector, if needed.
3. Using the screwdriver from the onboard vehicle tool kit, refer to page 296, press

the yellow release lever downward, see arrow.

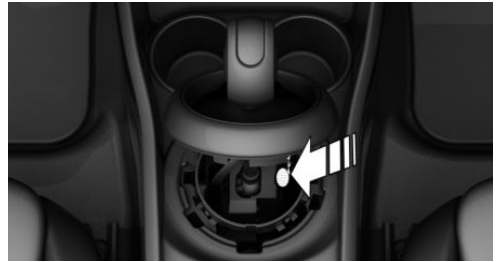

4. Press the button on the front of the selector lever and move the selector lever back slightly.
Release the release lever.
5. Bring the selector lever into the desired position.

For additional information, see the chapter on tow-starting and towing.

Displays


Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for

instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Instrument cluster


Overview

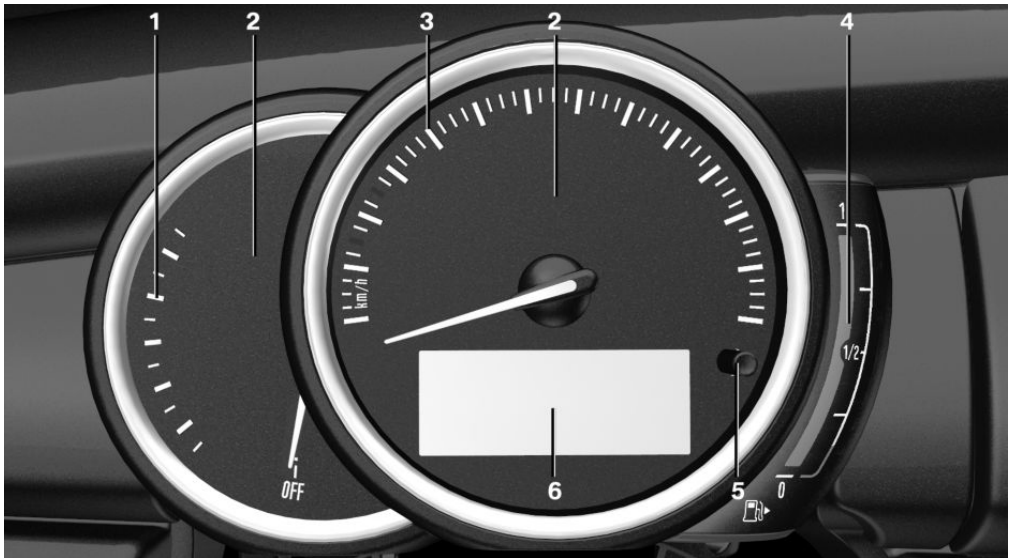

- 1 Displays of the hybrid system [141](#)
- 2 Indicator/warning lights
- 3 Speedometer


- 4 Fuel gauge [148](#)
- 5 Display/reset miles [148](#)
- 6 Electronic displays [141](#)

Electronic displays

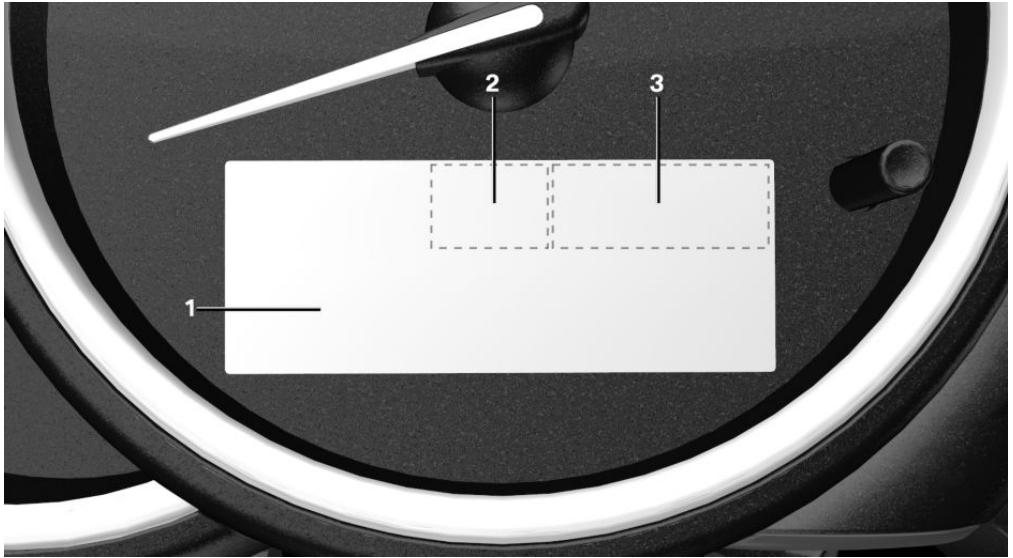

- | | |
|---|---|
| <p>1 Driver assistance systems
Messages, for instance Check Control
Time 148
External temperature 148
Selection lists 153
Total miles/trip odometer 148</p> | <p>Onboard Computer 153
Charging screen 141</p> <p>2 Selector lever position 136</p> <p>3 MINI Driving Modes switch status 191
eDRIVE mode status 122</p> |
|---|---|

Charging screen

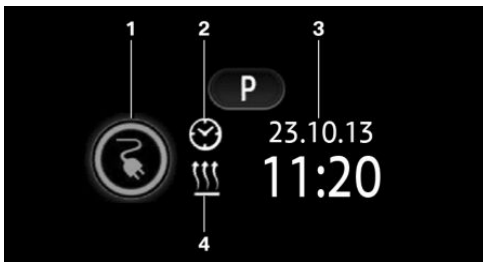

- 1 Charging status [261](#)
- 2 Timer, departure time [261](#)
- 3 End of charging time [261](#)

- Departure time with timer [261](#)
- 4 Stationary climate control [261](#)

Displays of the hybrid system

Displays in the instrument cluster

General information

The following functions of the hybrid system are displayed:

- High-voltage battery charge indicator, refer to page [142](#).

- Drive-ready state: READY, refer to page 142.
- Electric driving: ePOWER, refer to page 142.
- Energy recovery: CHARGE, refer to page 142.
- Acceleration boost: eBOOST, refer to page 142.
- Electric driving: MAX eDRIVE, refer to page 143.
- SAVE BATTERY, refer to page 143.

The display depends on the system's operating condition.

High-voltage battery charge indicator


The Onboard Computer in the instrument cluster can indicate the charge state of the high-voltage battery.

Drive-ready state: READY



READY indicates drive-ready state. For further information, see Drive-ready state in detail, refer to page 119.

Electric driving: ePOWER

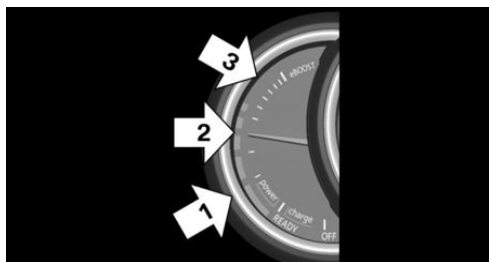


In ePOWER mode, the range for electric driving is colored yellow, arrow 1. The range highlighted in yellow can vary depending on the driving situation and eDRIVE mode.

A pointer indicates the power outputted by the hybrid drive in a scale, arrow 2.

If the pointer is outside the range highlighted in yellow, the combustion engine is switched on, arrow 3.

For further information, refer to Electric driving: ePOWER.


Energy recovery: CHARGE

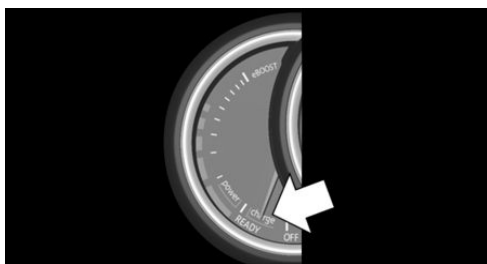

Energy recovery during coasting and braking is indicated as CHARGE in the instrument cluster depending on the driving mode, see arrow. The high-voltage battery is charged. If the high-voltage battery is completely charged, no energy can be recovered.

For further information, please refer to Energy recovery CHARGE, refer to page 125.

Acceleration boost: eBOOST

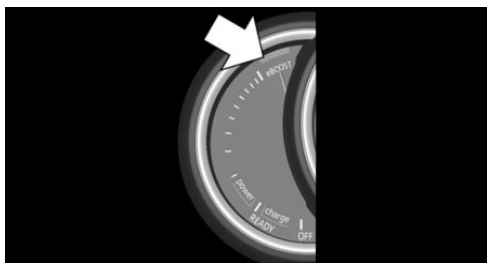

If the electric motor supports the combustion engine, for instance during rapid acceleration, eBOOST, refer to page 125, is displayed. Depending on the available charge

state of the high-voltage battery, there could be more or less eBOOST available. If the charge state of the high-voltage battery is low, eBOOST may not be available.

Electric driving: MAX eDRIVE



The display becomes active after MAX eDRIVE, refer to page 123, is activated via the eDRIVE button.

SAVE BATTERY



The display becomes active after SAVE BATTERY, refer to page 123, is activated via the eDRIVE button.

The high-voltage energy available for electric driving is conserved for a later point in the trip.

Indications on the Control Display

Current vehicle state

General information

The following are displayed:

- Active components of the hybrid system:
 - Orange: energy flow of the combustion engine.
 - Yellow: energy flow of the hybrid system.
- Vehicle states:
 - ePOWER.
 - POWER.
 - eBOOST.
 - CHARGE.
 - Coasting.
 - Charging.

- System requirements of the hybrid system, for instance drive system not yet warmed up to operating temperature.
- Driver request, for instance transmission selector lever in the M/S position.

Displaying the energy flow

Via the Central Information Display (CID):

1.  "My MINI"
2. "Technology in action"
3. "eDRIVE"

Adapting to the course of the road

Concept

When the navigation system destination guidance is active, hybrid operation adapts to specific route sections.

The hybrid system is used to optimum effect.

Situations which are already underway and situations ahead are detected, indicated on the Control Display, and the hybrid drive is adapted and prepared for them.

The function may be restricted if the navigation data is invalid, outdated or not available, for example.


Functional requirements

- Selector lever position D engaged.
- AUTO eDRIVE hybrid mode is activated.


Displaying the adaptation to the course of the road

Via the Central Information Display (CID):

1.  "My MINI"
2. "Technology in action"
3. "eDRIVE"

 The symbol on the Control Display indicates that the function is active.

Display

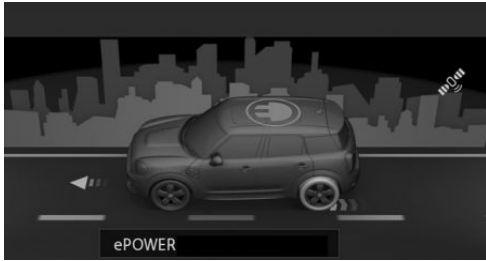

Example: residential area or area with low speed limits. ePOWER electric driving is being prepared. When the residential area is reached, electric driving takes precedence.

Other situations are also shown on the Control Display:

- Downhill gradients: the system is ready to charge the high-voltage battery.
- Target zone: ePOWER electric driving is being prepared.
- GREEN Mode:
Energy distribution: the electrical energy is conserved for a later point.

Check Control

Concept

The Check Control system monitors functions in the vehicle and notifies you of malfunctions in the monitored systems.

General information

A Check Control message is displayed as a combination of indicator or warning lights and text messages in the instrument cluster and in the Head-up Display.

In addition, an acoustic signal may be output and a SMS text message may appear on the Control Display.

Indicator/warning lights

General information

The indicator/warning lights can light up in a variety of combinations and colors.

Several of the lights are checked for proper functioning and light up temporarily when the engine is started or the ignition is switched on.

Red lights

Safety belt reminder



Indicator light flashes or is illuminated: safety belt on the driver or passenger side is not buckled. The safety belt reminder can also be activated if objects are placed on the front passenger seat.

Make sure that the safety belts are positioned correctly.

Airbag system



Airbag system and belt tensioner may not be working.

Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.

Parking brake



The parking brake is set.

For releasing the parking brake, refer to page 126.

Brake system



Braking system impaired. Continue to drive moderately.

Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.

Approach control warning



Indicator light illuminates: advance warning is issued, for example when there is the impending danger of a collision or the distance to the vehicle ahead is too small.

Increase the distance.

Indicator light flashes: acute warning of the imminent danger of a collision when the vehicle approaches another vehicle at a relatively high differential speed.

Intervene by braking or make an evasive maneuver.

Person warning



If a collision with a detected person is imminent, the symbol lights up and a signal sounds.

Orange lights

Active Cruise Control



The number bars shows the selected distance from the vehicle driving ahead.

Camera-based cruise control, refer to page [193](#).

Vehicle detection, Active Cruise Control



Indicator light illuminates: a vehicle has been detected ahead of you.

Indicator light flashes: the conditions are not adequate for the system to work.

The system was deactivated but applies the brakes until the driver actively resumes control of the vehicle by pressing on the brake pedal or accelerator pedal.

Yellow lights

Anti-lock Braking System ABS



The Brake Assistant function may not activate. Avoid abrupt braking. Take the longer braking distance into account.



Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.

DSC Dynamic Stability Control



The indicator light flashes: DSC controls the drive and braking forces. The vehicle is stabilized. Reduce speed and modify your driving style to the driving circumstances.

The indicator light lights up: DSC has malfunctioned.

Have the system checked by a dealer's service center or another qualified service center or repair shop.

DSC, refer to page [189](#).

DSC Dynamic Stability Control is deactivated or DTC Dynamic Traction Control is activated



DSC is deactivated or DTC is activated.

DSC, refer to page [189](#), and DTC, refer to page [190](#).

Flat Tire Monitor FTM



The Flat Tire Monitor signals a loss of tire inflation pressure in a tire.

Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.

Flat Tire Monitor, refer to page [178](#).

Tire Pressure Monitor TPM



The indicator light lights up: the Tire Pressure Monitor reports a low tire inflation pressure or a flat tire. Follow the information in the Check Control message.

The indicator light flashes and then continuously lights up: no flat tire or loss of tire inflation pressure can be detected.

- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.
- TPM was unable to complete the reset. Reset the system again.
- A wheel without TPM wheel electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.
- Malfunction: have the system checked by a dealer's service center or another qualified service center or repair shop.

Tire Pressure Monitor, refer to page [173](#).

Steering system



Steering system may not be working. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Emissions



- The warning light lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.
- The warning light flashes under certain circumstances: This indicates that there is excessive misfiring in the engine.

Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

Socket for Onboard Diagnosis, refer to page [295](#).

Acoustic pedestrian protection inactive



Acoustic pedestrian protection deactivated or possibly not working. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Green lights

Turn signal



Turn signal switched on. Unusually rapid flashing of the indicator light indicates that a turn signal bulb has failed.

Turn signal, refer to page [127](#).

Parking lights, headlight



Parking lights or headlights are switched on. Parking lights/low beams, headlight control, refer to page [163](#).

Front fog lights



Front fog lights are switched on. Front fog lights, refer to page [166](#).

High-beam Assistant



High-beam Assistant is switched on. High beams are switched on and off automatically depending on the traffic situation.

High-beam Assistant, refer to page 165.

Cruise control



The system is switched on. It maintains the speed that was set using the control elements on the steering wheel.

Blue lights

High beams



High beams are switched on.

High beams, refer to page 127.

Hiding Check Control messages



Press the button on the turn signal lever.

Continuous display

Some Check Control messages are displayed continuously and are not cleared until the malfunction is eliminated. If several malfunctions occur at once, the messages are displayed consecutively.



The messages can be hidden for approx. 8 seconds. After this time, they are displayed again automatically.

Temporary display

Some Check Control messages are hidden automatically after approx. 20 seconds. The Check Control messages are stored and can be displayed again later.

Displaying stored Check Control messages

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Check Control"
4. Select the SMS text message.

Display

Check Control



At least one Check Control message is displayed or stored.

SMS text messages

SMS text messages in combination with a symbol in the instrument cluster explain a Check Control message and the meaning of the indicator/warning lights.



Supplementary SMS text messages

Additional information, such as on the cause of an error or the required action, can be called up via Check Control.

With urgent messages the added text will be automatically displayed on the Control Display.

Depending on the Check Control message, further help can be selected.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Check Control"
4. Select the desired text message.
5. Select the desired setting.

Messages after trip completion

Certain messages displayed while driving are displayed again after the ignition is switched off.

Fuel gauge



The arrow beside the fuel pump symbol shows which side of the vehicle the fuel filler flap is on.

Vehicle tilt position may cause the display to vary.

Information on refueling, refer to page 264.



The yellow indicator light illuminates, once the fuel reserve is reached.

Odometer and trip odometer

Concept

The total mileage driven and the mileage driven since the last reset are displayed in the instrument cluster.

Reset the trip odometer



Press the button.

- The odometer is displayed when the ignition is switched off.
- When the ignition is switched on, the trip odometer is reset.

External temperature

General information

If the indicator drops to +37 °F/+3 °C, a signal sounds.

A Check Control message is displayed.


There is an increased risk of ice on roads.

Safety information

Warning


Even at temperatures above +37 °F/+3 °C there can be a risk of icy roads, for instance on bridges or shady sections of the road. There is a risk of accident. Modify your driving style to the weather conditions at low temperatures.

Display

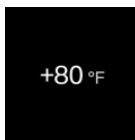

The external temperature is displayed in the instrument cluster.

Time

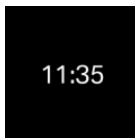

The time is displayed in the instrument cluster.

The time can be set via the Central Information Display (CID).

Date



The date is displayed in the instrument cluster.

The date can be set via the Central Information Display (CID).

Range

Concept

The range indicates the distance that can still be covered with the current fuel level and the electric energy of the high-voltage battery.

General information

The range can be displayed as the range for electric driving or as total range. The total range considers the contents of the fuel tank as well as the electric energy in the high-voltage battery. If the requirements for electric driving are not met, the total range considers the content of the fuel tank only.

Various factors, such as the automatic climate control settings, are taken into account when calculating the electric range. The electric range value is adapted dynamically.

The following factors are taken into account when calculating the range:

- Automatic climate control settings.
- Driving style.
- Traffic conditions.
- Program changes via the MINI Driving Modes switch.
- Climate and terrain conditions.

When the remaining range is low:

- A Check Control message is displayed briefly.

- The remaining range is shown on the Onboard Computer.
- With a dynamic driving style, for instance fast cornering, the engine function is not always ensured.

The Check Control message is continuously displayed below a certain range.

When the fuel level is low, MAX eDRIVE is automatically selected to protect the combustion engine if the requirements for electric driving are met. The Steptronic Sport program is not available.

You may continue driving with reduced performance and exclusively with electric motor power.

Follow further instructions on refueling.

Safety information


NOTICE

With a driving range of less than 30 miles/50 km the engine may no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of damage to property. Refuel promptly.


NOTICE

If the range is too small, the normal drive power is not available. Engine functions are not ensured. There is a risk of damage to property. Refuel as soon as possible.

Display, electric range

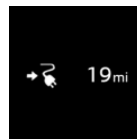


In MAX eDRIVE mode, the electric range can be displayed via the Onboard Computer in the instrument cluster.

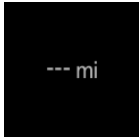

The display indicates that the high-voltage battery is almost fully discharged or the electric drive is currently not available.

Display total range

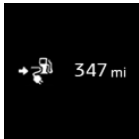

The current total range is displayed in the instrument cluster.

Displaying the cruising range

Via the Central Information Display (CID):

1. "My MINI"
2. "System settings"
3. "Displays"
4. "Instrument panel"
5. "Range"


Current consumption

Concept

The current consumption of the combustion engine and of the electric motor can be displayed.

Display, electric motor

The current electric consumption is displayed on the Onboard Computer.

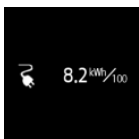

The current electric energy consumption or generation can be monitored.

Consumed energy: + sign
Generated energy: - sign

Displaying the current consumption

Via the Central Information Display (CID):

1. "My MINI"
2. "System settings"
3. "Displays"
4. "Instrument panel"
5. "Current consumption"

Service requirements

Concept

The function displays the service requirements and the corresponding maintenance scopes.

General information

After the ignition is switched on the instrument cluster briefly displays available driving distance or time to the next scheduled maintenance.

A service advisor can read out the current service requirements from your vehicle key.

Display

Detailed information on service requirements

More information on the type of service required may be displayed on the Control Display.




Via the Central Information Display (CID):

1. "My MINI"
2. "Vehicle status"
3. "Service required"

Required maintenance procedures and legally mandated inspections are displayed.

4. Select an entry to call up detailed information.

Symbols



Symbols	Description
	No service is currently required.
	The deadline for scheduled maintenance or a legally mandated inspection is approaching.
	The service deadline has already passed.

Entering appointment dates

Enter the dates for the mandatory vehicle inspections.

Make sure that the vehicle's date and time are set correctly.

Via the Central Information Display (CID):



1.  "My MINI"
2. "Vehicle status"
3.  "Service required"
4. "Vehicle inspection"
5. "Date:"
6. Select the desired setting.

Automatic Service Request

Data regarding the service status or legally mandated vehicle inspections is automatically transmitted to your dealer's service center before your vehicle is due for service.

You can check when your dealer's service center was notified.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3. Move the Controller to the left.
4.  "Teleservice Call"

Speed Limit Info

Speed Limit Info

Concept

Speed Limit Info shows the current maximum permitted speed in the instrument cluster.

General information

The camera at the base of the interior mirror detects traffic signs at the edge of the road as well as variable overhead sign posts. Traffic signs with extra symbols for wet road conditions, etc., are also detected and compared with the vehicle's onboard data, such as from the rain sensor, and will be displayed depending on the situation.

With the navigation system, the system takes into account the information stored in the navigation data and also displays speed limits present on routes without signs.


Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Overview

Camera

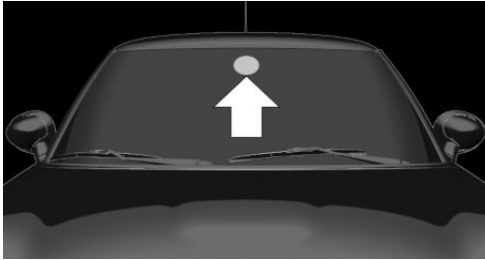

The camera is installed near the interior mirror.

Keep the windshield in front of the interior mirror clean and clear.

Display

Speed Limit Info is displayed via the On-board Computer.




Press button on the turn signal lever several times, if needed.

Speed Limit Info is displayed on the Info Display in the instrument cluster.

Speed Limit Info



The last speed limit detected.

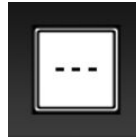

With navigation system:
Speed Limit Info is not available.

Speed Limit Info can also be displayed in the Head-up Display.

System limits

The system may not be fully functional and may provide incorrect information in the following situations:

- In heavy fog, wet conditions, or snowfall.
- When signs are fully or partially concealed by objects, stickers or paint.
- When driving very close to the vehicle in front of you.
- When driving toward bright lights or strong reflections.
- When the windshield in front of the interior mirror is fogged over, dirty or covered by a sticker, etc.
- In the event of incorrect detection by the camera.
- If the speed limits stored in the navigation system are incorrect.
- In areas not covered by the navigation system.
- When roads differ from the navigation, such as due to changes in road routing.
- When passing buses or trucks with a speed sticker.
- If the traffic signs are non-conforming.
- When signs that are valid for a parallel road are detected.
- During calibration of the camera immediately after vehicle delivery.




Selection lists

General information


Depending on the vehicle equipment, the buttons on the steering wheel and the display in the instrument cluster can be used to display or use the following:

- Current audio source.
- Phone redial.
- Turn on voice activation system.

Activating a list and adjusting the setting

Button on the steering wheel	Function
	Move selection up.
	Move selection down.
	Confirm the selection.

Display

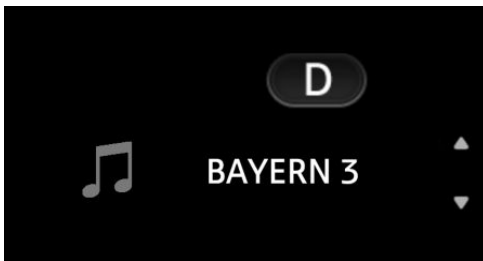

Onboard Computer

Concept

The Onboard Computer displays different vehicle data in the instrument cluster, such as average values.


Calling up information on the Info Display



Press the button on the turn signal lever. Information is displayed in the Info Display of the instrument cluster.

Information at a glance

Info Display

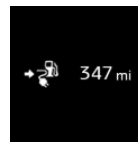

Repeatedly pressing the button on the turn signal lever calls up the following information in the Info Display:

- Total range.
- Range, electric.
- Average consumption, fuel.
- Average consumption, electric.
- Current consumption, fuel.
- Current consumption, electric.
- Average speed.
- Charge state of the high-voltage battery.
- Date.
- Engine temperature display.

- With equipment version with Head-up Display and navigation:
Distance to destination.
When destination guidance is activated in the navigation system.
- With equipment version with Head-up Display and navigation:
Time of arrival.
When destination guidance is activated in the navigation system.
- Speed Limit Info.
- Vehicle speed.


The unit of some information can be changed.

Setting units, refer to page 56.

Selecting information

Depending on the vehicle equipment, you can select what information from the On-board Computer can be displayed on the Info Display of the instrument cluster.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Instrument panel"
5. Select the desired setting.

Settings are stored for the profile currently used.

Information in detail

Range

Displays the estimated cruising range available with the remaining fuel.

The range is calculated based on your driving style over the last 20 miles/30 km.

High-voltage battery charge indicator

Concept


Indicates the current charge state of the high-voltage battery as a percentage.

Safety information

Warning

Even when it is indicated that the high-voltage battery is discharged, the high-voltage system is always still under high voltage. There is a risk of fire or a risk of injury. Do not touch or change live parts, for instance orange high-voltage cables, even when the batteries are discharged.

Display

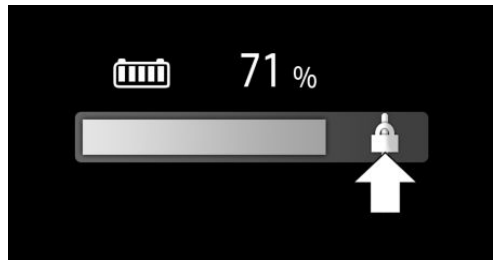

A marking is displayed when SAVE BATTERY is activated; see arrow. The marking indicates the high-voltage battery charge state that is to be maintained or achieved by means of energy recovery.

Average consumption

This is calculated for the period while the engine is running.

The average consumption is calculated for the distance traveled since the last reset by the Onboard Computer.

Average speed

Periods in which the vehicle is parked with the engine manually stopped are not included in the calculation of the average speed.

Resetting average values



Press and hold the button on the turn signal lever.

Engine temperature display

Concept

Displays the current engine temperature, based on a combination of coolant and engine oil temperature. As soon as the optimum operating temperature has been attained, the indicator is in the center position.

General information

If the engine oil or coolant, and thus the engine, become too hot, a Check Control message is displayed too.




When the engine temperature is too high, a red indicator light is displayed.



When the engine oil temperature is too high, a red indicator light is displayed.

To check the coolant level, refer to page [292](#).

Display

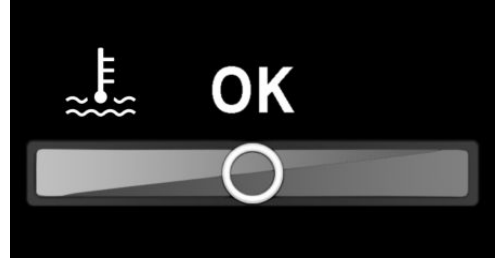

With equipment version with Head-up Display and navigation: distance to destination

The distance remaining to the destination is displayed if a destination is entered in the navigation system before the trip is started. The distance to the destination is adopted automatically.

With equipment version with Head-up Display and navigation: time of arrival

The estimated time of arrival is displayed if a destination is entered in the navigation system before the trip is started. The time must be correctly set.

Speed Limit Info

Speed Limit Info shows the current maximum permitted speed in the instrument cluster.

Onboard Computer on the Control Display

Concept

The Onboard Computer displays different vehicle data on the Control Display, such as average values.


General information

Two types of Onboard Computers are available on the Control Display:

- "Onboard info": average values, such as the consumption, are displayed. The values can be reset individually.
- "Trip computer": the values deliver an overview of a specific route and can be reset as often as necessary.


Calling up the Onboard Computer or trip computer

Via the Central Information Display (CID):

1.  "My MINI"
2. "Driving information"
3. "Onboard info" or "Trip computer"




Resetting the Onboard Computer

Via the Central Information Display (CID):

1.  "My MINI"
2. "Driving information"
3. "Onboard info"
4. "Consumption" or "Speed"
5. "OK"

Resetting the trip computer

Via the Central Information Display (CID):

1.  "My MINI"
2. "Driving information"
3. "Trip computer"
4. Move the Controller to the left, if needed.
 -  "Reset": all values are reset.
 -  "Automatic reset": all values are reset approx. 4 hours after the vehicle has come to a standstill.
5. If necessary, "OK"

Driving Excitement

Concept

On the Control Display, sport instruments can be displayed, and the vehicle state can be checked before the use of the SPORT program.



Sport instruments

General information


On the Control Display, values for power and torque are displayed.

Displaying sport instruments

Via the Central Information Display (CID):

1.  "My MINI"
2. "Technology in action"
3. "Sport displays"
4.  "Sports instruments"

Via MINI Driving Modes switch:

1. Activate SPORT.
2. "Sport displays"
3.  "Sports instruments"

Vehicle state



The following vehicle and surrounding area data is automatically checked and evaluated in succession:

- Range.
- Engine temperature.
- External temperature.
- SPORT program state.


Finally, a total evaluation of the vehicle state is displayed.

Checking vehicle state

Via the Central Information Display (CID):

1.  "My MINI"
2. "Technology in action"
3. "Sport displays"
4.  "Vehicle and surroundings"

Via the MINI Driving Modes switch:

1. Activate SPORT.
2. "Sport displays"
3.  "Vehicle and surroundings"

Speed warning

Concept


A speed limit can be set that when reached will cause a warning to be issued.

General information

The warning is repeated if the vehicle speed exceeds the set speed limit again, after it has dropped below it by 3 mph/5 km/h.


Adjusting

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Speed warning"
4. "Warning at:"
5. Turn the Controller until the desired speed is displayed.
6. Press the Controller.


Activating/deactivating

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Speed warning"
4. "Speed warning"

Setting your current speed as the speed warning

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Speed warning"
4. "Select current speed"

LED ring on the central instrument cluster

Concept

The LED ring displays light animations to represent specific functions.

Basic displays

Basic functions, for instance the tachometer, can be set to be displayed continually if so desired.

Event displays

Functions that are only displayed temporarily, for instance the volume or temperature settings, can be set as event displays.

Several vehicle assistance functions can also be displayed on the LED ring. This display corresponds with the displays of the function in the respective display.

Example: tachometer

Like the tachometer in the instrument cluster, the light animations of the tachometer's basic display show the current RPMs and the respective RPM warning thresholds.

Display



- Arrow 1: current RPM.
- Arrow 2: prewarning field.
- Arrow 3: warning field.

Switching on/off LED ring

Via the Central Information Display (CID):

1. "My MINI"
2. "System settings"
3. "Displays"
4. "Center Instrument"
5. "Center Instrument"

Adjusting the LED ring

Via the Central Information Display (CID):

1. "My MINI"
2. "System settings"
3. "Displays"
4. "Center Instrument"
5. "Basic display" or "Event display"
6. Select the desired setting.

Setting the brightness

The brightness can be adjusted when night lighting is active in the instrument cluster.

Via the Central Information Display (CID):

1. "My MINI"
2. "System settings"
3. "Displays"
4. "Center Instrument"
5. "Brightness at night"
6. Turn the Controller until the desired brightness is set.
7. Press the Controller.

The setting is stored for the driver profile currently used.

Head-up Display

Concept

This system projects important information into the driver's field of vision, for instance the speed.

The driver can get information without averting his or her eyes from the road.

General information

Follow the instructions for cleaning the Head-up Display. For additional information, see the chapter on care.

Safety information

Warning

When extending and retracting the projection screen of the Head-up Display, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the projection screen is clear during opening and closing.


⚠ NOTICE

The Head-up Display consists of sensitive components that can easily be scraped or damaged. There is a risk of damage to property. Do not place any objects on the Head-up Display, attach to system components or plug into the system. Do not move the moving parts manually.

Overview**Switching the Head-up Display on/off**

When switching on, the projection lens of the Head-up Display is extended. When switching off, the projection lens of the Head-up Display is retracted again.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Head-Up Display"
5. "Head-Up Display"

Display**Overview**

The following information is displayed on the Head-up Display:

- Vehicle speed.

- Navigation instructions.
- Check Control messages.
- Selection list from the instrument cluster.
- Driver assistance systems.

Some of this information is only displayed briefly as needed.

Selecting displays in the Head-up Display

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Head-Up Display"
5. "Displayed information"
6. Select the desired displays in the Head-up Display.


Settings are stored for the driver profile currently used.

Setting the brightness

The brightness is automatically adjusted to the ambient brightness.

The basic setting can be adjusted manually.

Via the Central Information Display (CID):


1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Head-Up Display"
5. "Brightness"
6. Turn the Controller until the desired brightness is set.
7. Press the Controller.

When the low beams are switched on, the brightness of the Head-up Display can be additionally influenced using the instrument lighting, refer to page 167.

The setting is stored for the driver profile currently used.

Adjusting the height

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Head-Up Display"
5. "Height"
6. Turn the Controller until the desired height is reached.
7. Press the Controller.


The setting is stored for the driver profile currently used.

The height of the Head-up Display can also be stored using the memory function, refer to page 108.

Setting the rotation

The screen of the Head-up Display can be rotated around its own axis.

Via the Central Information Display (CID):

1.  "My MINI"
2. "System settings"
3. "Displays"
4. "Head-Up Display"
5. "Rotation"
6. Turn the Controller until the desired setting is selected.
7. Press the Controller.

The setting is stored for the driver profile currently used.

Display visibility

The visibility of the displays in the Head-up Display is influenced by the following factors:

- Certain sitting positions.
- Objects on the cover of the Head-up Display.
- Sunglasses with certain polarization filters.
- Wet roads.
- Unfavorable light conditions.

Country timer

Concept

The system provides information on how long and to what degree the vehicle was driven on inclined, uneven, unpaved or snow-covered roads, for example.

General information

The system consists of the following two menus:

- Country Timer: display of the gradient and unevenness of the routes traveled.
- Country Timer Info: display of the best time and total time since the last reset.

Follow the notes on traveling on poor roads, refer to page 246.

Opening the menu

Via the Central Information Display (CID):

1.  "My MINI"
2. "MINI Country Timer"
3. Select the desired setting.
 -  : display of the Country Timer.
 -  : display of the Country Timer Info.

Display of the Country Timer

Overview



- Symbols for road gradient and unevenness, arrow 1.
- Category, arrow 2.
- Pulse value, arrow 3.

Symbols, pulse deflection and pulse value

When the vehicle is being driven on inclined or uneven roads, the corresponding symbol lights up, arrow 1. One or more pulse deflections are displayed and the pulse value increases, arrow 3.

Categories

As the pulse value increases, the vehicle becomes larger and reaches various levels, arrow 2.

Display of the Country Timer Info

Best time


The shortest driving time necessary to reach the highest level.

Total time

The total driving time that the vehicle was driven at the highest level.

Resetting the Country Timer Info

Via the Central Information Display (CID):

1.  "My MINI"
2. "MINI Country Timer"
3.  "MINI Country Timer Info"
4. Select the desired setting:
 - "Reset record time and display": resetting the best time.
 - "Reset total time": resetting the total time.

Vehicle status

General information




The status can be displayed and actions performed for several systems.





Opening the vehicle status

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"

Information at a glance

Symbols	Description
	"Flat Tire Monitor": status of the Flat Tire Monitor, refer to page 178.
	"Tire Pressure Monitor": status of the Tire Pressure Monitor, refer to page 173.
	"Engine oil level": Electronic engine oil level check, refer to page 288.

Symbols	Description
	"Check Control": Check Control messages are stored in the background and can be displayed on the Control Display. Displaying stored Check Control messages, refer to page 147 .
	"Service required": displaying service requirements, refer to page 150 .
	 "Teleservice Call": Service Request.

Lights

Vehicle features and options




This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.




Overview

Switches in the vehicle



The light switch element is located next to the steering wheel.

Symbol	Function
	Front fog lights.
	Automatic headlight control. Cornering light.
	Lights off. Daytime running lights.

Symbol	Function
	Parking lights.
	Low beams.
	Instrument lighting.


Parking lights, low beams and roadside parking lights

General information

Position of switch:  ,  , 

If the driver's door is opened when the ignition is switched off, the exterior lighting is automatically switched off.

Parking lights

Position of switch: 

The vehicle is illuminated on all sides.

Do not use the parking lights for extended periods; otherwise, the battery may become discharged and it would then be impossible to start the engine.

Canada: when parking, switch on the one-sided roadside parking light, refer to page 164.

Low beams

Position of switch: 


The low beams light up when the ignition is switched on.

Canada: roadside parking light

Concept

The vehicle can be illuminated on one side.

Switching on

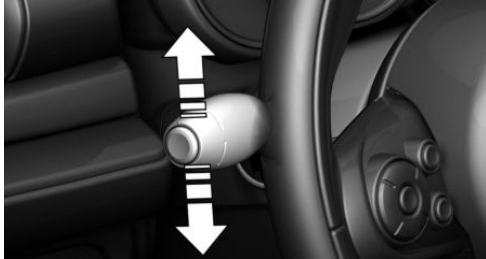

With radio-ready state switched off, press the lever either up or down past the resistance point for approx. 2 seconds.

Switching off

Briefly press the lever to the resistance point in the opposite direction.

Welcome lights and headlight courtesy delay feature

Welcome lights

General information

Depending on the vehicle equipment and the ambient brightness, individual light functions may be switched on briefly when the vehicle is unlocked.

Activating/deactivating

Position of switch:  , 

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"

3. "Lighting"
4. "Exterior lighting"
5. "Welcome lights"

The setting is stored for the driver profile currently used.

Headlight courtesy delay feature


General information

The low beams stay illuminated for a particular time if the high beams are switched on after radio-ready state is switched off.

Canada: the low beams stay illuminated for a particular time if the headlight flasher is switched on after radio-ready state is switched off.

Setting the duration

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Lighting"
4. "Exterior lighting"
5. "Pathway lighting"
6. Set length of time.

The setting is stored for the driver profile currently used.

Automatic headlight control


Concept

The low beams are switched on and off automatically depending on the ambient brightness, for example in tunnels, in twilight or if there is precipitation.

General information

A blue sky with the sun low on the horizon can cause the lights to be switched on.

Activating

Position of switch: 

The indicator light in the instrument cluster is illuminated when the low beams are switched on.

System limits


The automatic headlight control cannot serve as a substitute for your personal judgment of lighting conditions.

For example, the sensors are unable to detect fog or hazy weather. In these situations, switch the lights on manually.

Daytime running lights

General information


Position of switch:  ,  , 

The daytime running lights light up when the ignition is switched on. After the ignition is switched off, the parking lights light up in position  .

Activating/deactivating

In some countries, daytime running lights are mandatory, so it may not be possible to deactivate the daytime running lights.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Lighting"
4. "Exterior lighting"
5. Select the desired setting.

Settings are stored for the currently used vehicle key.

Cornering light

General information

Position of switch: 

In tight curves, for instance on mountainous roads or when turning, an additional, cornering light is switched on that lights up the inside of the curve when the vehicle is moving below a certain speed.

The cornering light is automatically switched on depending on the steering angle or, where applicable, the use of turn signals.

When driving in reverse, the cornering lights may be automatically switched on regardless of the steering angle.

Adaptive headlight range control

The adaptive headlight range control feature balances out acceleration and braking processes as well as the vehicle load conditions in order to avoid dazzling oncoming traffic. Illumination of the road is optimized.

High-beam Assistant

Concept

The high-beam Assistant detects other traffic participants early on and automatically switches the high beams on or off depending on the traffic situation.


General information



The high-beam Assistant ensures that the high beams are switched on, whenever the traffic situation allows. In the low speed range, the high beams are not switched on by the system.

The system responds to light from oncoming traffic and traffic driving ahead of you, and to ambient lighting, for instance in towns and cities.

The high beams can be switched on and off manually at any time.

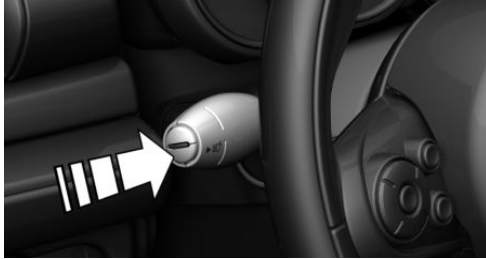Activating/deactivating



Position of switch, depending on the vehicle equipment:  , 

Press the button on the turn signal lever.



The indicator light in the instrument cluster is illuminated when the low beams are switched on.

The headlights are automatically switched between low beams and high beams.



The blue indicator light in the instrument cluster lights up when the system switches on the high beams.

The high-beam Assistant is deactivated when manually switching the high beams on and off, refer to page 127.

To reactivate the high-beam Assistant, press the button on the turn signal lever.

System limits

The high-beam Assistant cannot serve as a substitute for the driver's personal judgment of when to use the high beams. In situation that require this, therefore switch off manually.

The system is not fully functional in the following situations, and driver intervention may be necessary:

- In very unfavorable weather conditions, such as fog or heavy precipitation.
- When detecting poorly-lit road users such as pedestrians, cyclists, horseback riders and wagons; when driving close to train or ship traffic; or at animal crossings.
- In tight curves, on hilltops or in depressions, in crossing traffic or half-obscured oncoming traffic on highways.
- In poorly-lit towns and cities or in the presence of highly reflective signs.
- When the windshield in front of the interior mirror is fogged over, dirty or covered with stickers, etc.

Fog lights

Front fog lights

Concept

The front fog lights work alongside the low beams to illuminate a wider area of the roadway.

Functional requirement

The low beams must be switched on before switching on the front fog lights.

Switching on/off



Press the button.

The green indicator light lights up if the front fog lights are switched on.

If the automatic headlight control, refer to page 164, is activated, the low beams will come on automatically when you switch on the front fog lights.

When the high beams or headlight flasher are activated, the front fog lights are not switched on.

Instrument lighting

Functional requirement

The parking lights or low beams must be switched on to adjust the brightness.

Adjusting



Adjust the brightness with the thumbwheel.

Interior lights

General information

Depending on the equipment, the interior lights, footwell lights, entry lights, and courtesy lights are controlled automatically.

The thumbwheel for the instrument lighting controls brightness of some of these features.

Overview



- 1 Interior lights
- 2 Reading lights
- 3 Ambient light

Switching the interior lights on/off



Press the button.

To switch off permanently: press the button and hold for approx. 3 seconds.

Switching the reading lights on and off manually



Press the button.

The reading lights are located in the front next to the interior light.


Ambient light

General information

Depending on the equipment version, lighting can be adjusted for some lights in the car's interior.

Activating/deactivating

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Lighting"

4. "Interior lighting"
 5. "Ambient lighting"
 6. Select the desired setting.
- Settings are stored for the profile currently used.

Changing color



Push the switch forward or back: manual color change.




Press the switch forward or backward and hold for approx. 3 seconds, until the ambient light illuminates several times: automatic color change. Push the switch again to end color changes.

Setting the brightness

Depending on the equipment, the brightness of the ambient light can be adjusted via the thumbwheel for the instrument lighting or on the Control Display.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Lighting"
4. "Interior lighting"
5. "Brightness"
6. Adjust the brightness.


Safety

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for

instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Airbags

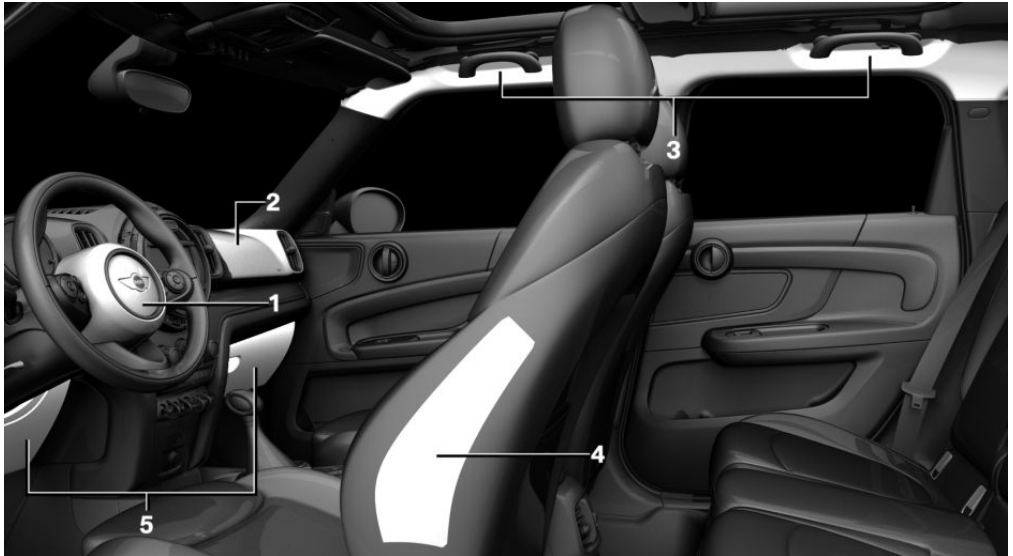

- | | |
|---------------------------------|---------------|
| 1 Front airbag, driver | 4 Side airbag |
| 2 Front airbag, front passenger | 5 Knee airbag |
| 3 Head airbag | |

Front airbags

Front airbags help protect the driver and the front passenger by responding to frontal impacts in which safety belts alone would not provide adequate protection.

Side airbag

In the event of a side impact, the side airbag protects the side of the body in the chest and lap area.

Head airbag

In the event of a side impact, the head airbag protects the head.

Ejection Mitigation

The head airbag system is designed as an ejection mitigation countermeasure to reduce the likelihood of ejections of vehicle occupants through side windows during rollovers or side impact events.

Knee airbag

The knee airbag protects the legs in the event of a frontal impact.

Protective effect

Airbags are not triggered in every impact situation, for instance in less severe accidents or rear-end collisions.

Information on optimum effect of the airbags

Warning

If the seat position is incorrect or the deployment area of the airbags is impaired, the airbag system cannot provide protection as intended and may cause additional injuries due to triggering. There is a risk of injuries or danger to life. Follow the information on achieving the optimum protective effect of the airbag system.

- Keep a distance from the airbags.
- Always grasp the steering wheel on the steering wheel rim. Hold your hands at the 3 o'clock and 9 o'clock positions, to keep the risk of injury to your hands or arms as low as possible when the airbag is triggered.
- Make sure that the front passenger is sitting correctly, i.e., keeps his or her

feet and legs in the floor area and does not support them on the dashboard.

- Make sure that occupants keep their heads away from the side airbag.
- There should be no additional persons, animals or objects between an airbag and a person.
- Dashboard and windshield on the front passenger side must stay clear - do not attach adhesive labels or coverings and do not attach brackets or cables, for instance for GPS devices or mobile phones.
- Do not apply adhesive materials to the airbag cover panels, do not cover them or modify them in any way.
- Do not use the cover of the front airbag on the front passenger side as a storage area.
- Do not attach slip covers, seat cushions or other objects to the front passenger seat that are not specifically suited for seats with integrated side airbags.
- Do not place seat cushions or other objects on the front seats that are not specifically suited for seats with integrated side airbags.
- Do not hang pieces of clothing, such as jackets, over the backrests.
- Never modify either the individual components or the wiring in the airbag system. This also applies to steering wheel covers, the dashboard, and the seats.
- Do not remove the airbag system.

Even when you follow all instructions very closely, injury from contact with the airbags cannot be fully ruled out in certain situations.

The ignition and inflation noise may lead to short-term and, in most cases, temporary hearing impairment in sensitive occupants. Vehicle modifications for a person with disabilities may affect the air bag system; con-

tact MINI Customer Relations for further information.

Warnings and information on the airbags are also found on the sun visors.

Functional readiness of the airbag system

Safety information

Warning

Individual components can be hot after triggering of the airbag system. There is a risk of injury. Do not touch individual components.

Warning

Improperly executed work can lead to failure, malfunction or unintentional triggering of the airbag system. In the case of a malfunction, the airbag system might not trigger as intended despite the accident severity. There is a risk of injuries or danger to life. Have the airbag system checked, repaired, dismantled and scrapped by a dealer's service center or another qualified service center or repair shop.

Correct function



When the ignition is switched on, the warning light in the instrument cluster lights up briefly and thereby indicates the operational readiness of the entire airbag system and the belt tensioner.

Airbag system malfunctioning

- Warning light does not come on when the ignition is switched on.
- The warning light lights up continuously.

Automatic deactivation of the front-seat passenger airbags

Concept

The system reads if the front passenger seat is occupied by measuring the human body's resistance.

Front, knee, and side airbag on the front passenger's side are activated or deactivated.

General information

Before transporting a child on the front passenger seat, refer to the safety information and instructions for children on the front passenger seat, see Children.

Safety information

Warning

To ensure the front-seat passenger airbag function, the system must be able to detect whether a person is sitting in the front passenger seat. The entire seat cushion area must be used for this purpose. There is a risk of injuries or danger to life. Make sure that the front passenger keeps his or her feet in the floor area.

Malfunction of the automatic deactivation system

When transporting older children and adults, the front-seat passenger airbags may be deactivated in certain sitting positions. In this case, the indicator light for the front-seat passenger airbags lights up.

In this case, change the sitting position so that the front-seat passenger airbags are activated and the indicator light goes out.

If it is not possible to activate the airbags, have the person sit in the rear.

To enable correct recognition of the occupied seat cushion.

- Do not attach covers, cushions, ball mats or other items to the front passenger seat unless they are specifically determined to be safe for use on the front passenger seat.
- Do not place any electronic devices on the front passenger seat if a child restraint system is to be installed on it.
- Do not place objects under the seat that could press against the seat from below.
- No moisture in or on the seat.

Indicator light for the front-seat passenger airbags



The indicator light for the front-seat passenger airbags indicates the operating state of the front-seat passenger airbags.

The light indicates whether the airbags are either activated or deactivated.



- The indicator light lights up when a child is properly seated in a child restraint system or when the seat is empty. The airbags on the front passenger side are not activated.
- The indicator light does not light up when, for instance a correctly seated person of sufficient size is detected on the seat. The airbags on the front passenger side are activated.

Detected child restraint systems

The system generally detects children seated in a child restraint system, particularly in child restraint systems required by NHTSA at the point in time when the vehicle was manufactured. After installing a child restraint system, make sure that the indicator light for the front-seat passenger airbags lights up. This indicates that the child restraint system has been detected and the front-seat passenger airbags are not activated.

Strength of the driver's and front-seat passenger airbag

The explosive power that activates driver's/ front-seat passenger airbags very much depends on the positions of the driver's/ front passenger seat.

To maintain the accuracy of this function over the long-term, calibrate the front seats as soon as a relevant Check Control message is displayed. A message also appears on the Control Display.

Calibrating the front seats

Warning

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

An appropriate Check Control message is displayed.

1. Move the respective seat all the way forward.
2. Move the respective seat forward again. The seat moves forward briefly.
3. Readjust the seat to the desired position.

The calibration procedure is completed when the Check Control message disappears.

If the message continues to be displayed, repeat the calibration.

If the message does not disappear after a repeat calibration, have the system checked as soon as possible.

Tire Pressure Monitor TPM

Concept

The system monitors tire inflation pressure in the four mounted tires. The system warns you if there is a significant loss of pressure in one or more tires.

General information

Sensors in the tire valves measure the tire inflation pressure and, depending on the model, the tire temperature.

Further information and instructions on using the system can also be found under Tire inflation pressure, refer to page [268](#).

Functional requirements

The following conditions must be met for the system; otherwise, reliable flagging of a loss of tire inflation pressure is not assured:

- After a tire or wheel replacement, a reset was performed with the correct tire inflation pressure.
- After the tire inflation pressure was adjusted to a new value, a reset was performed.
- Wheels with TPM wheel electronics.

Status display

Current status

The system status can be displayed on the Control Display, e.g., whether or not the system is active.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Tire Pressure Monitor"

The current status is displayed.

Tire conditions

General information

Tire and system status are indicated by the color of the wheels and a SMS text message on the Control Display.

All wheels green

System is active and will issue a warning related to the tire inflation pressures stored during the last reset.

One to four yellow wheels

A flat tire or major drop in the tire inflation pressure has occurred in the indicated tires.

Gray wheels

It may not be possible to identify tire inflation pressure losses.

Possible causes:



- Malfunction.
- The system is being reset.

Additional information

The status control display additionally shows the current tire inflation pressures. The values shown are instantaneous measurements and may vary depending on driving style or weather conditions.

Resetting the system

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Tire Pressure Monitor"
4. Start the engine but do not drive off.
5. Reset the tire inflation pressure using "Perform reset".
6. Drive away.

The wheels are displayed in gray and the following is displayed "Resetting Tire Pressure Monitor...".

After a travel time of several minutes, the set tire inflation pressures are accepted as reference values. The resetting process is completed automatically while driving.

After successful completion of the reset, the tires appear in green on the Control Display and "Tire Pressure Monitor active. See label for recommended pressures." is displayed.

You may interrupt this trip at any time. When you continue the reset resumes automatically.

Messages

General information

A low tire inflation pressure may cause the DSC Dynamic Stability Control to be switched on.

Safety information

Warning



A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Run-flat tires can maintain limited stability. There is a risk of accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information

on run-flat tires and continued driving with these tires.

If a tire inflation pressure check is required

Message

A symbol with a Check Control message appears on the Control Display.

Symbol	Possible cause
	<p>The system has detected a wheel change, but no reset was done.</p> <p>No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.</p> <p>Inflation was not carried out according to specifications.</p>
	<p>The tire inflation pressure has fallen below the level of the last reset.</p>

Measure


1. Check the tire pressure and correct as needed.
2. Reset the system.

If the tire inflation pressure is too low

Message

 A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

Symbol	Possible cause
	<p>There is a tire inflation pressure loss.</p> <p>No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.</p>

Measure

1. Reduce your speed and drive moderately. Do not exceed a speed of 80 mph/130 km/h.
2. At the next opportunity, for instance gas station, check and correct the tire inflation pressure in all four tires, if necessary.
3. Reset the system.


If there is a significant loss of tire inflation pressure

Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with the affected tire appears in a Check Control message on the Control Display.

Symbol	Possible cause
	<p>There is a flat tire or a major loss in tire inflation pressure.</p> <p>No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.</p>

Measure

1. Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
2. Check whether the vehicle is fitted with normal tires or run-flat tires.
Run-flat tires, refer to page 274, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.

Actions in the event of a flat tire

Normal tires

1. Identify the damaged tire.
To do this, check the tire inflation pressure in all four tires, for instance using the tire pressure gauge of a flat tire kit. If the tire inflation pressure in all four tires is correct, the Tire Pressure Monitor may not have been reset. In this case, perform the reset.
If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.
If identification of flat tire damage is not possible, please contact a dealer's service center or another qualified service center or repair shop.
2. Repair the flat tire, e.g., with a flat tire kit or by changing the wheel.
Use of sealant, for instance from the flat tire kit, may damage the TPM wheel electronics. In this case, have the electronics checked and replaced at the next opportunity.

Run-flat tires

Safety information

Warning

Your vehicle handles differently with a run-flat tire with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.

Maximum speed

You may continue driving with a damaged tire at speeds up to 50 mph/80 km/h.

Continued driving with a flat tire

If continuing to drive with a damaged tire:

1. Avoid sudden braking and steering maneuvers.
2. Do not exceed a speed of 50 mph/80 km/h.
3. Check the tire inflation pressure in all four tires at the next opportunity.

If the tire inflation pressure in all four tires is correct, the Tire Pressure Monitor may not have been reset. In this case, perform the reset.

Possible driving range with a depressurized tire

The distance for which it may be possible to drive safely varies depending on how the vehicle is loaded and used, e.g., speed, road conditions, external temperature. The driving range may be less but may also be more if an economical driving style is used.

If the vehicle is loaded with an average weight and used under favorable conditions,

the distance for which it may be safe to drive may be up to 50 miles/80 km.

Vehicle handling with damaged tires

Vehicles driven with a damaged tire will handle differently, potentially leading to conditions such as the following:

- Greater likelihood of swerving off course.
- Longer braking distances.
- Changed self-steering properties.

Modify your driving style. Avoid abrupt steering maneuvers or driving over obstacles, for instance curbs or potholes.

Final tire failure

Vibrations or loud noises while driving can indicate the final failure of a tire.

Reduce speed and stop; otherwise, pieces of the tire could come loose and cause an accident.

Do not continue driving. Contact a dealer's service center or another qualified service center or repair shop.

System limits

Temperature

The tire inflation pressure depends on the tire's temperature.

Driving or exposure to the sun will increase the tire's temperature, thus increasing the tire inflation pressure.

The tire inflation pressure is reduced when the tire temperature falls again.

These circumstances may cause a warning when temperatures fall very sharply.

Sudden tire pressure loss

The system cannot indicate sudden serious tire damage caused by external circumstances.

Failure performing a reset

The system does not function properly if a reset has not been carried out, for instance a flat tire is reported though tire inflation pressures are correct.

Malfunction



The yellow warning light flashes and is then illuminated continuously. A Check Control message is displayed.

It may not be possible to identify tire pressure losses.

Examples and recommendations in the following situations:

- A wheel without TPM wheel electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.
- Malfunction: have system checked by a dealer's service center or another qualified service center or repair shop.
- The system was unable to complete the reset. Perform a system reset again.
- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.

Declaration according to NHTSA/FMVSS 138 Tire Pressure Monitoring System

Each tire, including the spare (if provided) should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.) As an added safety feature, your vehicle has been equipped

with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to over-heat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale. Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Flat Tire Monitor FTM

Concept

The system detects tire inflation pressure loss on the basis of rotation speed differences between the individual wheels while driving.

In the event of a tire inflation pressure loss, the diameter and therefore the rotational speed of the corresponding wheel changes. The difference will be detected and reported as a flat tire.

The system does not measure the actual inflation pressure in the tires.

Functional requirements

The following conditions must be met for the system; otherwise, reliable flagging of a loss of tire inflation pressure is not assured:

- After a tire or wheel replacement, an initialization was performed with the correct tire inflation pressure.
- After the tire pressure was adjusted to a new value, an initialization was performed.

Status display

The current status of the flat tire monitor can be displayed, for instance whether the RPA is active.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Flat Tire Monitor"

The status is displayed.

Initialization required

An initialization must be performed in the following situations:



- After the tire inflation pressure has been adjusted.
- After a tire or wheel replacement.

Performing initialization

When initializing, the set tire inflation pressures serve as reference values in order to detect a flat tire. Initialization is started by confirming the tire inflation pressures.

Do not initialize the system when driving with snow chains.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Flat Tire Monitor"
4. Start the engine but do not drive off.
5. Start the initialization with: "Perform reset".
6. Drive away.

The initialization is completed while driving, which can be interrupted at any time. The initialization automatically continues when driving resumes.

Messages

General information

When a flat tire is indicated, DSC Dynamic Stability Control is switched on, if needed.

Safety information

Warning

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Run-flat tires can maintain limited stability. There is a risk of accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information


on run-flat tires and continued driving with these tires.

Indication of a flat tire



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

Symbol	Possible cause
	There is a flat tire or a major loss in tire inflation pressure.

Measure

1. Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
2. Check whether the vehicle is fitted with normal tires or run-flat tires.

Run-flat tires, refer to page 274, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.

Actions in the event of a flat tire

Normal tires

1. Identify the damaged tire.

To do this, check the tire inflation pressure in all four tires, for instance using the tire pressure gage of a flat tire kit.

If the tire inflation pressure in all four tires is correct, the Tire Pressure Monitor may not have been reset. In this case, perform the reset.

If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.

If identification of flat tire damage is not possible, please contact a dealer's service center or another qualified service center or repair shop.

2. Repair the flat tire, e.g., with a flat tire kit or by changing the wheel.

Use of sealant, for instance from the flat tire kit, may damage the TPM wheel electronics. In this case, have the electronics checked and replaced at the next opportunity.

Run-flat tires

Safety information

Warning

Your vehicle handles differently with a run-flat tire with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.

Maximum speed

You may continue driving with a damaged tire at speeds up to 50 mph/80 km/h.

Continued driving with a flat tire

If continuing to drive with a damaged tire:

1. Avoid sudden braking and steering maneuvers.
2. Do not exceed a speed of 50 mph/80 km/h.
3. Check the tire inflation pressure in all four tires at the next opportunity.

If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.

Possible driving range with a depressurized tire

The distance for which it may be possible to drive safely varies depending on how the vehicle is loaded and used, e.g., speed, road conditions, external temperature. The driving range may be less but may also be more if an economical driving style is used.

If the vehicle is loaded with an average weight and used under favorable conditions, the distance for which it may be safe to drive may be up to 50 miles/80 km.

Vehicle handling with damaged tires

Vehicles driven with a damaged tire will handle differently, potentially leading to conditions such as the following:

- Greater likelihood of swerving off course.
- Longer braking distances.
- Changed self-steering properties.

Modify your driving style. Avoid abrupt steering maneuvers or driving over obstacles, for instance curbs or potholes.

Final tire failure

Vibrations or loud noises while driving can indicate the final failure of a tire.

Reduce speed and stop; otherwise, pieces of the tire could come loose and cause an accident.

Do not continue driving. Contact a dealer's service center or another qualified service center or repair shop.

System limits

The system could be delayed or malfunction in the following situations:

- A natural, even tire inflation pressure loss in all four tires will not be recognized. Therefore, check the tire inflation pressure regularly.

- Sudden serious tire damage caused by external circumstances cannot be recognized in advance.
- When the system has not been initialized.
- When driving on a snowy or slippery road surface.
- Sporty driving style: spinning traction wheels, high lateral acceleration (drifting).
- When driving with snow chains.

Intelligent Safety

Concept

Intelligent Safety enables central operation of the driver assistance systems.

The intelligent safety systems can help prevent an imminent collision.

- Approach control warning with City light braking function, refer to page 181.
- Daytime pedestrian collision mitigation, refer to page 184.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

⚠ Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Overview**Button in the vehicle**

Intelligent Safety button

Switching on/off

Some Intelligent Safety systems are automatically active after every departure. Some Intelligent Safety systems activate according to the last setting.



Press button briefly:

- The menu for the Intelligent Safety system is displayed. The systems are individually switched off according to their respective settings.
- LED lights up orange or goes out respective to their individual settings.

Adjust the settings as needed. The individual settings are stored for the driver profile currently in use.



Press button again:

- All Intelligent Safety systems are switched on.
- The LED lights up green.



Hold down button:

- All Intelligent Safety systems are switched off.
- The LED goes out.

Approach control warning with city light braking function**Concept**

The system may prevent some accidents. In the event of an accident, the system may reduce impact speed.

The system sounds a warning before an imminent collision and activates brakes independently, if needed.

The Brake Assistant function activates and applies the brakes with limited force and duration.

A camera at the base of the interior mirror controls the system.

The approach control warning is available even if cruise control has been deactivated.

With the vehicle approaching another vehicle intentionally, the approach control warning and braking are delayed in order to avoid false system reactions.


General information

The system warns at two levels of an imminent danger of collision at speeds from ap-

prox. 3 mph/5 km/h. The timing of warnings may vary with the current driving situation.

Braking is performed at speeds up to approximately 35 mph/60 km/h.

Detection range

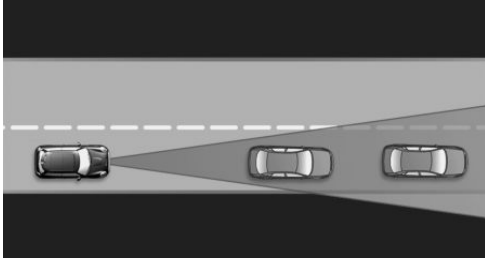

Objects that the system can detect are taken into account.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.


Overview

Button in the vehicle



 Intelligent Safety button

Camera

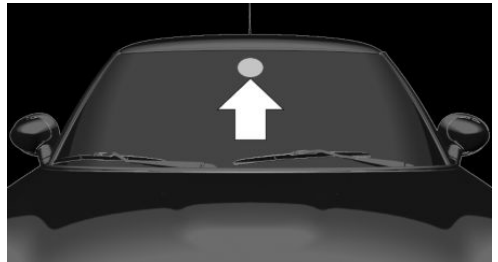

The camera is installed near the interior mirror.


Keep the windshield in front of the interior mirror clean and clear.

Switching on/off

Switching on automatically

The system is automatically active after every driving off.

Switching on/off manually

-  Press button briefly:
 - The menu for the Intelligent Safety system is displayed. The systems are individually

switched off according to their respective settings.

- LED lights up orange or goes out respective to their individual settings.

Adjust the settings as needed. The individual settings are stored for the driver profile currently in use.



Press button again:

- All Intelligent Safety systems are switched on.
- The LED lights up green.




Hold down button:

- All Intelligent Safety systems are switched off.
- The LED goes out.

Setting the warning time

The warning time can be set via the Central Information Display (CID).



1.  "My MINI"
2. "Vehicle settings"
3. "Intelligent Safety"
4. "Warning time"
5. Select the desired setting.

The selected warning time is stored for the driver profile currently in use.

Warning with braking function

Display

A warning symbol appears in the instrument cluster and in the Head-up Display if a collision with a detected vehicle is imminent.

Symbol	Measure
	Symbol lights up red: prewarning. Brake and increase distance.
	Symbol flashes red and an acoustic signal sounds: acute warning. Brake and make an evasive maneuver, if necessary.

Prewarning

This warning is provided, for instance when there is impending danger of a collision or the distance to the vehicle ahead is too small.

If a prewarning is provided, respond by braking as warranted.

Acute warning with braking function

An acute warning is displayed when there is an imminent danger of collision due to the vehicle approaching another object at a high speed.

The driver must intervene actively when there is an acute warning. If necessary, the driver is assisted by a minor automatic braking intervention in a possible risk of collision.

Acute warnings may be provided even when there has been no prior warning.

Braking intervention

The warning prompts the driver to intervene. During a warning, the maximum braking force is used. In order to activate the Brake Assistant function, you must apply the brakes quickly and forcefully. If there is a risk of collision, the system may assist with braking. When the vehicle is traveling at a low speed, the vehicle may come to a complete stop.



The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The driver may interrupt the braking intervention function by stepping on the accelerator pedal or by actively moving the steering wheel.

The system's ability to detect objects may be limited in some circumstances. Refer to the information in this Owner's Manual regarding the limitations of the system and actively intervene as warranted.

System limits

Safety information

Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

Detection range

The system's detection potential is limited. Thus, a system reaction might not come or might come late.

The following situations may not be detected, for example:

- Slow moving vehicles when you approach them at high speed.
- Vehicles that suddenly swerve in front of you, or sharply decelerating vehicles.
- Vehicles with an unusual rear appearance.
- Two-wheeled vehicles ahead of you.

Functional limitations

The system may not be fully functional in the following situations:

- In heavy fog, wet conditions, or snow-fall.
- In tight curves.
- If the field of view of the camera or the windshield is dirty or covered.
- If the driving stability control systems are deactivated, for instance DSC OFF.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.

Warning sensitivity

The more sensitive the warning settings are, the more warnings are displayed. Therefore, there may also be an excess of premature or unjustified warnings and reactions.

Daytime pedestrian collision mitigation

Concept

The system may prevent some accidents with pedestrians.

When driving at city speeds, the system will issue a warning if there is imminent risk of a collision with pedestrians, and support this with a light braking function.


The camera at the base of the interior mirror controls the system.

General information

In sufficiently bright conditions, the system issues a warning of a possible risk of collision with pedestrians in the speed range from approx. 6 mph/10 km/h to approx. 35 mph/60 km/h

The system reacts to people who are within the detection range of the system.

Detection range

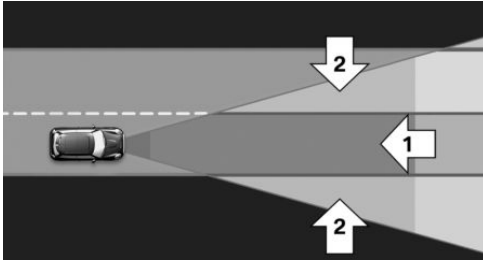

The detection area in front of the vehicle is divided into two areas:

- Central area, arrow 1, directly in front of the vehicle.
- Expanded area, arrow 2, to the right and left of the central area.

A collision is imminent if pedestrians are located within the central area. A warning is issued about pedestrians who are located within the extended area only if they are moving in the direction of the central area.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.


Overview

Button in the vehicle



 Intelligent Safety button

Camera

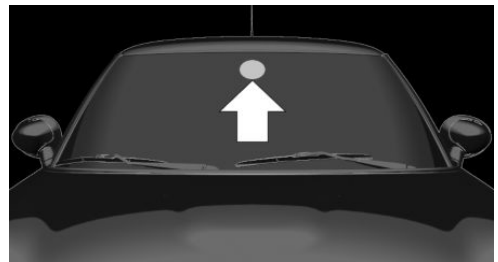

The camera is installed near the interior mirror.

Keep the windshield in front of the interior mirror clean and clear.

Switching on/off

Switching on automatically

The system is automatically active after every driving off.

Switching on/off manually



Press button briefly:

- The menu for the Intelligent Safety system is displayed. The systems are individually switched off according to their respective settings.
- LED lights up orange or goes out respective to their individual settings.

Adjust the settings as needed. The individual settings are stored for the driver profile currently in use.



Press button again:

- All Intelligent Safety systems are switched on.
- The LED lights up green.



Hold down button:

- All Intelligent Safety systems are switched off.
- The LED goes out.

Warning with braking function

Display

If a collision with a detected person is imminent, a warning symbol appears on the instrument cluster and in the Head-up Display.



The red symbol is displayed and a signal sounds.

Intervene immediately by braking or make an evasive maneuver.

Braking intervention

The warning prompts the driver to intervene. During a warning, the maximum braking force is used. In order to activate the Brake Assistant function, you must apply the brakes quickly and forcefully. If there is a risk of collision, the system may assist with braking. When the vehicle is traveling at a low speed, the vehicle may come to a complete stop.

The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The driver may interrupt the braking intervention function by stepping on the accelerator pedal or by actively moving the steering wheel.

The system's ability to detect objects may be limited in some circumstances. Refer to the information in this Owner's Manual regarding the limitations of the system and actively intervene as warranted.

System limits

Safety information

Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

Detection range

The detection potential of the camera is limited.

Thus, a warning might not be issued or be issued late.

The following situations may not be detected, for example:

- Partially covered pedestrians.
- Pedestrians that are not detected as such because of the viewing angle or contour.
- Pedestrians outside of the detection range.
- Pedestrians having a body size less than 32 in/80 cm.

Functional limitations

The system may not be fully functional or may not be available in the following situations:

- In heavy fog, wet conditions, or snowfall.
- In tight curves.
- If the field of view of the camera or the windshield is dirty or covered.
- If the driving stability control systems are deactivated, for instance DSC OFF.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- When it is dark outside.

Brake force display

Concept

Additional brake lights indicate emergency braking to the traffic behind. This can reduce the risk of a rear-end collision.

General information



- During normal brake application, the brake lights light up.
- During heavy brake application, the flashers additionally light up.

Fatigue alert

Concept

The system can detect decreasing alertness or fatigue of the driver during long, monotonous trips, for instance on highways. In this situation, it is recommended that the driver takes a break.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing one's physical state. An increasing lack of alertness or fatigue may not be detected or not be detected in time. There is a risk of accident. Make sure that the driver is rested and alert. Adjust driving style to traffic conditions.

Function

The system is switched on each time the engine is started and cannot be switched off.



After travel has begun, the system monitors certain aspects of the driver's behavior, so that decreasing alertness or fatigue can be detected.

This procedure takes the following criteria into account:

- Personal driving style, for instance steering behavior.
- Driving conditions, for instance time, length of trip.

Starting at approximately 43 mph/70 km/h, the system is active and can display a recommendation to take a break.

Break recommendation

If the driver becomes less alert or fatigued, a message is displayed in the Control Display with the recommendation to take a break.

A recommendation to take a break is displayed only once during an uninterrupted trip.

After a break, another recommendation to take a break cannot be displayed until after approximately 45 minutes.

System limits

The function may be limited in the following situations and may issue an incorrect warning or no warning at all:

- When the clock is set incorrectly.
- When the vehicle speed is mainly below about 43 mph/70 km/h.
- With a sporty driving style, such as during rapid acceleration or when cornering fast.
- In active driving situations, such as when changing lanes frequently.
- When the road surface is poor.
- In the event of strong side winds.

The system is reset approx. 45 minutes after parking the vehicle, for instance in the

case of a break during longer trips on highways.

PostCrash – iBrake

Concept

In the event of an accident, the system can bring the vehicle to a halt automatically without intervention by the driver in certain situations. This can reduce the risk of a further collision and the consequences thereof.

At standstill

After coming to a halt, the brake is released automatically. Secure the vehicle against rolling.

Harder vehicle braking

In certain situations, it can be necessary to bring the vehicle to a halt more quickly than the Brake Assistant allows.

To do this, quickly apply extra force to the brake. For a brief period, the braking pressure will be higher than the braking pressure that is achieved by the automatic braking function. This interrupts automatic braking.

Interrupting automatic braking

It can be necessary to interrupt automatic braking in certain situations, for instance for an evasive maneuver.

Interrupt automatic braking:

- By pressing the brake pedal.
- By pressing the accelerator pedal.

Driving stability control systems

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Anti-lock Braking System ABS

ABS prevents locking of the wheels during braking.

The vehicle maintains its steering power even during full brake applications, thus increasing active safety.

ABS is operational every time you start the engine.

Brake assistant

When you apply the brakes rapidly, this system automatically boosts the vehicle braking capability to the furthest possible extent. It reduces the braking distance to a minimum during an emergency stop. This system utilizes all of the capabilities provided by the Antilock Brake System ABS.

Do not reduce the pressure on the brake pedal for the duration of the emergency stop.

DSC Dynamic Stability Control

Concept

Within the physical limits, the system helps to keep the vehicle on a steady course by reducing engine speed and by applying brakes to the individual wheels.

To improve traction, the drive type may be changed, refer to page 69.

General information

DSC detects the following unstable driving conditions, for instance:

- Fishtailing, which can lead to oversteering.
- Loss of traction of the front wheels, which can lead to understeering.

Dynamic Traction Control DTC, refer to page 190, is a version of the DSC where forward momentum is optimized.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

 **Warning**

When driving with a roof load, for instance with roof-mounted luggage rack, the vehicle's center of gravity is higher, which increases the risk of the vehicle tipping in critical driving situations. There may be a risk of accident or risk of damage to property. Do not deactivate DSC Dynamic Stability Control when driving with roof load.

Indicator/warning lights



The indicator light flashes: DSC controls the drive and braking forces.

The indicator light lights up: DSC has malfunctioned.

Deactivating DSC: DSC OFF

General information

Depending on the operating state of the high-voltage system, the drive of the vehicle automatically switches between front-wheel, rear-wheel and four-wheel drive. If DSC is deactivated, this may result in automatic change of the drive type for unstable driving situations.

When DSC is deactivated, driving stability is reduced during acceleration and when driving in curves.

To increase vehicle stability, activate DSC again as soon as possible.

Deactivating DSC



Press and hold this button but not longer than approx. 10 seconds, until the indicator light for DSC OFF

lights up in the instrument cluster and displays DSC OFF.

DSC is switched off.

Activating DSC



Press the button.

DSC OFF and the DSC OFF indicator light go out.

Indicator/warning lights

When DSC is deactivated, DSC OFF is displayed in the instrument cluster.



The indicator light lights up: DSC is deactivated.

Automatic activation

When DSC is deactivated, automatic activation occurs in the following situations:

- The vehicle has a flat tire.
- When activating cruise control in TRACTION or DSC OFF mode.

DTC Dynamic Traction Control

Concept

DTC is a version of the DSC Dynamic Stability Control where forward momentum is optimized.

The system ensures maximum headway on special road conditions, for instance unpaved snowy roads or loose road surfaces, but with somewhat limited vehicle stability.

When DTC is activated, the vehicle has maximum traction. Driving stability is limited during acceleration and when driving in curves.

Drive carefully.

You may find it useful to briefly activate DTC under the following special circumstances:

- When driving in slush or on uncleared, snow-covered roads.
- When driving off from deep snow or loose ground.
- When driving with snow chains.

Deactivating/activating DTC Dynamic Traction Control

Activating DTC



Press the button.

TRACTION is displayed in the instrument cluster and the indicator light for DSC OFF lights up.

Deactivating DTC



Press the button again.

TRACTION and the DSC OFF indicator light go out.

Performance Control

Performance Control enhances the agility of the vehicle.

To increase maneuverability, wheels are braked individually when a sporty driving style is used.

Due to the variable drive configuration, this intervention can be done either on the front axle, the rear axle or on both axles simultaneously.


MINI Driving Modes switch

Concept

The MINI Driving Modes switch helps to fine-tune the vehicle's settings and features. Choose between three different programs.

Pressing the MINI Driving Modes switch will activate the particular program.

Operating the programs

MINI Driving Modes switch	Program
	SPORT
	MID
	GREEN

MID

MID provides balanced tuning.

With each starting operation, MID is activated using the Start/Stop button.

GREEN

Concept

GREEN, refer to page 249, provides consistent tuning to maximize range.

Activating GREEN

Press the MINI Driving Modes switch downward until GREEN is displayed in the instrument cluster.

Configuring GREEN

Via MINI Driving Modes switch

1. Activate GREEN.
2. "Configure GREEN"
3. Configure the program.

This configuration is retrieved when GREEN is activated.

Via the Central Information Display (CID)

1.  "My MINI"
2. "Vehicle settings"
3. If necessary, "Driving mode"

4. "Configure GREEN"

5. Select the desired setting.

This configuration is retrieved when GREEN is activated.

SPORT

Concept

Consistently sporty tuning of the drivetrain for greater driving agility.

Activating SPORT

Press the MINI Driving Modes switch upward until SPORT is displayed in the instrument cluster.


Configuring driving program

Settings can be made for the following driving programs in Driving mode:

- GREEN, refer to page 191.


Displays

Program selection

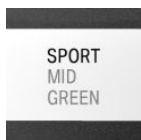

Pressing the MINI Driving Modes switch displays a list of programs, which can be selected.

Selected program

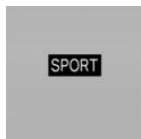

The instrument cluster displays the selected program.

Drive-off assistant

Concept

This system supports driving off on uphill grades. The parking brake is not required.

Driving off with the drive-off assistant

1. Hold the vehicle in place with the foot brake.
2. Release the foot brake and drive off without delay.

After the foot brake is released, the vehicle is held in place for approx. 2 seconds.

Servotronic

Servotronic is a speed-dependent power steering function.

The system provides the steering force with more support at low speeds than at higher ones. This makes it easier to park, for instance, and makes steering firmer when driving at faster speeds.

Furthermore, the steering force adapts according to the driving program, so that a firm, sporty feel or a comfortable steering response is conveyed.

Driving comfort

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Camera-based cruise control

Concept

Using this system, a desired speed and a distance to a vehicle ahead can be adjusted using the buttons on the steering wheel.

The system maintains the desired speed on clear roads. For this purpose, the vehicle accelerates or brakes automatically.

If a vehicle is driving ahead of you, the system adjusts the speed of your vehicle so that the set distance to the vehicle ahead is maintained. The speed is adjusted as far as the given situation allows.

The distance can be adjusted in several steps. For safety reasons, it depends on the respective speed.

With the Stop&Go function for Steptronic transmissions: if the vehicle ahead of you brakes to a halt, and then proceeds to drive again shortly thereafter, the system is able to detect this within the given system limits.

General information

A camera on the interior mirror is used to detect vehicles driving ahead.

Depending on the settings, the characteristics of cruise control may change in certain ranges.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Warning

The desired speed can be incorrectly adjusted or called up by mistake. There is a risk of accident. Adjust the desired speed to the traffic conditions. Watch traffic closely and actively intervene where appropriate.

Warning

Risk of accident due to too high speed differences to other vehicles, for instance in the following situations:

- When fast approaching a slowly moving vehicle.
- Vehicle suddenly swerving into own lane.

- When fast approaching standing vehicles.

There is a risk of injuries or danger to life. Watch traffic closely and actively intervene where appropriate.

Warning






An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.



In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

Overview


Buttons on the steering wheel

Button	Function
	Cruise control on/off, refer to page 195.
	Store/maintain speed, refer to page 195.
	Pause cruise control, refer to page 195. Continue cruise control with the last setting, refer to page 196.
	Reduce distance, refer to page 196.
	Increase the distance, refer to page 196.

Button	Function
	Increase speed, refer to page 195.
	Reduce speed, refer to page 195.

Buttons are arranged according to vehicle's series, optional features and country specifications.

Camera

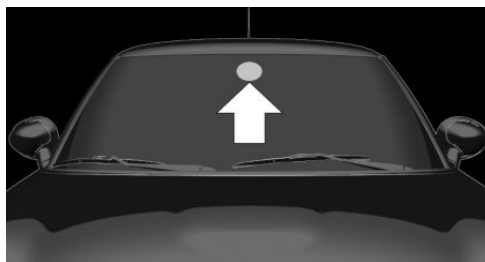

The camera is installed near the interior mirror.

Keep the windshield in front of the interior mirror clean and clear.

Functional requirements

Speed range

The system is best used on well-constructed roads.

The system is functional at speeds beginning at approx. 20 mph/30 km/h.

With the Stop&Go function for Steptronic transmissions: the system can also be activated while the vehicle is stationary.

The max. speed that can be set is 85 mph/140 km/h.

Switching on/off and interrupting cruise control

Switching on



Press the button on the steering wheel.



Display in the instrument cluster lights up.



Display in the instrument cluster lights up. The current speed is adopted as desired speed and displayed with symbol.

Cruise control is active and maintains the set speed.

DSC Dynamic Stability Control is switched on, if necessary.

Switching off

With the Stop&Go function for Steptronic transmissions: when switching off while stationary, depress the brake pedal simultaneously.



Press the button on the steering wheel.

The displays go out. The stored desired speed is deleted.

Interrupting manually



Press the button on the steering wheel.

With the Stop&Go function for Steptronic transmissions: when interrupting while stationary, depress the brake pedal simultaneously.

Interrupting automatically

The system is automatically interrupted in the following situations:

- When the driver applies the brakes.
- If selector lever position N is set.
- Dynamic Traction Control DTC is activated or DSC Dynamic Stability Control is deactivated.
- If DSC Dynamic Stability Control intervenes.
- If the detection range of the camera is impaired, for instance by soiling, heavy precipitation or glare effects from the sun.
- With the Stop&Go function for Steptronic transmissions: following a stationary period of approx. 3 seconds, after the vehicle was braked to a stop by the system.

Setting the speed

Maintaining/storing the speed

Press  or  button in the interrupted state.

When the system is switched on, the current speed is maintained and stored as the desired speed.



The stored speed is displayed on the symbol.


DSC Dynamic Stability Control is switched on, if necessary.

The speed can also be stored as follows:





Press the button.



Changing the speed

 or  button: press until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.

-  or  button: each time it is pressed to the point of resistance, the desired

speed increases or decreases by approx. 1 mph/1 km/h.

-  or  button: each time it is pressed past the resistance point, the desired speed changes by a maximum of 5 mph/10 km/h.

 or  button: hold down to repeat the action.

Adjusting the distance

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment. Due to the system limits, braking can be late. There may be a risk of accident or risk of damage to property. Be aware to the traffic situation at all times. Adjust the distance to the traffic and weather conditions and maintain the prescribed safety distance, possibly by braking.

Reduce distance



Press the button repeatedly until the desired distance is set.



The set distance is briefly displayed in the left part of the instrument cluster.

Increase the distance



Press the button repeatedly until the desired distance is set.



The set distance is briefly displayed in the left part of the instrument cluster.

Continuing cruise control

General information

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.

In the following cases, the stored speed value is deleted and cannot be called up again:

- When the system is switched off.
- When the ignition is switched off.

Calling up the stored speed and distance



Press the button with the system interrupted. Cruise control is continued with the stored values. The selected distance is briefly displayed in the Info Display.

Switching distance control on/off

Safety information

Warning

The system does not react to traffic driving ahead of you, but instead maintains the stored speed. There may be a risk of accident or risk of damage to property. Adjust the desired speed to the traffic conditions and brake as needed.

Switching distance control off

Distance control can be switched off and on when driving with cruise control activated.



Press and hold this button.

Or:



Press and hold this button.



The indicator light in the instrument cluster lights up.

To switch distance control back on, press one of the two buttons again briefly.

After changing over distance control, a Check Control message is displayed.

Displays in the instrument cluster

Desired speed and stored speed



In addition to the indicator light, the desired speed is displayed in the Info Display.

- Display lights up green: system is active, the display indicates the desired speed.
- Display lights up orange: system is interrupted, the display indicates the stored speed.
- No display: system is switched off.

If no speed is indicated, it is possible that the conditions necessary for operation are not currently fulfilled.

Distance to vehicle ahead of you

Selected distance from the vehicle driving ahead is briefly displayed in the left hand portion of the Info Display.

Distance display



Distance 1



Distance 2

Distance display



Distance 3



Distance 4

This value is set automatically after the system is switched on.

Detected vehicle



Symbol lights up orange:

A vehicle has been detected ahead of you.



With the Stop&Go function for Steptronic transmissions:

Rolling bars: the detected vehicle has driven away.

ACC does not accelerate. To accelerate, activate ACC as follows:

- By briefly pressing the accelerator pedal.
- By pressing the RES CNCL button.
- By pressing the \oplus or \ominus button.

Indicator/warning lights



Symbol flashes orange:

The conditions are not adequate for the system to work.

The system was deactivated but applies the brakes until you actively resume control by pressing on the brake pedal or accelerator pedal.



Symbol flashes red and a signal sounds:

Brake and make an evasive maneuver, if necessary.



The system has been interrupted or distance control is temporarily suppressed because the accelerator

pedal is being pressed; a vehicle was not detected.




Distance control is temporarily suppressed because the accelerator pedal is being pressed; a vehicle was detected.

Displays in the Head-up Display

The information from Active Cruise Control can also be displayed in the Head-up Display.

System limits

Detection range

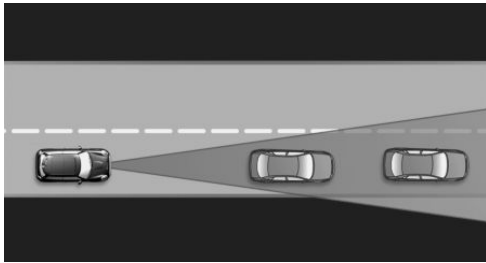


The detection capacity of the system and the automatic braking capacity are limited. Two-wheeled vehicles for instance might not be detected.

Deceleration

The system does not decelerate in the following situations:

- For pedestrians, cyclists or similarly slow-moving road users.
- For red traffic lights.
- For cross traffic.
- For oncoming traffic.
- Unlit vehicles or vehicles with nonworking lighting at night.

Swerving vehicles

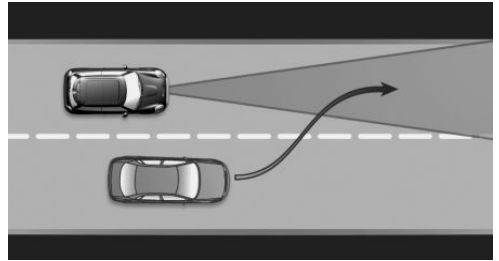

A vehicle driving in front of you is not detected until it is completely within the same lane as your vehicle.

If a vehicle driving ahead of you suddenly swerves into your lane, the system may not be able to automatically restore the selected distance. It may not be possible to restore the selected distance in certain situations, including if you are driving significantly faster than vehicles driving ahead of you, for instance when rapidly approaching a truck. When a vehicle driving ahead of you is reliably detected, the system requests that the driver intervene by braking and carrying out evasive maneuvers, if needed.


With the Stop&Go function for Steptronic transmissions: driving off

In some situations, the vehicle cannot drive off automatically; for example:

- On steep uphill grades.
- In front of bumps in the road.

In these cases, press on the accelerator pedal.

Cornering

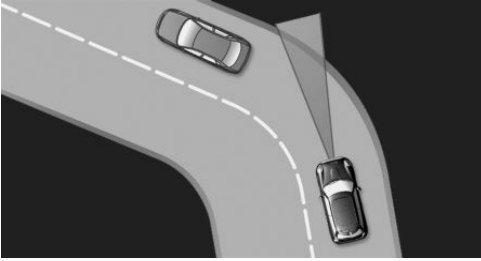

If the desired speed is too high for a curve, the speed is reduced slightly, although curves cannot be anticipated in advance. Therefore, drive into a curve at an appropriate speed.

The system has a limited detection range. Situations can arise in tight curves where a vehicle driving ahead will not be detected or will be detected very late.



When you approach a curve the system may briefly report vehicles in the next lane due to the bend of the curve. If the system decelerates you may compensate it by briefly accelerating. After releasing the accelerator pedal the system is reactivated and controls speed independently.

Weather

The following restrictions can occur under unfavorable weather or light conditions:

- Poorer vehicle recognition.
- Short-term interruptions for vehicles that are already recognized.

Examples of unfavorable weather or light conditions:

- Wet conditions.
- Snowfall.
- Slush.
- Fog.
- Glare.

Drive attentively, and react to the current traffic situation. If necessary, intervene actively, for instance by braking, steering or evading.

Engine power

The desired speed may not be maintained on uphill grades if engine power is insufficient.

Malfunction

A Check Control message is displayed if the system fails or was automatically deactivated.

The system may not be fully functional in the following situations:

- When an object was not correctly detected.
- In heavy fog, wet conditions, or snowfall.
- In tight curves.
- If the field of view of the camera or the windshield is dirty or covered.
- When driving toward bright lights.
- Up to 20 seconds after the start of the engine, via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.

Cruise control

Concept

Using this system, a desired speed can be adjusted using the buttons on the steering wheel. The system maintains the desired speed. The system accelerates and brakes automatically as needed.

General information

The system is functional at speeds beginning at approx. 20 mph/30 km/h.

Depending on the settings, the cruise control settings may change under certain conditions.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

Warning






The use of the system can lead to an increased risk of accidents in the following situations, for instance:

- On winding roads.
- In heavy traffic.
- On slippery roads, in fog, snow, or wet conditions, or on a loose road surface.

There may be a risk of accident or risk of damage to property. Only use the system if driving at constant speed is possible.

Overview

Buttons on the steering wheel

Button	Function
	Cruise control on/off, refer to page 200.
	Store speed, refer to page 201.
	Pause cruise control, refer to page 200. Continue cruise control with the last setting, refer to page 201.
	Increase speed, refer to page 201.
	Reduce speed, refer to page 201.

Switching on/off and interrupting cruise control

Switching on



Press the button on the steering wheel.



The indicator light in the instrument cluster lights up.



The current speed is adopted as the desired speed and is displayed with the symbol in the instrument cluster.

Cruise control is active and maintains the set speed.

DSC Dynamic Stability Control is switched on, if necessary.

Switching off



Press the button on the steering wheel.

The displays go out. The stored desired speed is deleted.

Interrupting manually



When active, press the button on the steering wheel.

Interrupting automatically

The system is automatically interrupted in the following situations:

- When the driver applies the brakes.
- If selector lever position N is set.
- Dynamic Traction Control DTC is activated or DSC Dynamic Stability Control is deactivated.
- If DSC Dynamic Stability Control intervenes.

Setting the speed

Maintaining/storing the speed

Press  or  button in the interrupted state.

When the system is switched on, the current speed is maintained and stored as the desired speed.

The stored speed is displayed in the instrument cluster.

DSC Dynamic Stability Control is switched on, if necessary.

The speed can also be stored as follows:









Press the button.

Changing the speed

 or  button: press until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.

-  or  button: each time it is pressed to the point of resistance, the desired speed increases or decreases by approx. 1 mph/1 km/h.
-  or  button: each time it is pressed past the resistance point, the desired speed changes by a maximum of 5 mph/10 km/h.
-  or  button: pressing it to the resistance point and holding it accelerates or decelerates the vehicle without requiring pressure on the accelerator pedal. After the button is released, the vehicle maintains its final speed. Pressing the switch beyond the resistance point causes the vehicle to accelerate more rapidly.

Continuing cruise control

General information

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.

Calling up the stored speed



Press the button on the steering wheel.

The stored speed is reached again and maintained.

Displays in the instrument cluster

Indicator light



Depending on how the vehicle is equipped, the indicator light in the instrument cluster indicates whether the system is switched on.

Desired speed and stored speed



The desired speed is displayed together with the symbol.

- Display lights up green: system is active, the display indicates the desired speed.
- Display lights up orange: system is interrupted, the display indicates the stored speed.
- No display: system is switched off.

If no speed is indicated, it is possible that the conditions necessary for operation are not currently fulfilled.

System limits

Engine power

The desired speed is also maintained downhill, but may not be maintained on uphill grades if engine power is insufficient.

PDC Park Distance Control

Concept

PDC is a support when parking. The system detects objects behind the vehicle. If the vehicle is equipped with front PDC, objects in front of the vehicle are detected too. Objects that you are approaching slowly are indicated by signal tones and a visual display.

General information

The ultrasound sensors for measuring the distances are located in the bumpers.

The delete range, depending on obstacles and environmental conditions, is approx. 6 ft/2 m.

An acoustic warning is first given in the following situations:

- By the front middle sensors and the two corner sensors at approx. 24 in/60 cm from the object.
- By the rear middle sensors at approx. 5 ft/1.50 m from the object.
- When a collision is imminent.

Safety information

Warning


The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic and vehicle surroundings closely and actively intervene where appropriate.

Warning

Due to high speeds when PDC Park Distance Control is activated, the warning can be delayed due to physical circumstances. There is a risk of injury or risk of damage to property. Avoid approaching an object too fast. Avoid driving off fast while PDC Park Distance Control is not yet active.


Overview

With front PDC: button in vehicle

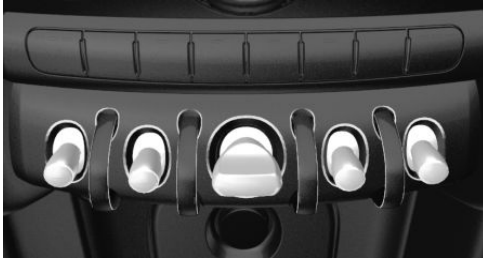

Park assistance button

Ultrasound sensors

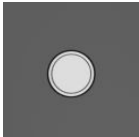

Ultrasound sensors of the PDC, for instance in the bumpers.

Functional requirements

Ensure full functionality:

- Do not cover sensors, for instance with stickers, bicycle racks.
- Keep the sensors clean and unobstructed.


Switching on/off

Switching on automatically

The system switches on automatically in the following situations:

- If selector lever position R is engaged when the engine is running.
The rearview camera also switches on.
- With front PDC: when obstacles are detected behind or in front of the vehicle by PDC and the speed is slower than approx. 2.5 mph/4 km/h.

With front PDC: automatic activation on obstacle detection can be switched off. Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. "Parking"
4. "Automatic PDC activation": depending on the vehicle equipment.
5. "Automatic PDC activation"
The setting is stored for the driver profile currently used.

Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded. Switch the system back on, if needed.

With front PDC: switching on/off manually



Press the park assistance button.

- On: the LED lights up.
- Off: the LED goes out.

The rearview camera image is displayed if the reverse gear is engaged when pressing the park assistance button.

Warning

Signal tones

An intermittent tone indicates when the vehicle is approaching an object. For instance, if an object is detected to the left rear of the vehicle, a signal tone sounds from the left rear speaker.

The shorter the distance to the object, the shorter the intervals.


If the distance to a detected object is less than approx. 10 inches/25 cm, a continuous tone is sounded.

With front PDC: if objects are simultaneously located both in front of and behind the vehicle, an alternating continuous signal is sounded.

The signal tone is switched off, when selector lever position P is engaged on vehicles with Steptronic transmission.

Volume

The ratio of the PDC signal tone volume to the entertainment volume can be adjusted.

1.  "My MINI"
2. "System settings"
3. "Tone"
4. "Volume settings"
5. "PDC"
6. Set the desired value.

The setting is stored for the driver profile currently used.

Visual warning

The approach of the vehicle to an object can be shown on the Control Display. Objects that are farther away are already displayed on the Control Display before a signal sounds.

A display appears as soon as Park Distance Control (PDC) is activated.

The range of the sensors is represented in colors: red, green and yellow.

When the image of the rearview camera is displayed, the switch can be made to PDC:

-  "Rear view camera"

System limits

Safety information

Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

Limits of ultrasonic measurement

Ultrasonic measuring might not function under the following circumstances:

- For small children and animals.
- For persons with certain clothing, for instance coats.
- With external interference of the ultrasound, for instance from passing vehicles or loud machines.
- When sensors are dirty, iced over, damaged or out of position.
- If cargo protrudes.
- Under certain weather conditions such as high relative humidity, wet conditions, snowfall, extreme heat, or strong wind.
- With tow bars and trailer couplings of other vehicles.
- With thin or wedge-shaped objects.
- With moving objects.
- With elevated, protruding objects such as ledges or cargo.
- With objects with corners and sharp edges.

- With objects with a fine surface structure such as fences.
- For objects with porous surfaces.
- Low objects already displayed, for instance curbs, can move into the blind area of the sensors before or after a continuous tone sounds.

False warnings

The system may issue a warning under the following conditions even though there is no obstacle within the detection range:

- In heavy rain.
- When sensors are very dirty or covered with ice.
- When sensors are covered in snow.
- On rough road surfaces.
- On uneven surfaces, such as speed bumps.
- In large buildings with right angles and smooth walls, for instance in underground garages.
- In automatic vehicle washes.
- Due to heavy exhaust.
- Due to other ultrasound sources, for instance sweeping machines, high pressure steam cleaners or neon lights.

The malfunction is signaled by a continuous tone alternating between the front and rear speakers. As soon as the malfunction due to other ultrasound sources is no longer present, the system is again fully functional.

With front PDC: to reduce false alarms, switch off automatic PDC activation on obstacle detection, for instance in vehicle washes; see Switching on/off.

Malfunction

A Check Control message is displayed in the instrument cluster.



Red symbol is displayed, and the range of the sensors is dimmed on the Control Display.

PDC has failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Rearview camera

Concept

The rearview camera provides assistance in parking and maneuvering backwards. The area behind the vehicle is shown on the Control Display.


Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic and vehicle surroundings closely and actively intervene where appropriate.

Overview

Depending on the vehicle equipment: button in the vehicle

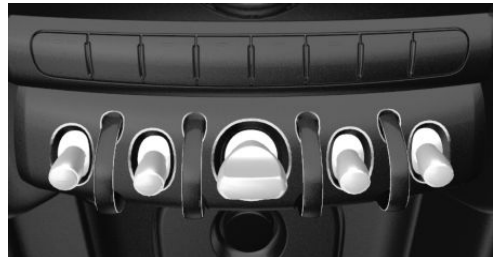

 Park assistance button

Camera



The camera lens is located in the handle of the tailgate.

The image quality may be impaired by dirt. If necessary, clean the camera lens.

Switching on/off

Switching on automatically

The system is switched on automatically if selector lever position R is engaged when the engine is running.

Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded. Switch the system back on, if needed.

Depending on the vehicle equipment: switching on/off manually

 Press the park assistance button.

- On: the LED lights up.
- Off: the LED goes out.

The parking assistance functions are shown on the Control Display.

Switching the view via the Central Information Display (CID)

If the rearview camera view is not displayed, change the view via the Central Information Display (CID):

 "Rear view camera"

The rearview camera image is displayed.



Display on the Control Display

Functional requirement


- The rearview camera is switched on.
- The tailgate is fully closed.
- Keep the recording range of the camera clear.
Protruding cargo or carrier systems and trailers that are not connected to a trailer power socket can lead to malfunctions.

Activating assistance functions

More than one assistance function can be active at the same time.

- Parking aid lines
 "Parking aid lines"
Lanes and turning radius lines are indicated.
- Obstacle marking
 "Obstacle marking"
Obstacles are marked, depending on the vehicle equipment.

Pathway lines

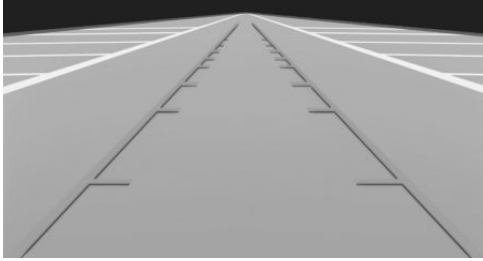


Pathway lines can be superimposed on the image of the rearview camera.

Pathway lines help you to estimate the space required when parking and maneuvering on level roads.

Pathway lines depend on the current steering angle and are continuously adjusted to the steering wheel movements.

Turning radius lines

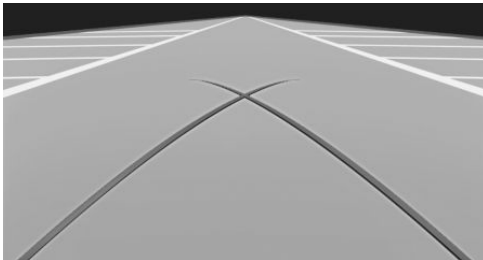


Turning radius lines can be superimposed on the image of the rearview camera.

Turning radius lines show the course of the smallest possible turning radius on a level road.

Only one turning radius line is displayed after the steering wheel is turned past a certain angle.

Obstacle marking

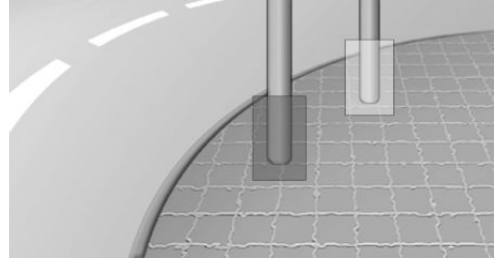


Depending on the vehicle equipment, obstacle markings can be faded into the image of the rearview camera.


The colored thresholds of the obstacle markings match the markings of the PDC Park Distance Control.

Parking using pathway and turning radius lines

1. Position the vehicle so that the turning radius lines lead to within the limits of the parking space.

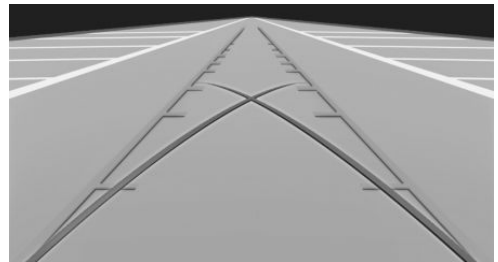


- Turn the steering wheel to the point where the pathway line covers the corresponding turning radius line.

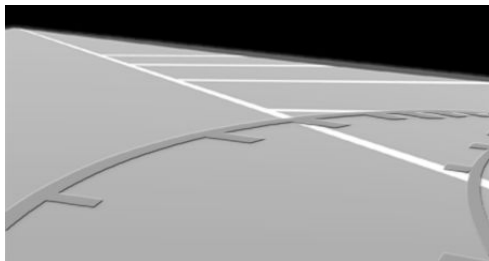

Display settings


Brightness

With the rearview camera switched on:

-  Select the symbol.
- Turn the Controller until the desired setting is reached and press the Controller.

Contrast

With the rearview camera switched on:

-  Select the symbol.
- Turn the Controller until the desired setting is reached and press the Controller.

System limits

Detection of objects

Very low obstacles or high, protruding objects such as ledges may not be recognized by the system.

Depending on the vehicle equipment, some assistance functions also consider data from the PDC Park Distance Control.


Follow the notes in the PDC Park Distance Control chapter.

The objects displayed on the Control Display may be closer than they appear. There-

fore, do not estimate the distance from the objects on the display.

Parking assistant

Concept

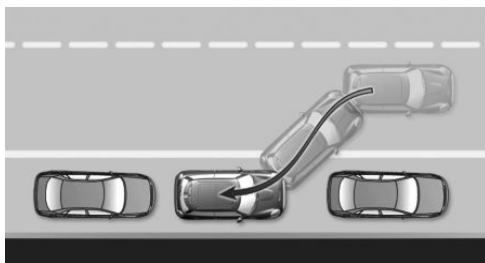

This system assists the driver in parking parallel to the road.

General information

Parking assistant handling is divided into three steps:

- Switching on and activating.
- Parking space search.
- Parking.

Ultrasound sensors measure parking spaces on both sides of the vehicle.

The parking assistant calculates the best possible parking line and takes control of steering during the parking procedure.

System status and instructions on required actions are displayed on the Control Display.

A component of the parking assistant is the PDC Park Distance Control.

Safety information

Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

NOTICE

The parking assistant can steer the vehicle over or onto curbs. There is a risk of damage to property. Watch traffic closely and actively intervene where appropriate.

The safety information of the PDC Park Distance Control applies in addition.

Overview

Button in the vehicle



Park assistance button

Ultrasound sensors



The ultrasound sensors for measuring parking spaces are located on the wheel housing.

Functional requirements

Ultrasound sensors

Ensure full functionality:

- Do not cover sensors, for instance with stickers.
- Keep the sensors clean and unobstructed.

For measuring parking spaces

- Maximum speed while driving forward approx. 22 mph/35 km/h.
- Maximum distance to row of parked vehicles: 5 ft/1.5 m.

Suitable parking space

- Gaps behind an object that has a min. length of 5 ft/1.5 m.
- Gap between two objects with a minimum length of approx. 5 ft/1.5 m.
- Min. length of gap between two objects: your vehicle's length plus approx. 3.3 ft/1.0 m.
- Minimum depth: approx. 5 ft/1.5 m.


For parking

- Doors and tailgate are closed.


- The parking brake is released.
- When parking in parking spaces on the driver's side, the corresponding turn signal must be switched on.

Switching on and activating

Switching on with the button

 Press the park assistance button. The LED lights up.


The current status of the parking space search is indicated on the Control Display.

 Parking assistant is activated automatically.

Switching on with reverse gear



Shift into reverse.

The current status of the parking space search is indicated on the Control Display.


To activate:  "Parking Assistant"

Display on the Control Display


System activated/deactivated

Symbol	Meaning
	Gray: the system is not available. White: the system is available but not activated.
	The system is activated.

Parking space search and system status

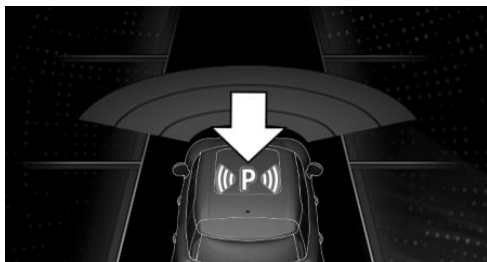



- Symbol P on the vehicle image: the parking assistant is activated and the parking space search is active.
- Control Display shows suitable parking spaces at the edge of the road next to the vehicle symbol. When the parking assistant is active, suitable parking spaces are highlighted.

 The parking procedure is active. Steering control has been taken over by system.

- Parking space search is always active whenever the vehicle is moving forward slow and straight, even if the system is deactivated. When the system is deactivated, the displays on the Control Display are shown in gray.

Parking using the parking assistant

Parking

1.  Press the park assistance button or shift into reverse gear to switch on the parking assistant, refer to page 210. Activate the parking assistant, if needed.  Parking assistant is activated.
2. Pass the row of parked vehicles at a speed of up to approx. 22 mph/35 km/h

and at a distance of maximum 5 ft/1.5 m.

The status of the parking space search and possible parking spaces are displayed on the display, refer to page 210.

3. Follow the instructions on the display.



The best possible parking position will come after gear change on the stationary vehicle - wait for the automatic steering wheel move.

The end of the parking procedure is indicated on the display.

4. Adjust the parking position yourself, if needed.

Interrupting manually

The parking assistant can be interrupted at any time:

-  Press the park assistance button.
-  "Parking Assistant"

Interrupting automatically

The system is interrupted automatically in the following situations:

- If the driver grasps the steering wheel or takes over steering.
- If a gear is selected that does not match the instruction on the display.
- If the vehicle speed exceeds approx. 6 mph/10 km/h.
- Possibly on snow-covered or slippery road surfaces.
- If a maximum number of parking attempts or the time taken for parking is exceeded.
- If the PDC Park Distance Control displays clearances that are too small.
- When switching into other functions of the radio.

A Check Control message is displayed.


Resuming

An interrupted parking procedure can be continued, if needed.

Reactivate the parking assistant, refer to page 210, and follow the instructions on the display.

Switching off

The system can be switched off as follows:

-  Press the park assistance button.
- Switching off the ignition.

System limits

Safety information

Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

No parking assistance

The parking assistant does not offer assistance in the following situations:

- In tight curves.

Functional limitations

The system may not be fully functional in the following situations:

- On bumpy road surfaces such as gravel roads.
- On slippery ground.



- With accumulations of leaves/snow in the parking space.
- With a mounted emergency wheel.
- With ditches or edges, for instance an edge of a port.

Limits of ultrasonic measurement

Ultrasonic measuring might not function under the following circumstances:

- For small children and animals.
- For persons with certain clothing, for instance coats.
- With external interference of the ultrasound, for instance from passing vehicles or loud machines.
- When sensors are dirty, iced over, damaged or out of position.
- If cargo protrudes.
- Under certain weather conditions such as high relative humidity, wet conditions, snowfall, extreme heat, or strong wind.
- With tow bars and trailer couplings of other vehicles.
- With thin or wedge-shaped objects.
- With moving objects.
- With elevated, protruding objects such as ledges or cargo.
- With objects with corners and sharp edges.
- With objects with a fine surface structure such as fences.
- For objects with porous surfaces.
- Low objects already displayed, for instance curbs, can move into the blind area of the sensors before or after a continuous tone sounds.
- The parking assistant may identify parking spaces that are not suitable for parking.

Tire size

The parking position may vary depending on the tire size.

Malfunction

A Check Control message is displayed.

The parking assistant failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

Climate control

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

- Emission tested passenger compartment.
- Microfilter.
- Air conditioning system to control the temperature, air flow and recirculated-air mode.

Depending on the equipment specification:

- Microfilter/activated-charcoal filter.
- Automatic climate control.
- Parked-car ventilation.

Interior air quality

The air quality in the vehicle is improved by the following components:

Air conditioner



1 Air distribution settings

2 Air flow

- 3 Temperature
- 4 Seat heating, right [103](#)
- 5 Air conditioning
- 6 Recirculated-air mode

- 7 Rear window defroster
- 8 Windshield defroster
- 9 Seat heating, left [103](#)

Climate control functions in detail

Switching the system on/off

Switching on

Set any air flow.

Switching off



Turn the wheel for air flow all the way to the left.

Temperature

Concept

The system heats or cools, depending on the set temperature.

Adjusting



Turn the wheel to set the desired temperature.

Air conditioning

Concept

The air in the car's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again.

The car's interior can be cooled via the A/C button with the engine running and/or with drive-ready state activated.

Switching on/off



Press the button.

The LED is illuminated with air conditioning switched on.

Depending on the weather, the windshield may fog up briefly when the engine is started.

The air conditioner produces condensation water, refer to page [245](#), that will exit from below the vehicle.

Recirculated-air mode

Concept

You may react to unpleasant odors or pollutants in the immediate environment by temporarily suspending the supply of outside air. The system then recirculates the air flow within the vehicle.

Operation



Press the button:

The LED is illuminated when recirculated-air mode is switched on. The supply of outside air is shut off.

When recirculated-air mode is switched off, fresh air is directed into the vehicle's interior.

To prevent window condensation, recirculated-air mode switches off automatically after a certain amount of time, depending on the external temperature.

With constant recirculated-air mode, the air quality in the car's interior deteriorates and window fogging increases.

If the windows fog over, switch off recirculated-air mode and increase the air flow, if needed.

Controlling the air flow manually

Concept

The air flow for climate control can be adjusted manually.

Operation



Turn the ring to set the desired air flow.

The higher the air flow, the more effective the heating or cooling will be.

The air flow from the air conditioner may be reduced automatically to save battery power.

Controlling the air distribution manually





Concept

The air distribution for climate control can be adjusted manually.

Operation



Turn the wheel to select the desired program or the desired intermediate setting.

-  Windows.
-  Upper body region.
-  Floor area.
-  Windows, upper body region, and floor area.

To defrost windows and remove condensation

Make the following settings to defrost the windows and remove condensation:

- Direct the air distribution onto the windows.
- Increasing the air flow.
- Increase the temperature.
- Switch on the air conditioning if needed.

Windshield defroster



Press the button. The LED lights up. The front window defroster switches off automatically after a certain period of time.

Rear window defroster



Press the button. The LED lights up. The rear window defroster switches off automatically after a certain period of time.

For permanent activation, press the button for longer than 3 seconds. To deactivate, press the button again.

The rear window defroster can only be activated continuously at an external temperature below approx. 41 °F/5 °C.


When GREEN Mode is activated, the heating output is reduced.

Microfilter

In external and recirculated-air mode, the microfilter filters dust and pollen from the air.

Have this filter changed during vehicle maintenance, refer to page [294](#).

Automatic climate control

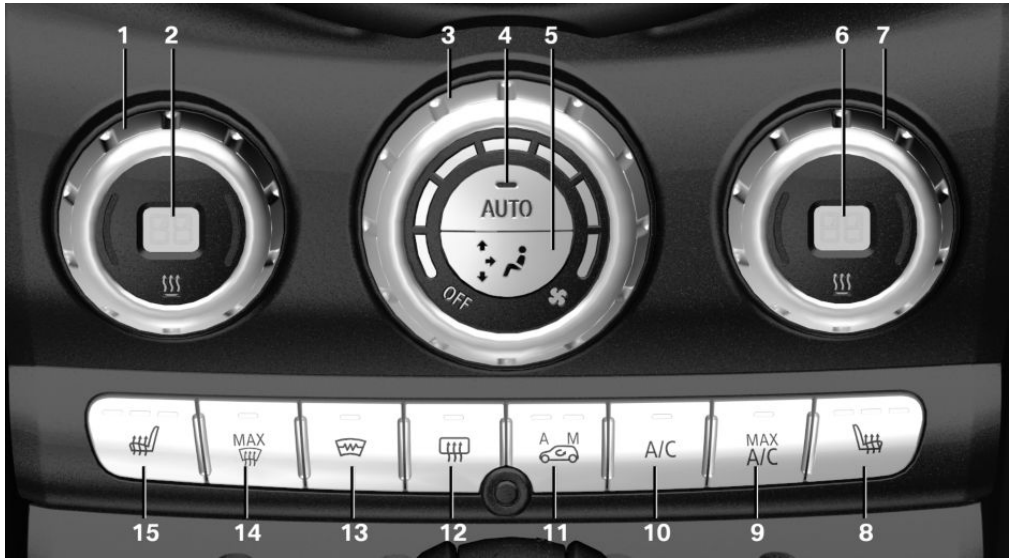

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 Temperature, left 2 Display 3 Air flow, AUTO intensity 4 AUTO program 5 Air distribution, manual 6 Display 7 Temperature, right 8 Seat heating, right 103 | <ul style="list-style-type: none"> 9 Maximum cooling 10 Air conditioning 11 Recirculated-air mode 12 Rear window defroster 13 Windshield defroster 14 To defrost windows and remove condensation 15 Seat heating, left 103 |
|--|---|

Climate control functions in detail

Switching the system on/off

Switching on

Set any air flow.

Switching off



Turn wheel for air flow to the left until the control switches off.

Temperature

Concept

The automatic climate control achieves the set temperature as quickly as possible, if

necessary by using the maximum cooling or heating power, and then keeps it constant.

Adjusting



Turn the wheel to set the desired temperature.

Do not rapidly switch between different temperature settings. The automatic climate control will not have sufficient time to adjust the set temperature.

Air conditioning

Concept

The air in the car's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again.

The car's interior can be cooled via the A/C button with the engine running and/or with drive-ready state activated.

Switching on/off



Press the button.

The LED is illuminated with air conditioning switched on.

Depending on the weather, the windshield may fog up briefly when the engine is started.

The cooling function is switched on automatically with the AUTO program.

When using the automatic climate control, condensation water, refer to page 245, develops and drains underneath the vehicle. This is normal.

Maximum cooling

Concept

The system is set to the lowest temperature, maximum air flow and recirculated-air mode.

General information

The function is available with external temperatures beyond approx. 32 °F/0 °C and with the engine running.

Air flows out of the vents to the upper body region. The vents need to be open for this.

The air flow can be adjusted with the program active.

Switching on/off



Press the button.

The LED is illuminated with the system switched on.

The system is set to the lowest temperature, optimum air flow and air circulation mode.

AUTO program

Concept

The AUTO program cools, ventilates or heats the car's interior automatically.

The air distribution and temperature are controlled automatically depending on the temperature in the car's interior and the desired temperature setting including the selected intensity of the air flow.

Switching on/off



Press the button.

The LED is illuminated with the AUTO program switched on.

Depending on the selected temperature, AUTO intensity and outside influences, the

air is directed to the windshield, side windows, upper body, and into the floor area.

Point the side vents toward the side windows.

The following features are switched on automatically with the AUTO program:

- The air conditioning, refer to page 217.

To switch off the program: press the button again or manually adjust the air distribution.

Intensity

With the AUTO program activated, the automatic intensity control can be changed.



Turn the ring to set the desired intensity from soft to intensive.

The set intensity is displayed via the position of the illuminated LED segment.

Automatic recirculated-air control/ recirculated-air mode

Concept

The automatic recirculated-air control AUC recognizes odors or pollutants in the outside air. The outside air supply is shut off and the interior air is recirculated.

General information

If the system is activated, a sensor detects pollutants in the outside air and controls the shut-off automatically.

If the system is deactivated, outside air continuously flows into the car's interior.

With constant recirculated-air mode, the air quality in the car's interior deteriorates and window fogging increases.

You may react to unpleasant odors or pollutants in the immediate environment by tem-

porarily suspending the supply of outside air. The system then recirculates the air flow within the vehicle.

Switching on/off



Press button repeatedly to select an operating mode:

- LEDs off: outside air flows in continuously.
- Left LED on, automatic recirculated-air control: a sensor detects pollutants in the outside air and shuts off automatically.
- Right LED on, recirculated-air mode: the supply of outside air into the vehicle is permanently blocked.

To prevent window condensation, recirculated-air mode switches off automatically after a certain amount of time, depending on the external temperature.

If windows are fogged over, switch off the recirculating mode and press the AUTO button. Make sure that air can flow to the windshield.

Adjusting the air flow manually

Concept

The air flow for climate control can be adjusted manually.

General information

To adjust the air flow manually switch off AUTO program first.

Operation



Turn the ring to set the desired air flow.

The manually adjusted air flow is displayed via illuminated LED segments.

The air flow of the automatic climate control may be reduced automatically to save battery power.

Adjusting the air distribution manually

Concept

The air distribution for climate control can be adjusted manually.

Operation



Press the button repeatedly to select a program:

- Windows, upper body region, and floor area.
- Upper body region and floor area.
- Floor area.
- Windows and floor area.
- Windows.
- Windows and upper body region.
- Upper body region.

To defrost windows and remove condensation

Concept

Ice and condensation are quickly removed from the windshield and the front side windows.

Switching on/off



Press the button.

The LED is illuminated with the system switched on.

Ice and condensation are quickly removed from the windshield and the front side windows.

The air flow can be adjusted with the program active.

If there is window condensation, switch on the air conditioning too.

Windshield defroster



Press the button. The LED lights up.

The front window defroster switches off automatically after a certain period of time.

Rear window defroster



Press the button. The LED lights up.

The rear window defroster switches off automatically after a certain period of time.

For permanent activation, press the button for longer than 3 seconds. To deactivate, press the button again.

The rear window defroster can only be activated continuously at an external temperature below approx. 41 °F/5 °C.

When GREEN Mode is activated, the heating output is reduced.

Microfilter/activated-charcoal filter

In external and recirculated-air mode, the microfilter/activated charcoal filter filters dust, pollen, and gaseous pollutants out of the air.

Have this filter changed during vehicle maintenance, refer to page [294](#).

Ventilation

Setting

The air flow directions can be individually adjusted:


- Direct ventilation:

The air flow is directly pointed onto the person. The air flow heats or cools noticeably, depending on the adjusted temperature.

- Indirect ventilation:


If the vents are fully or partly closed, the air is directly routed into the car's interior.

Front ventilation

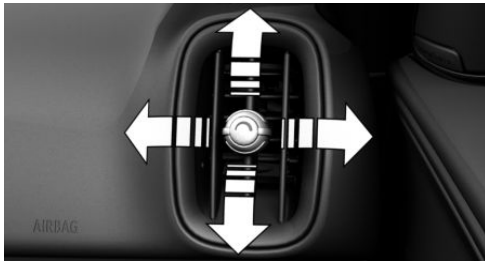

- Turn knob for continuous opening and closing of the vents.
- Swivel the vents to alter the direction of the vent flow, arrows.

Ventilation in the rear

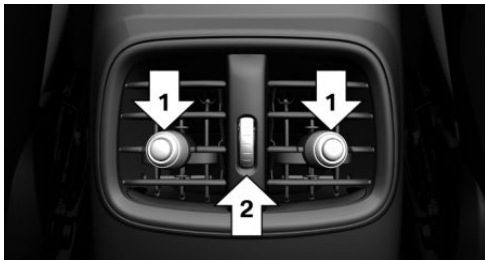

- Lever for changing the air flow direction, arrow 1.
- Thumbwheel for variable opening and closing of the vents, arrow 2.

Stationary climate control

Concept

Stationary climate control cools or heats the car's interior prior to departure to a comfortable temperature.

The system automatically cools, vents, or heats depending on the internal and external temperature. Snow and ice may be removed more easily.

General information

The stationary climate control can be switched on and off directly or via a preset departure time:

- Direct operation, refer to page 221.
- Preselected departure times, refer to page 221.

The air automatically exits through the vents to the windshield, the side windows, the upper body region and into the floor area.

The system switches off automatically after a certain period of time.

If stationary climate control is used during the charging process, less air conditioning capacity will be required while driving. This optimizes the range.

Functional requirements

- Engine switched off and/or drive-ready state deactivated.
- High-voltage battery sufficiently charged or charging cable connected.

If the high-voltage battery is heavily discharged, it can take some time after connecting the charging cable, until the stationary climate control will be functional.

- Direct operation or departure time preselected: depends on internal, external, and set desired temperature.

- Make sure that the vehicle's date and time are set correctly.
- The ensure the starting capability of the vehicle, the stationary climate control may be automatically switched off, for instance after repeated switching on: switch the drive-ready state on and off and the system is available again.
- The vents are open to allow air to flow out.

Switching on/off directly


Concept

The system can be switched on or off directly.

The system switches off automatically after a certain period of time.

Via the Central Information Display (CID)

The system can be switched on or off via the Central Information Display (CID).

1.  "My MINI"
2. "Vehicle settings"
3. If necessary, "Climate functions"
4. "Activate comfort climate"
5. "Activate now"

Climate control for departure time

Concept

Different departure times can be set to ensure a comfortable interior temperature in the vehicle at the time of departure.

The activation time is automatically determined based on the temperature.


The system promptly switches on before the selected departure time.

The departure time is preselected in two steps:

- Set departure times.
- Activate departure times.

Setting the departure time


Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. If necessary, "Climate functions"
4. "Activate comfort climate"
5. "Plan comfort climate"
6. Set the desired departure time, refer to page 261.


Activating the departure time


If a departure time is to influence the switching on of the stationary climate control, the respective departure time must be activated first.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle settings"
3. If necessary, "Climate functions"
4. "Activate comfort climate"
5. "Plan comfort climate"
6. "Precondition for departure"

Activate the desired departure time.

 The symbol on the automatic climate control lights up when the departure time is activated.

 The symbol on the automatic climate control flashes when the stationary climate control has been switched on.

Interior equipment

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Integrated Universal Remote Control

Concept

The integrated Universal Remote Control in the interior mirror can operate up to 3 functions of remote-controlled systems such as garage door drives, barriers, or lighting systems.

General information

The Integrated Universal Remote Control replaces up to 3 different hand-held transmitters. To operate the remote control, the buttons on the interior mirror must be programmed with the desired functions. The hand-held transmitter for the particular system is required in order to program the remote control.

Before selling the vehicle, delete the stored functions for the sake of security.

If possible, do not install the antenna of the remote-controlled system, e.g. the garage door drive, near metal objects to ensure the best possible operation.

Safety information

Warning

The operation of remote-controlled systems with the integrated universal remote control, such as the garage door, may result in injury, for example, body parts becoming jammed in a garage door. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety information of the hand-held transmitter.

Compatibility




If this symbol is printed on the packaging or in the owner's manual of the system to be controlled, the system is generally compatible with the integrated Universal Remote Control.

Additional questions are answered by:

- A dealer's service center or another qualified service center or repair shop.
- www.homelink.com on the Internet.

HomeLink is a registered trademark of Gen-tex Corporation.

Overview

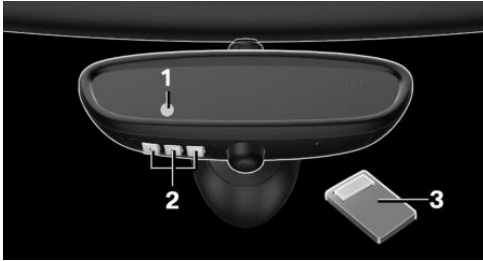

- 1 LED
- 2 Programmable keys
- 3 Hand-held transmitters of the system

Programming

General information

The battery of the hand-held transmitter must be fully charged at the time of programming to ensure an optimal range of the integrated universal remote control.

1. Switch on the ignition.
2. Initial setup:

Press and hold the two outer buttons on the interior mirror simultaneously for approximately 10 seconds until the LED flashes green rapidly. This erases all programming of the buttons on the interior mirror.
3. Press the interior mirror button to be programmed. The LED on the interior mirror will slowly begin flashing orange.
4. Hold the hand-held transmitter for the system to be used approx. 1 to 12 in/2.5 to 30 cm away from the buttons on the interior mirror. The required distance depends on the hand-held transmitter.
5. Press and hold the button of the desired function on the hand-held transmitter.

Canada: if programming with the hand-held transmitter was interrupted, hold

down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.

6.
 - The LED lights up green: programming completed. Release the button.
 - The LED flashes fast: programming is not complete. Press the button on the interior mirror for 2 seconds and release. Perform this procedure three times to complete the programming procedure.

If the integrated universal remote control remains nonoperational, continue with the special features for change code wireless systems.

 - LED does not flash green after 60 seconds: programming not completed. Repeat steps 3 to 6.

To program other functions on other buttons, repeat steps 3 to 5.

Special feature of the rolling code wireless system

If you are unable to operate the system after repeated programming, please check if the system to be controlled features a rolling code radio system.

Refer to the owner's manual for the system. For systems with a rolling code radio system, the integrated Universal Remote Control and the system also have to be synchronized.

Please read the owner's manual to find out how to synchronize the system.

Synchronizing is easier with the aid of a second person.



Synchronizing the universal remote control with the system:

1. Park the vehicle within range of the remote-controlled system.
2. Program the relevant button on the interior mirror as described.
3. Locate and press the synchronizing button on the system being programmed, e.g. at the garage gate. You have approx. 30 seconds for the next step.
4. Hold down the programmed button on the interior mirror for approximately 3 seconds and then release it. If necessary, repeat this step up to three times in order to finish synchronization. Once synchronization is complete, the programmed function will be carried out.

Reprogramming individual buttons

1. Switch on the ignition.
2. Press and hold the interior mirror button to be programmed.
3. As soon as the LED on the interior mirror flashes orange after approx. 20 seconds, release the button.
4. Hold the hand-held transmitter for the system to be used approx. 1 to 12 in/2.5 to 30 cm away from the buttons on the interior mirror. The required distance depends on the hand-held transmitter.
5. Press and hold the button of the desired function on the hand-held transmitter.
Canada: if programming with the hand-held transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.
6. The LED can light up in different ways.
 - The LED lights up green: the programming procedure is completed. Release the button.

- The LED flashes fast: the hand-held transmitter was detected but programming is not complete. Press the button on the interior mirror for 2 seconds and release. Perform this procedure three times to complete the programming procedure.
If the integrated universal remote control remains nonoperational, continue with the special features for change code wireless systems.
- LED does not flash green after 60 seconds: programming not completed.
Repeat steps 3 to 6.

If the programming procedure is not completed, the previous programming will remain unchanged.

Operation

Warning

The operation of remote-controlled systems with the integrated universal remote control, such as the garage door, may result in injury, for example, body parts becoming jammed in a garage door. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety information of the hand-held transmitter.

The system, such as the garage door, can be operated using the button on the interior mirror while the engine is running or when the ignition is started. To do this, hold down the button within receiving range of the system until the function is activated. The interior mirror LED stays lit while the wireless signal is being transmitted.

Deleting stored functions

All stored functions will be deleted. The functions cannot be deleted individually.

Press and hold the two outer buttons on the interior mirror simultaneously for approximately 10 seconds until the LED on the interior mirror flashes green rapidly.

Digital compass

Overview



- 1 Control button
- 2 Mirror display

Mirror display

The point of the compass is displayed in the mirror when driving straight.

Operating concept

Various functions can be called up by pressing the control button with a pointed object, such as the tip of a ballpoint pen or similar object. The following setting options are displayed in succession, depending on how long the control button is pressed:


- Pressed briefly: turns display on/off.
- 3 to 6 seconds: compass zone setting.
- 6 to 9 seconds: compass calibration.
- 9 to 12 seconds: left/right-hand steering setting.
- 12 to 15 seconds: language setting.

Setting the compass zones

Sets the particular compass zones on the vehicle so that the compass operates correctly; refer to World map with compass zones.



World map with magnetic zones

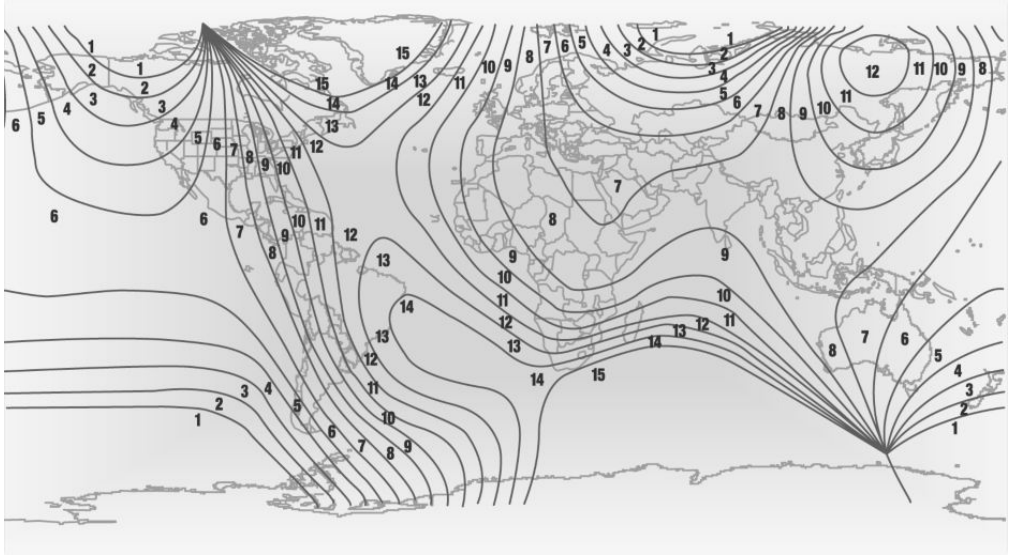

Procedure

1. Press and hold the control button for approx. 3 to 4 seconds. The number of the set compass zone appears in the mirror.
2. To change the zone setting, press the control button quickly and repeatedly until the number of the compass zone that corresponds with your location appears in the mirror.

The set zone is stored automatically. The compass is ready for use again after approximately 10 seconds.

Calibrating the digital compass

The digital compass must be calibrated in the event of the following:

- The wrong compass point is displayed.
- The point of the compass displayed does not change despite changing the direction of travel.
- Not all points of the compass are displayed.

Procedure

1. Make sure that there are no large metallic objects or overhead power lines near the vehicle and that there is sufficient room to drive around in a circle.
2. Set the currently applicable compass zone.
3. Press and hold the control button for approx. 6 to 7 seconds so that "C" appears on the display. Next, drive in a complete circle at least once at a speed of no more than 4 mph/7 km/h. If calibration is successful, the "C" is replaced by the points of the compass.

Left/right-hand steering

The digital compass is already set for right or left-hand steering at the factory.

Setting the language

Press and hold the control button for approx. 12 to 13 seconds. Briefly press the

control button again to switch between English "E" and German "O".

Settings are stored automatically after approximately 10 seconds.

Sun visor

Glare shield

To provide protection against glare, fold the sun visor down or pivot it to the side.

Vanity mirror

A vanity mirror is located in the sun visor behind a cover.

When the cover is opened, the mirror lighting switches on.

Ashtray/cigarette lighter

Overview



The ashtray is located in one of the frontal cup holders, the cigarette lighter above it in the center console.

Ashtray

In order to empty the ashtray, remove the ashtray from the cup holder.

Cigarette lighter

Safety information

Warning

Contact with the hot heating element or the hot socket of the cigarette lighter can cause burns. Flammable materials can ignite if the cigarette lighter falls down or is held against the objects. There is a risk of fire and injuries. There is a risk of damage to property. Take hold of the cigarette lighter by its handle. Make sure that children do not use the cigarette lighter.

NOTICE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of damage to property. Replace the cigarette lighter or socket cover again after using the socket.

Operation



Push in the cigarette lighter. The cigarette lighter can be removed as soon as it pops back out.

Sockets

Concept

The lighter socket can be used as a socket for electrical equipment when the ignition or drive-ready state is switched on.

General information

The total load of all sockets must not exceed 140 watts at 12 volts.

Do not damage the socket by using non-compatible connectors.

Safety information

Warning

Devices and cables in the unfolding area of the airbags, such as portable navigation devices, can hinder the unfolding of the airbag or be thrown around in the car's interior during unfolding. There is a risk of injury. Make sure that devices and cables are not in the airbag's area of unfolding.

NOTICE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of damage to property. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.

NOTICE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of damage to property. Replace the cigarette lighter or socket cover again after using the socket.

In the center console



Remove the cover or cigarette lighter.

In the cargo area



The socket is located on the right side in the cargo area.

USB interface


Concept

Mobile devices with a USB port can be connected to the USB interface.

General information

Follow the information regarding the connection of mobile devices to the USB interface in the section on USB connections, refer to page 62.

In the front center console

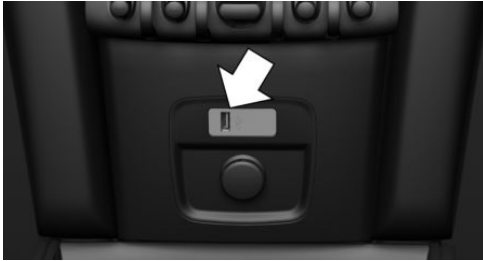

The USB interface is located in the front of the center console.

Properties:

- USB port Type A.
- For charging mobile devices and for data transfer.
- Charge current: max. 1.5 A.

Under the center armrest



The USB interface is located under the center armrest.

Properties:

- USB port Type C.
- For charging mobile devices and for data transfer.
- Charge current: max. 3 A.

In the rear center console



One USB dual charge socket is located in the rear center console.

Properties:

- USB port Type C.
- For charging of mobile devices.
- Charge current: max. 3 A.

Storage compartments

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

- Glove compartment on the front passenger side.
- Compartments in the doors.
- Storage compartment in the center armrest.
- Storage compartment in front of the cup holders.
- Clothes hooks
- Storage compartments in the cargo area.
- Storage tray in the center console.
- Pockets on the backrests of the front seats.

Safety information

Warning

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.

NOTICE

Anti-slip pads such as anti-slip mats can damage the dashboard. There is a risk of damage to property. Do not use anti-slip pads.

Glove compartment

Safety information

Warning

Folded open, the glove compartment protrudes in the car's interior. Objects in the glove compartment can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

Overview

The following storage compartments are available in the car's interior:

Opening



Pull the handle.

The light in the glove compartment switches on.

Closing

Fold up the cover.

Compartments in the doors

General information

There are storage compartments in the doors.

Safety information

Warning

Breakable objects, such as glass bottles or glasses, can break in the event of an accident or a braking or evasive maneuver. Broken glass can be scattered in the car's interior. There is a risk of injury or risk of damage to property. Do not use any breakable objects while driving. Only stow breakable objects in closed storage compartments.

Center armrest

General information

The center armrest contains a storage compartment.

Opening



Press button, arrow 1, and open center armrest upward, arrow 2.

Set the incline

The center armrest can be adjusted in several tilt settings.

Cup holders

Safety information

Warning

Unsuitable containers in the cup holders may damage the cup holders or be thrown about the car's interior in the event of an accident, an evasive maneuver, or forceful braking. Spilled liquids can distract from the traffic conditions and lead to an accident. Hot drinks can damage the cup holder or lead to scalding. There is a risk of injury or risk of damage to property. Do not force objects into the cup holder. Use lightweight, shatterproof, and sealable

containers. Do not transport hot beverages.

Front



In the center console.

Rear

General information

The cup holder is located in the center armrest.



Pull the center armrest forward at the strap.
To open: press the button.
To close: push both covers back in, one after the other.

Safety information

NOTICE

With an open cup holder, the center armrest cannot be folded back up. There is a risk of damage to property. Press back the covers before the center armrest is folded up.

Clothes hooks

General information

The clothes hooks are located above the rear doors.

Safety information

Warning

Clothing articles on the clothes hooks can obstruct the view while driving. There is a risk of accident. When suspending clothing articles from the clothes hooks, ensure that they will not obstruct the driver's view.

Warning

Improper use of the clothes hooks can lead to a risk of objects flying about during braking and evasive maneuvers. There is a risk of injury and risk of damage to property. Only hang lightweight objects, for instance clothing articles, from the clothes hooks.

Cargo area

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Loading

Safety information

Warning

High gross weight can overheat the tires, damage them internally and cause a sudden drop in tire inflation pressure. Driving characteristics may be negatively impacted, reducing lane stability, lengthening the braking distances and changing the steering response. There is a risk of accident. Pay attention to the permitted load capacity of the tires and never exceed the permitted gross weight.

Warning

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with

a cable connection to the vehicle in the car's interior.

Warning

Improperly stowed objects can shift and be thrown into the car's interior, for instance in the event of an accident or during braking and evasive maneuvers. Vehicle occupants can be hit and injured. There is a risk of injury. Stow and secure objects and cargo properly.

NOTICE

Fluids in the cargo area can cause damage. There is a risk of damage to property. Make sure that no fluids leak in the cargo area.


Steps for Determining Correct Load Limit

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs" on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs and there will be five 150 lbs passengers in your vehicle, the amount of available cargo and

luggage load capacity is 650 lbs (1,400 - 750 (5 x 150) = 650 lbs)

5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

Load

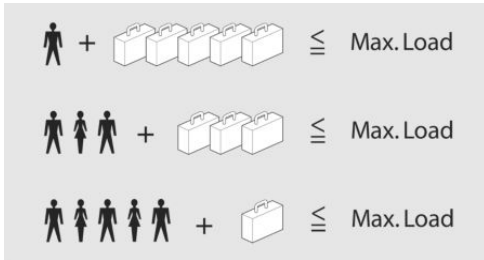

The maximum load is the sum of the weight of the occupants and the cargo.

The greater the weight of the occupants, the less cargo that can be transported.

Stowing and securing cargo

- Cover sharp edges and corners on the cargo.
- Heavy cargo: stow as far forward as possible, directly behind and at the bottom of the rear passenger seat backrests.
- Very heavy cargo: when the rear seat is not occupied, secure each of the outer safety belts in the opposite buckle.
- If necessary, fold down the rear backrests to stow large cargo.

- Do not stack cargo above the top edge of the backrests.

Lashing eyes in the cargo area



With cargo area partition net: to secure the cargo there are six lashing eyes in the cargo area.

Without cargo area partition net: to secure the charging cable there is a lashing eye in the cargo area, refer to page 257.

Attach load securing aids, such as lashing straps, tensioning straps, draw straps or cargo nets, to the lashing eyes in the cargo area.

Cargo cover

General information

When the tailgate is opened, the cargo cover is raised.

Safety information

Warning


Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of in-

jury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.

Removing

For storing bulky objects the cargo cover can be removed.

1. Detach the left and right retaining straps at the tailgate.
2. Pull the cargo cover out of the brackets on the left and right.

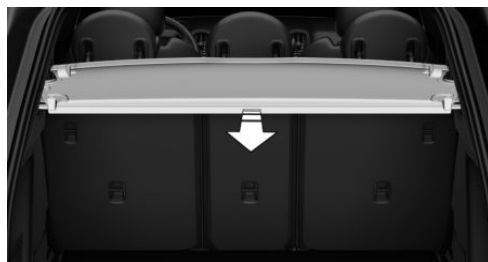

Installing

1. Slide the cargo cover forward horizontally into the two side brackets until it audibly engages.
2. Attach the left and right retaining straps at the tailgate.

Storage compartments in the cargo area

Storage compartment on the side

A storage compartment is located on the left side.

Multi-function hook

Warning

Improper use of the multi-function hooks can lead to a risk of objects flying about during braking and evasive maneuvers, for example. There is a risk of injury and risk of damage to property. Only hang lightweight objects, such as shopping bags, from the multi-function hooks. Only transport heavy luggage in the cargo area if it has been appropriately secured.



The cargo area contains two multi-function hooks.

Storage space under cargo floor panel

NOTICE

The storage space under the cargo floor panel is only suitable for soft objects. Hard objects may result in damage to the vehicle electrical system in the event of an accident. There is a risk of damage to property. Only stow soft objects under the cargo floor panel.

Enlarging the cargo area

Concept

The cargo area can be enlarged by folding down the rear seat backrests or by moving the rear seat backrest into the cargo position.

General information

The rear seat backrest is divided at a ratio of 40–20–40. The side rear seat backrests and the center section can be folded down separately.

The rear seat backrests can be folded down from the rear.

Safety information

⚠ Warning

Danger of jamming with folding down the backrests. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the rear backrest and the of the head restraint is clear prior to folding down.

⚠ Warning

If a rear seat backrest is not locked, unsecured cargo can be thrown about the car's interior; for instance, in the event of an accident, braking or an evasive maneuver. There is a risk of injury. Make sure that the rear seat backrest is locked after folding it back.

⚠ Warning

Unexpected movements of the rear seat backrest while driving may occur due to unintentional unlocking of the rear seat backrests by the straps. There is a risk of

injury. Do not fasten any objects to the straps for unlocking the rear backrests.


⚠ Warning

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

⚠ Warning

Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.

Folding down the rear seat backrest from the rear

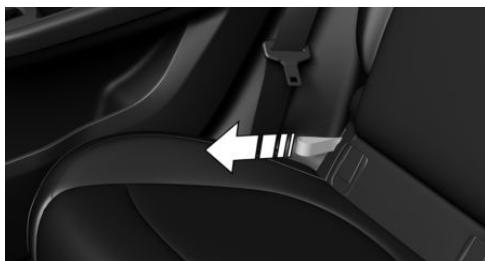

Pull the strap. The rear seat backrest folds forward.


Cargo position

Concept

The rear seat backrests can be moved into an upright loading position individually. An adjustment in several tilt stages is possible as needed.

Adjusting


1. Pull the strap.

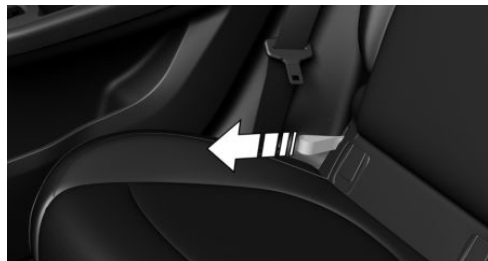

2. Set the loading position of the rear seat backrest as required.
3. Engage the rear seat backrest.

Folding back the backrest

1. Pull the strap.

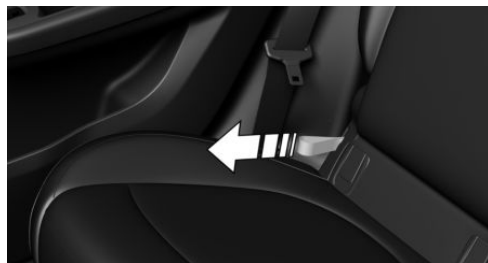

2. Return the rear seat backrest to the upright seating position and engage it.

Variable cargo area floor

Concept


With the variable cargo area floor, the cargo area can be configured corresponding to transport requirements.

General information

Follow instructions on securing cargo, refer to page 233.

Removing the cargo floor panel


1. Fold the rear part of the cargo floor panel upward.

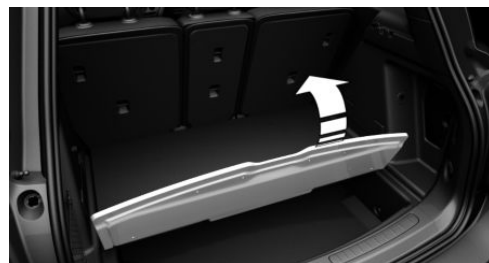

2. Grasp the cargo floor panel at the rear and fold it upward.
3. Pull the cargo floor panel backward from the brackets.

Inserting the cargo floor panel

1. Push the cargo floor into the supports at a shallow angle. The cargo area floor must engage noticeably.

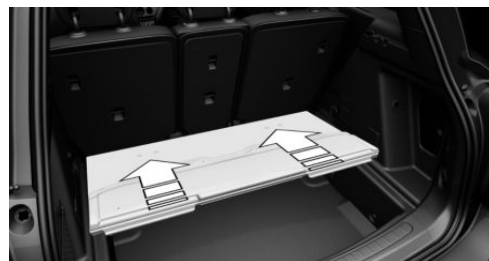

2. Fold the cargo area floor over downward.

MINI Picnic Bench

Concept

The MINI Picnic Bench provides a comfortable seating surface on the loading lip of the vehicle.

General information

Only use the MINI Picnic Bench while the vehicle is parked and with the tailgate open. When the MINI Picnic Bench is not in use, fold it together to prevent soiling and damage.

In vehicles with a no-touch opening and closing tailgate:

If the vehicle key is in the sensor area, the tailgate can be opened or closed inadvertently by an unconscious or alleged recognized foot movement.

The sensor has an approximate range of 5 ft/1.50 m extending from the rear of the vehicle.

Safety information

Warning


Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

Overview


The MINI Picnic Bench is located on the underside of the cargo area floor.

Mounting


1. Fold the rear part of the cargo floor panel upward.

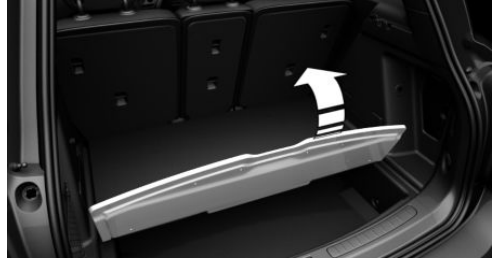

2. Place the MINI Picnic Bench on the front part of the cargo floor panel and attach it to the rear part of the cargo floor panel using the four snaps.

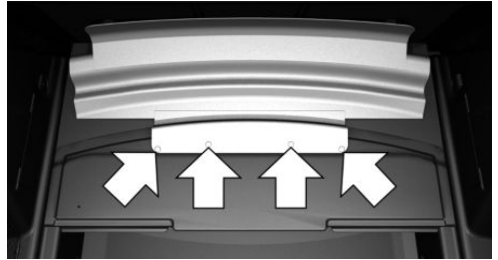

3. Fold down the MINI Picnic Bench toward the rear. The MINI Picnic Bench is fastened with magnets.

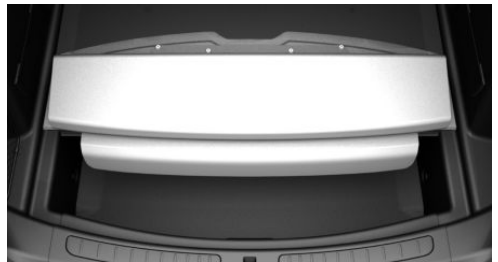


4. Fold the rear part of the cargo area floor downward.


To disassemble the MINI Picnic Bench, proceed in reverse order.

Folding down

1. Lift the rear part of the cargo area floor.

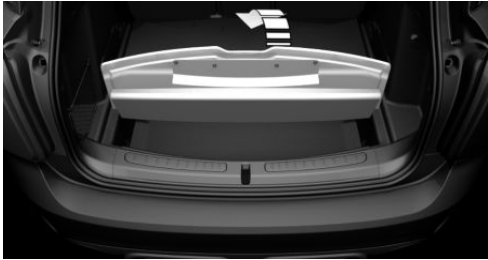

2. Grasp the MINI Picnic Bench in the middle and pull it back and up against the force of the magnets.

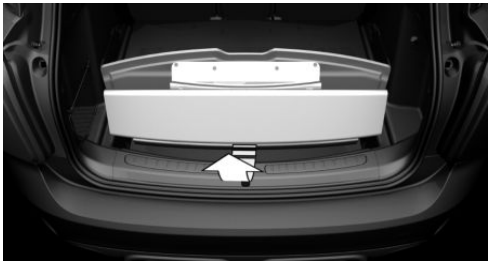

3. Fold the rear part of the cargo area floor downward and place the MINI Picnic Bench over the loading lip of the cargo area. Place a protective cloth over the bumper.



Folding up

Fold rear part of the cargo floor panel upward.

The MINI Picnic Bench swings against the underside of the cargo area floor and is fastened there with magnets.



① DRIVING TIPS

Things to remember when driving	242
Saving fuel	247

Things to remember when driving

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Breaking-in period

General information

Moving parts need to begin working together smoothly.

The following instructions will help you to achieve a long vehicle life and good efficiency.

Safety information

 **Warning**

Due to new parts and components, safety and driver assistance systems can react with a delay. There is a risk of accident. After installing new parts or with a new vehicle, drive conservatively and intervene early if necessary. Observe the break-in procedures of the respective parts and components.

Engine, transmission, and axle drive

Up to 1,200 miles/2,000 km

Do not exceed the maximum engine and road speed:

- For gasoline engine 4,500 rpm and 100 mph/160 km/h.

Avoid full load or kickdown under all circumstances.

From 1,200 miles/2,000 km

The engine and vehicle speed can gradually be increased.

Tires

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

Brake system

Brake discs and brake pads only reach their full effectiveness after approx. 300 miles/500 km. Drive moderately during this break-in period.

Following part replacement

The same break-in procedures should be observed if any of the components mentioned above have to be renewed in the course of the vehicle's operating life.

General driving notes

Closing the tailgate

Safety information

Warning

An open tailgate protrudes from the vehicle and can endanger occupants and other traffic participants or damage the vehicle in the event of an accident, braking or evasive maneuvers. In addition, exhaust fumes may enter the car's interior. There is a risk of injury or risk of damage to property. Do not drive with the tailgate open.

Driving with the tailgate open

If driving with the tailgate open cannot be avoided:

- Close all windows and the glass sunroof.
- Greatly increase the air flow from the vents.
- Drive moderately.

Hot exhaust gas system

Warning

During driving operation, high temperatures can occur underneath the vehicle body, for instance caused by the exhaust gas system. If combustible materials, such as leaves or grass, come in contact with hot parts of the exhaust gas system, these materials can ignite. There is a risk of injury or risk of damage to property. Do not remove the heat shields installed and never apply undercoating to them. Make sure that no combustible materials can come in contact with hot vehicle parts in

driving operation, idle or during parking. Do not touch the hot exhaust gas system.

Mobile communication devices in the vehicle

Warning

Vehicle electronics and mobile phones can influence one another. There is radiation due to the transmission operations of mobile phones. There is a risk of injury or risk of damage to property. If possible, in the car's interior use only mobile phones with direct connections to an exterior antenna in order to exclude mutual interference and deflect the radiation from the car's interior.

Hydroplaning

On wet or slushy roads, a wedge of water can form between the tires and road surface.

This phenomenon is referred to as hydroplaning. It is characterized by a partial or complete loss of contact between the tires and the road surface, ultimately undermining your ability to steer and brake the vehicle.

Driving through water

General information

When driving through water, follow the following:

- Drive through calm water only.
- Drive through water only if it is not deeper than maximum 9.8 inches/25 cm.
- Drive through water no faster than walking speed, up to 3 mph/5 km/h.

Safety information

NOTICE

When driving too quickly through too deep water, water can enter into the engine compartment, the electrical system or the transmission. There is a risk of damage to property. When driving through water, do not exceed the maximum indicated water level and the maximum speed for driving through water.

Braking safely

General information

The vehicle is equipped with ABS as a standard feature.

Perform an emergency stop in situations that require such.

Steering is still responsive. You can still avoid any obstacles with a minimum of steering effort.

Pulsation of the brake pedal and sounds from the hydraulic circuits indicate that ABS is in its active mode.

Objects in the area around the pedals

Warning

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are

securely fastened again after they were removed, for instance for cleaning.

Driving in wet conditions

When roads are wet, salted, or in heavy rain, gently press the brake pedal every few miles.

Ensure that this action does not endanger other traffic.

The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

In this way braking efficiency will be available when you need it.

Hills

General information

Drive long or steep downhill gradients in the gear that requires least braking effort. Otherwise, the brakes may overheat and reduce brake efficiency.

You can increase the engine's braking effect by shifting down, going all the way to first gear, if needed.

Safety information

Warning

Light but consistent brake pressure can lead to high temperatures, brakes wearing out and possibly even brake failure. There is a risk of accident. Avoid placing excessive stress on the brake system.

Warning

In idle state, in GREEN Mode or with drive-ready state switched off, safety-relevant functions, for instance engine braking effect, braking force boost, and steering assistance, are restricted or not

available at all. There is a risk of accident. Do not drive in idle state, in GREEN Mode or with drive-ready state switched off.

Brake disc corrosion

Corrosion on the brake discs and contamination on the brake pads are increased by the following circumstances:

- Low mileage.
- Extended periods when the vehicle is not used at all.
- Infrequent use of the brakes.
- Aggressive, acidic, or alkaline cleaning agents.

Corrosion buildup on the brake discs will cause a pulsating effect on the brakes in their response - generally this cannot be corrected.

Condensation water under the parked vehicle

When using the automatic climate control, condensation water develops and collects underneath the vehicle.

Ground clearance

NOTICE

If the ground clearance is insufficient, e.g., curbs or underground garage entrances, contact with vehicle parts, e.g., spoiler, and the underbody may occur. There is a risk of damage to property. Ensure that there is sufficient ground clearance available.

Roof-mounted luggage rack

General information

Installation only possible with roof rack.

Roof racks are available as special accessories.

Securing

Follow the installation instructions of the roof rack.

Loading

Because roof-mounted luggage racks raise the vehicle's center of gravity when loaded, they have a major effect on vehicle handling and steering response.

Therefore, note the following when loading and driving:

- Do not exceed the approved roof/axle loads and the approved gross vehicle weight.
- Be sure that adequate clearance is maintained for tilting and opening the glass sunroof.
- Distribute the roof load uniformly.
- The roof load should not extend past the loading area.
- Always place the heaviest pieces on the bottom.
- Secure the roof luggage firmly, for instance using ratchet straps.
- Do not let objects project into the opening path of the tailgate.
- Drive cautiously and avoid sudden acceleration and braking maneuvers. Take corners gently.

Driving on poor roads

Concept

Because of its greater ground clearance, the vehicle can be driven on a variety of road types and qualities.

Safety information

NOTICE

Objects in unpaved areas, for instance stones or branches, can damage the vehicle. There is a risk of damage to property. Do not drive on unpaved terrain.

When driving on poor roads

For your own safety, for the safety of passengers and of the vehicle, heed the following points:

- Familiarize yourself with the vehicle before driving.
- Do not take risks when driving.
- Adjust the speed to the road surface conditions. The steeper and more uneven the road surface, the slower the speed.
- When driving on steep uphill or downhill grades: add engine oil and coolant up to near the MAX mark.
- Avoid that the chassis bottom coming in contact with the ground. The ground clearance may vary depending on the vehicle load.
- When wheels continue to spin, depress the accelerator so that driving stability control systems can distribute the driving force to the wheels. Activate DTC Dynamic Traction Control if available.

After a trip on poor roads

Note the following to maintain driving safety:

- Clear heavy soiling from the body.
- Keep the wheels and tires free of mud, snow, ice, etc., and check them for damage.

Driving on racetracks

Higher mechanical and thermal loads during racetrack operation lead to increased wear. This wear is not covered by the warranty. The vehicle is not designed for use in motor sports competition.

Saving fuel

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

The vehicle contains advanced technologies for the reduction of consumption and emission values.

Fuel consumption depends on a number of different factors.

The implementation of certain measures, driving style and regular maintenance can influence fuel consumption and environmental impact.

Remove unnecessary cargo

Additional weight increases fuel consumption.

Remove attached parts following use

Remove auxiliary mirrors, roof-mounted or rear luggage racks which are no longer required following use.

Attached parts on the vehicle impair the aerodynamics and increase the fuel consumption.

Close the windows and glass sunroof

Driving with the glass sunroof and windows open results in increased air resistance and raises fuel consumption.

Tires

General information

Tires can affect consumption in various ways, for instance tire size may influence consumption.

Check the tire inflation pressure regularly

Check and, if needed, correct the tire inflation pressure at least twice a month and before starting on a long trip.

Low tire inflation pressure increases rolling resistance and thus raises fuel consumption and tire wear.

Drive away without delay

Do not wait for the engine to warm-up while the vehicle remains stationary. Start driving right away, but at moderate engine speeds.

This is the fastest way for the cold engine to reach its operating temperature.

Look well ahead when driving

Driving smoothly and proactively reduces fuel consumption.

Avoid unnecessary acceleration and braking.

By maintaining a suitable distance to the vehicle driving ahead of you.

Avoid high engine speeds

Driving at low engine speeds lowers fuel consumption and reduces wear.

Switch off the engine during longer stops

Switch off the engine during longer stops, for instance at traffic lights, railroad crossings or in traffic congestion.

Switch off any functions that are not currently needed

Functions such as seat heating and the rear window defroster require a lot of energy and consume additional fuel, especially in city and stop-and-go traffic.

Switch off these functions if they are not needed.

Have maintenance carried out

Have the vehicle maintained regularly to achieve optimal vehicle efficiency and service life. MINI recommends that maintenance work be performed by a MINI service center.

Also note the MINI maintenance systems, refer to page 294.

Using the hybrid system efficiently

Concept

The vehicle's hybrid system runs automatically. Through foresighted driving, the hybrid properties are efficiently used, i.e., fuel consumption and energy recovery are optimized.

Optimizing energy recovery

Types of energy recovery

Energy recovery is used to charge the high-voltage battery. Energy recovery is important for the supply of electrical components and thus a prerequisite for fuel efficiency. Energy recovery appears in three stages during coasting and braking:

- Low energy recovery: while coasting to a halt without stepping on the brake.
- Average energy recovery: while decelerating slightly by gently pressing the brake pedal.
- Maximum energy recovery: when pressing the brake pedal somewhat more firmly provided that the pointer remains in the middle area of the CHARGE indicator in the instrument cluster, refer to page 142.

Optimum energy recovery

Foresighted driving and decelerating helps with optimizing energy recovery.

As soon as the display shows the maximum energy recovery, only press the brake pedal harder if required by the situation.

Exemplary traffic situations for fuel efficiency

In many driving situations, the hybrid system allows for a particularly efficient energy management.

- Stop-and-go traffic:
The combustion engine is switched on or over automatically by the hybrid system.
- Driving with constant speed:
The electric motor relieves the combustion engine periodically by also being switched on.

Optimizing fuel consumption

Charging the vehicle regularly

Charge the vehicle regularly and completely using a suitable charging device. This will reduce fuel consumption due to the use of electrical energy.

Longer idle periods, refer to page 317, can reduce the charge state of the high-voltage battery.

Avoiding the use of the combustion engine

Follow the following information to avoid using the combustion engine:

- Set the characteristics of the hybrid system to MAX eDRIVE, refer to page 123.
- Follow the indicators in the instrument cluster regarding electric driving, refer to page 142.

Using the navigation system regularly

Use the navigation system also for familiar and regularly traveled routes. When the navigation system destination guidance is active, the hybrid system uses the existing navigation data. The upcoming course of

the road is analyzed. Hybrid operation adapts to the specific route sections.

The function may be restricted if the navigation data is invalid, outdated or not available, for example.

GREEN Mode

Concept

GREEN Mode supports a driving style that saves on consumption. For this purpose, the engine control and comfort features, for instance the climate control output, are adjusted.

Under certain conditions the engine is automatically decoupled from the transmission in the D selector lever position and the engine is switched off. The D selector lever position remains engaged.

In addition, context-sensitive instructions are displayed to assist with an efficient driving style.

Activating GREEN Mode




Press the MINI Driving Modes switch downward until GREEN is displayed in the instrument cluster.

Configuring GREEN

Via MINI Driving Modes switch

1. Activating GREEN Mode.
2. "Configure GREEN"
3. Select the desired setting.

Via the Central Information Display (CID)

1.  "My MINI"
2. "Vehicle settings"
3. "Configure GREEN"
4. Select the desired setting.

Activating/deactivating the functions

The following functions can be activated/deactivated:

- "GREEN speed warning"
- "GREEN climate control"

Settings are stored for the driver profile currently used.

GREEN Limit

- Activate the GREEN Limit:
"GREEN speed warning":
A GREEN tip is displayed if the speed of the set GREEN Limit is exceeded.
- Setting the speed for the GREEN Limit:
"Tip at:"
Select the desired speed.

GREEN climate control

Climate control is set to be efficient. By making a slight change to the set temperature, or adjusting the rate of heating or cooling of the car's interior consumption can be economized.

The power output to the seat heater and exterior mirror is reduced.

GREEN potential savings

Shows potential savings with the current settings in percentages.

Indications on the Control Display

GREEN tip, driving instruction

The GREEN tip indicates that your driving style can be modified to be more efficient, for example by backing off the accelerator.




Open GREEN Tip display

Via the Central Information Display (CID):

1.  "My MINI"
2. "Technology in action"
3. "GREEN tips"

GREEN tip, symbols

An additional symbol and text instructions are displayed.

Symbol	Measure
	For an efficient driving style, look well ahead when driving, accelerate conservatively, and delay accelerating.
	Reduce speed to the selected GREEN speed.
	Steptronic transmission: Switch from M/S to D and avoid manual shift interventions.



MOBILITY

Charging the vehicle	254
Refueling	263
Fuel	266
Wheels and tires	268
Engine compartment	285
Engine oil	288
Coolant	292
Maintenance	294
Replacing components	296
Breakdown assistance	306
Care	313

Charging the vehicle

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Concept

The vehicle can be charged using various charging cables at charging stations or household sockets. Control and monitoring of the charging process are handled completely automatically. The charge current strength can be set via the Central Information Display (CID).

General information

High-voltage battery

The high-voltage battery is used as an energy accumulator. The high-voltage battery can be charged by energy recovery during the trip or via the power grid.

In order to operate the high-voltage battery optimally, charge the vehicle regularly and fully using a compatible charger.

When charging via the power grid, you can choose between the following variants.

- Level 1 charging via a household socket.
- Level 2 charging via a Level 2 charging station.

Level 1 charging is possible via a household socket with a voltage of 120 volts.

For optimal use of the energy from the power mains, charging at a charging station, for instance BMW Wallbox, is recommended.

Charge current

General information

The charge current strength is indicated in amperes.

The vehicle cannot automatically detect the maximum permissible charge current strength of the power grid during charging via a household socket or charging station.

Level 1 charging

Prior to the first Level 1 charging at your own household socket, as well as when charging at external electrical power sockets in Level 1, the allowed charge current strength must be determined, for instance by a qualified electrician.

The charge current strength for Level 1 charging, refer to page 260, can be adjusted in the vehicle in three levels.

At delivery, the charge current for Level 1 charging is set to the lowest level.

Depending on the country-specific version, one of several ampere ratings is printed on the Level 1 charging cable. This ampere rating is the limit which must be adhered to for the vehicle if the charge current is set to the highest level. Depending on the charging cable, the charge current strength may vary when lower levels are set.

Overview

Imprint on the charging cable	Charge current setting		
	"Max."	"Reduced"	"Low"
6 A	6 A	6 A	6 A
8 A	8 A	6 A	6 A
10 A	10 A	7.5 A	6 A
12 A	12 A	9 A	6 A
15 A	15 A	11.25 A	7.5 A

Depending on the charge current setting, the charging duration changes.

Maintaining the charge state

To conserve the electrical range for a later time during the trip, SAVE BATTERY, refer to page 123, can be used to maintain or increase the current state of charge of the high-voltage battery.

The manufacturer of your vehicle recommends that, prior to your first use of a charging location, you have the compatibility of the following components confirmed:

- Charging cable.
- Charging station.
- Household socket and connected circuits.

Safety information

Warning

Improper working with electrical current can lead to an electric shock due to high voltages or high currents. There is a risk of fire or danger to life. Observe the general safety regulations when working with electrical current.

Warning

A faulty and incorrectly designed charging device at the charging location can cause damage to the vehicle and overload the power mains at the charging location. There is a risk of fire and a risk of injury.

Warning

Damaged or worn charging devices, for instance worn contacts, can heat up. There is a risk of fire. Only use charging devices that are in good condition.

Warning

Simultaneous charging and refueling poses a risk of fire if a sufficient safety distance from easily flammable materials is not maintained. There is a risk of injury or risk of damage to property. Do not fill the vehicle with fuel and charge it simultaneously.

⚠ Warning

Contact with live components can lead to an electric shock. High voltage is present at the charging connection. There is a risk of injury or danger to life.

The manufacturer of your vehicle recommends that work on the charging connection, for instance cleaning, be performed by a dealer's service center or another qualified service center or repair shop.

Charging cable

General information

Use a Level 1 charging cable, Level 2 charging cable or the permanently installed charging cable of a charging station to charge the vehicle.

Different charging cables can be required depending on the country.

Safety information

⚠ Warning

Non-compatible charging cables or unsuitable charging stations can heat up and cause damage to the vehicle. There is a risk of fire. Use charging cables or charging stations for charging that are suitable for the respective vehicle type.

A dealer's service center will be glad to provide information about suitable charging cables.

⚠ Warning

Improper use of the charging cable can prevent charging and lead to damage, for instance cable fire. There is a risk of fire. Use the charging cable only for charging

the vehicle, and do not extend it using cables or adapters.

⚠ Warning

Damaged charging cables can heat up or lead to an electric shock. There is a risk of fire or a risk of injury. Use undamaged charging cables only.

Level 1 charging cable

The vehicle is supplied with a Level 1 charging cable.

Level 1 charging cables can be used to charge the vehicle from grounded household sockets. Charging at household socket connections is performed with alternating current.

When a Level 1 charging cable is used, the efficiency values may differ from those stated on the energy label.

Level 2 charging cable

The Level 2 charging cable makes it possible to quickly recharge at sockets of designated Level 2 charging stations using a special plug. Charging is performed with alternating current at designated Level 2 charging stations. The charging process can be completed faster than at household sockets.

A charge current strength of up to maximum 16 A is possible.

The charging cable may be permanently installed at the charging station.

Storage



The Level 1 charging cable is located in a bag in the cargo area.

Store charging cable again in the bag after use. Attach the bag to the designated eyelet. If required, store the charging cable with the installed plug cover to prevent moisture in the charging cable plug.

Connecting

Charging socket flap



The charging socket flap is located on the left side of the vehicle.

Always keep charging socket clean and unobstructed.

Keep the charging socket flap closed when the charging socket is not used.

Connecting the charging cable

To connect, engage selector lever position P, deactivate drive-ready state, and un-

lock the vehicle. Set the parking brake, if needed.

1. To open the charging socket flap, press on the rear edge, arrow. The charging socket flap opens.



2. Remove the cover of the charging cable plug, if needed.
3. Connect Level 1 charging cable to the household socket or Level 2 charging cable to the port on the charging station.
4. Insert the appropriate charging cable plug, and push it in until it engages.

Removing

When the vehicle is locked, the charging cable is locked. Unlock the vehicle before removing the cable.

If necessary, clean the area between the charging socket flap and charging socket, for instance from snow, before removing it.

1. Unlock the vehicle with the vehicle key if it is locked.
Charging cable is unlocked.
2. Press the release button on the handle, arrow 1, and grasp the charging cable at the gripping areas.

Charging process is interrupted.




3. Remove the charging cable from the charging socket, arrow 2.
4. Put the charging socket lid back on.
5. Press on the charging socket flap until it engages.
6. Attach cover of the charging cable plug, if needed.
7. Disconnect Level 1 charging cable from the household socket or Level 2 charging cable from the port on the charging station as applicable.
8. Stow the charging cable.

At a charging station, insert the permanently installed charging cable in the place provided for it.


Emergency unlocking

The charging cable is locked when the vehicle is locked and during the charging process.

In case of an electrical malfunction, the charging cable can be manually unlocked.

1. Open the hood.
2.  Pull the knob.

The charging cable is manually unlocked.

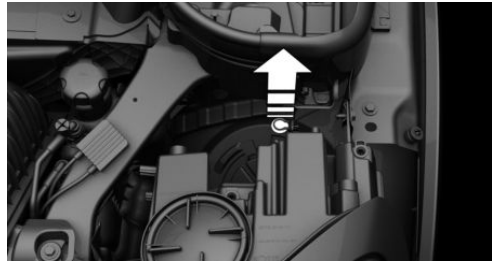

3. For removing the charging cable, refer to page 257.

Have the locking system of the charging socket checked at the dealer's service center or another qualified service center or repair shop after emergency unlocking of the charging cable.

Charging process

General information

At high temperatures, the high-voltage battery is initially cooled. There may be a delay before charging starts. If the high-voltage battery is discharged, cooling of the high-voltage battery may not be possible. The charging process cannot be started.

If the Level 1 charging cable is exposed to high temperatures and direct sunlight, this may interrupt the charging process. Charging will resume automatically.

The charging process may take longer under extremely low or high temperatures.

Safety information

Warning

Improper use of the power mains connection can lead to damage, for instance cable fire. There is a risk of injury or risk of damage to property. Use the charging cable only for charging the vehicle, and do not extend it using cables or adapters.

Warning

If the charge current strength is adjusted incorrectly, the power mains of the household socket can be overloaded and overheat. There is a risk of fire. Adjust the charge current strength to the power mains prior to charging on household sockets. With unknown power networks, set on the lowest level.

Starting the charging process

1. Engage selector lever position P. Set the parking brake, if needed.
2. For planning the charging process, refer to page 260.
3. Switch off drive-ready state.
4. Connect Level 1 charging cable to the household socket or Level 2 charging cable to the port on the charging station.
5. Open the charging socket flap.
6. Connect the charging cable to the vehicle, refer to page 257.
7. Lock vehicle if it is unlocked.

Charging status display

Indicator light at the charging socket




An indicator light is located on the charging socket.

Charging status

Light	Charging status
White	Charging cable can be connected or removed.
Flashes orange	Charging process is being prepared.
Yellow	Charging process paused.
Flashes yellow	Charging process is active.
Flashes red rapidly	Fault in the charging process.
Green	Charging process is completed.

When the vehicle is locked, the indicator light goes out after some time.

When the vehicle is unlocked, the yellow indicator light flashes continuously. The other indicator lights go out after some time.

 Press the button on the vehicle key to check the charging state. The charging status is indicated on the indicator light. In some cases the vehicle is locked.

Additional messages about the charging status, for instance the probable end of charging or the planned departure time, can be shown in the instrument cluster or on the Control Display.

Planning the charging process

General information

The charging process can be adapted to constraints, for instance the cost of electricity. The vehicle controls the charging process in such a way that the charging process is completed if possible at the departure time. A departure time must be set for this purpose, refer to page 261.

The following settings are available:


- Immediate charging.
- Set time window for favorable charging.
- Set the charge current for charging via a Level 1 charging cable.

If drive-ready state is switched off, changes can be made via the Central Information Display (CID). Settings for the stationary climate control and charging process are also accepted for planned departure times.

Immediate charging

The charging process starts as soon as the charging cable is connected.


Via the Central Information Display (CID):

1.  "My MINI"
2. "Plan charging/climate control"
3. "Charge immediately"

Setting the time window for favorable rate

When a departure time is set, a time window for charging with a favorable electricity rate can be set via the Central Information Display (CID).

Via the Central Information Display (CID):


1.  "My MINI"
2. "Plan charging/climate control"
3. "Low-cost charging for departure"
4. "Set low cost time slot"
5. Set rate begin.
6. Set rate end.

The vehicle can also start the charging process before the selected time window begins or end it after the selected time window finishes. The starting point of the charging process is adjusted so the vehicle can be fully charged and, if applicable, its climate adjusted by the departure time.

Setting the charge current for charging via a Level 1 charging cable

Depending on the electrical mains, the vehicle must be charged with a different charge current strength, refer to page 254.

Via the Central Information Display (CID):

1.  "My MINI"
2. "Plan charging/climate control"
3. "Settings charging current"

Settings are stored. When you change charging locations you also might need to change the setting for charging.

Set the charge current strength at other household sockets to the lowest level.

Stopping the charging process

The charging process can be stopped at any time by removing the charging cable and continued at a later time by connecting the charging cable. This enables, for instance the use of other loads on the power connection or prevents simultaneous high power from multiple loads.

For removing the charging cable, refer to page 257.

Continuing the charging process

If the charging process is interrupted, for instance through a temporary power failure, the charging process is automatically continued after the interruption.

Terminating the charging process








1. Remove the charging cable from the vehicle, refer to page 257.
2. Stow the charging cable as required.
3. Close the charging socket flap.
4. Lock vehicle if it is unlocked.

Displays in the instrument cluster

The charge state indicator light, refer to page 154, shows the charge state of the high-voltage battery in the instrument cluster, if the ignition or drive-ready state is switched on. If all bars are filled, the high-voltage battery is fully charged.

Even if no bars are filled, the high-voltage system is still under high voltage.

Information regarding the charging process is shown on the charging screen.

Display	Meaning
	Ring flashes orange: the charging process is being prepared. Ring yellow: the charging process starts at the set time. Ring flashes yellow: the charging process pauses. Ring flashes red rapidly: fault in the charging process. Ring green: the charging process is completed.
	End of charging time or set departure time.
	Departure time set.
	Climate control activated at departure time.
	Flashing: ventilation active.
	Flashing: heating active.
	Flashing: cooling active.

Departure time

Concept

For optimum range and climate control, the departure time can be set before parking the vehicle.

General information

With a set departure time, the vehicle is preheated or precooled during the charging process if climate control is set. Climate

control output is reduced during the trip. This increases the range during electric driving.


The following settings are possible for departure time:

- Climate control for departure time.
- Planning of up to two regular departure times.

If drive-ready state is switched off, changes can be made via the Central Information Display (CID). Settings for climate control and charging process are also applied for scheduled departure times.


Climate control for departure time

Via the Central Information Display (CID):

1.  "My MINI"
2. "Plan charging/climate control"
3. "Precondition for departure"

Setting the departure time


Via the Central Information Display (CID):

1.  "My MINI"
2. "Plan charging/climate control"
3. "Set departure time"
4. Set the desired time.

Up to two departure times can be set.

Activating the departure time

Via the Central Information Display (CID):

1.  "My MINI"
2. "Plan charging/climate control"
3. "Set departure time"
Set departure times are displayed.
4. For example activate "Departure time 1".

Up to two departure times can be activated.

The set departure time will be deactivated, if the departure time was ignored three times in a row.

Climate control

The following settings for vehicle air conditioning are possible:

- Activate stationary climate control immediately, refer to page 220.
The range is reduced if stationary climate control is activated without a charging cable connected.
- Planned climate control at the set departure time, refer to page 221.

If a Mode 2 charging cable is used, the high-voltage battery may not be fully charged at departure time.

Discharged high-voltage and vehicle battery

General information

In addition to the high-voltage battery, the vehicle has a 12 volt vehicle battery, which is required for operation of the onboard electronics.

If the high-voltage battery is discharged and the combustion engine is started, air conditioning may be limited.

With a discharged vehicle battery, no operation of the vehicle is possible.

Starting the vehicle

If the vehicle battery is discharged, the combustion engine can be started using the battery of another vehicle and two jumper cables, see Jump-starting, refer to page 308.

Refueling

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

Follow the fuel recommendation, refer to page 266, prior to refueling.

To also ensure all engine functions under unfavorable conditions, for instance steep vehicle inclinations, at least 3 US gal/10 liters fuel should be refueled.

Safety information

NOTICE

With a driving range of less than 30 miles/50 km the engine may no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of damage to property. Refuel promptly.

Warning

Simultaneous charging and refueling poses a risk of fire if a sufficient safety distance from easily flammable materials is not maintained. There is a risk of injury or risk

of damage to property. Do not fill the vehicle with fuel and charge it simultaneously.

Tank vent


Concept

The vehicle is equipped with a special fuel tank. The fuel tank is designed for special requirements that arise from hybrid operation of the vehicle, i.e., alternating drive with combustion engine or electric motor.

General information


Excess pressure may build up in the fuel tank as a result of gasoline vapors; this pressure is dissipated before the fuel cap is opened.

Overview

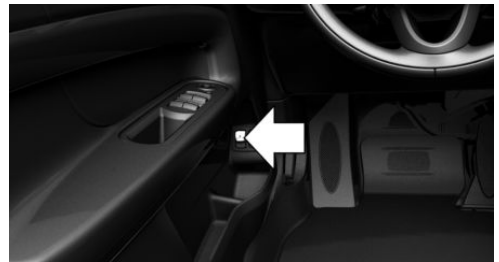

The switch is located in the storage compartment of the driver's door.

Venting the tank

1. Switch off drive-ready state.
2.  Pull the switch to start the pressure equalization.

The tank venting status is displayed in the instrument cluster. In rare cases, tank venting can last several minutes.

When tank venting has finished, a message is displayed in the instrument cluster. The fuel filler flap is released for opening.

3. Open the fuel filler flap.

If it is not possible to open the fuel filler flap after tank venting, pull the switch again.

If it is still not possible to open the fuel filler flap even after the switch has been pulled, unlock the fuel filler flap manually, refer to page 264.

Fuel cap

Opening

Before opening, vent the tank, refer to page 263.


1. To open the fuel filler flap, press on the rear edge, arrow. The fuel filler flap opens.



2. Turn the fuel cap counterclockwise.



3. Place the fuel cap in the bracket attached to the fuel filler flap.

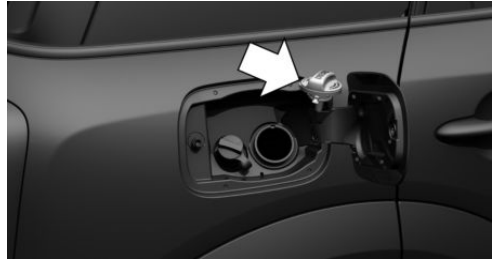

Closing

Warning

The retaining strap of the fuel cap can be jammed and crushed during closing. The cap cannot be correctly closed. Fuel or fuel vapors can escape. There is a risk of injury or risk of damage to property. Pay attention that the retaining strap is not jammed or crushed when closing the cap.

1. Fit the cap and turn it clockwise until you clearly hear a click.
2. Press on the fuel filler flap until it engages.

Emergency unlocking

It may be necessary in certain situations to unlock the fuel filler flap manually, for instance with an electrical fault.

The release is located in the cargo area.

1. Remove the cover.
2. Pull the green knob with the fuel pump symbol. This releases the fuel filler flap.



3. To open the fuel filler flap, press on the rear edge. The fuel filler flap opens.

Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.

Follow the following when refueling

General information

When refueling, insert the filler nozzle completely into the filler pipe. Lifting up the fuel pump nozzle during refueling causes:

- Premature switching off.
- Reduced return of the fuel vapors.

The fuel tank is full when the filler nozzle clicks off the first time.

Make sure that the fuel cap is closed properly after refueling, otherwise the emissions warning light may light up.

Follow safety regulations posted at the gas station.

Safety information

Warning

Simultaneous charging and refueling poses a risk of fire if a sufficient safety distance from easily flammable materials is not maintained. There is a risk of injury or risk of damage to property. Do not fill the vehicle with fuel and charge it simultaneously.

NOTICE

Fuels are toxic and aggressive. Overfilling of the fuel tank can damage the fuel system. Painted surfaces may be damaged by contact with fuel. Escaping fuel can harm the environment. There is a risk of damage to property. Avoid overfilling.

Fuel

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Fuel recommendation

General information

Depending on the region, many gas stations sell fuel that has been customized to winter or summer conditions. Fuel that is available in winter, for instance helps make a cold start easier.

Gasoline

General information

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Fuels that are marked on the gas pump as containing metal must not be used.

Fuels with a maximum ethanol content of 25 %, i. e. E10 or E25, may be used for refueling.

Ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: comply with the current standard in each case.

Safety information

NOTICE

Even small quantities of the wrong fuel or wrong fuel additives can damage the fuel system and engine. Furthermore, the catalytic converter is permanently damaged. There is a risk of damage to property. Do not refuel or add the following in the case of gasoline engines:

- Leaded gasoline.
- Metallic additives, for instance manganese or iron.

Do not press the Start/Stop button after refueling with the wrong fuel. Contact a dealer's service center or another qualified service center or repair shop.

NOTICE

Incorrect fuels can damage the fuel system and the engine. There is a risk of damage to property. Do not use fuels with a higher percentage of ethanol than recommended. Do not refuel with fuels containing methanol, e.g. M5 to M100.

NOTICE

Fuel that does not comply with the minimum quality can compromise engine function or cause engine damage. There is a risk of damage to property. Do not fill with fuel that does not comply with the minimum quality.

⚠ CAUTION

The use of poor-quality fuels may result in harmful engine deposits or damage. Additionally, problems relating to drivability, starting and stalling, especially under certain environmental conditions such as high ambient temperature and high altitude, may occur.

If drivability problems are encountered, we recommend switching to a high quality gasoline brand and a higher octane grade — AKI number — for a few tank fills. To avoid harmful engine deposits, it is highly recommended to purchase gasoline from Top Tier retailers.

Failure to comply with these recommendations may result in the need for unscheduled maintenance.

Recommended fuel grade

MINI recommends AKI 91.

Refuel with this gasoline to achieve the rated performance and consumption values.

Minimum fuel grade

MINI recommends AKI 89.

If you use gasoline with this minimum AKI Rating, the engine may produce knocking sounds when starting at high external temperatures. This has no effect on the engine life.

Wheels and tires

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Tire inflation pressure

General information

The tire characteristics and tire inflation pressure influence the following:

- The service life of the tires.
- Road safety.
- Driving comfort.
- Fuel consumption.

Safety information

Warning

A tire with too little or no tire inflation pressure may heat up significantly and sustain damage. This will have a negative impact on aspects of handling, such as steering and braking response. There is a risk of accident. Regularly check the tire inflation pressure, and correct it as needed, for instance twice a month and before a long trip.

Tire inflation pressure specifications

In the tire inflation pressure table

The tire inflation pressure table, refer to page 269, contains all tire inflation pressure specifications for the specified tire sizes at the ambient temperature. The tire inflation pressure values apply to tire sizes approved by the manufacturer of the vehicle for the vehicle type.

To identify the correct tire inflation pressure, please note the following:

- Tire sizes of your vehicle.
- Maximum permitted driving speed.

Checking the tire inflation pressure

General information

Tires heat up while driving. The tire inflation pressure increases with the tire temperature.

Tires have a natural, consistent loss of tire inflation pressure.

The displays of inflation devices may under-read by up to 0.1 bar/2 psi.

Checking using tire inflation pressure specifications in the tire inflation pressure table

The tire inflation pressure specifications in the tire inflation pressure table only relate to cold tires or tires at the same temperature as the ambient temperature.

Only check the tire inflation pressure levels when the tires are cold, i.e.:

- Driving range of max. 1.25 miles/2 km has not been exceeded.

- If the vehicle has not moved again for at least 2 hours after a trip.
1. Determine the intended tire inflation pressure levels for the mounted tires.
 2. Check the tire inflation pressure in all four tires, using a pressure gage, for example.
 3. Correct the tire inflation pressure if the actual tire inflation pressure deviates from the intended tire inflation pressure.
 4. Check whether all valve caps are screwed onto the tire valves.

After correcting the tire inflation pressure

For run-flat tires: reinitialize run-flat tires.

For the Tire Pressure Monitor TPM: reset the Tire Pressure Monitor TPM.

Tire inflation pressures up to 100 mph/160 km/h

For speeds of up to 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 269, and adjust as necessary.




These pressure values can also be found on the tire inflation pressure label on the driver's door pillar.

Do not exceed a speed of 100 mph/160 km/h.

Tire pressure values up to 100 mph/160 km/h

COOPER SE

Tire size	Pressure specifications in bar/PSI	
Specifications in bar/PSI with cold tires		
225/50 R 18 95 V A/S	2.2 / 32	2.4 / 35
225/50 R 18 95 W		
225/55 R 17 97 H M+S		
225/50 R 18 95 H M+S		
205/55 R 18 96 H XL M+S	2.4 / 35	2.6 / 38

Tire inflation pressures at max. speeds above 100 mph/160 km/h


Warning

In order to drive at maximum speeds in excess of 100 mph/160 km/h, please observe, and, if necessary, adjust tire pressures for speeds exceeding 100 mph/160 km/h from the relevant table on the following pages. Otherwise, tire damage and accidents could occur.

For speeds over 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 270, and adjust as necessary.

Tire inflation pressure values over 100 mph/160 km/h

COOPER SE

Tire size	Pressure specifications in bar/PSI	
Specifications in bar/PSI with cold tires		
225/50 R 18 95 V A/S	2.4 / 35	2.6 / 38
225/50 R 18 95 W		
225/55 R 17 97 H M+S		
225/50 R 18 95 H M+S		
205/55 R 18 96 H XL M+S	2.6 / 38	3.0 / 44

Tire identification marks

Tire size

205/45 R 17 84 V

205: nominal width in mm

45: aspect ratio in %

R: radial tire code

17: rim diameter in inches

84: load rating, not for ZR tires

V: speed rating, before the R on ZR tires

Maximum tire load

Maximum tire load is the maximum permissible weight for which the tire is approved.

Locate the maximum tire load on the tire sidewall and the Gross Axle Weight Rating

– GAWR – on the certification label on the driver’s door pillar. Divide the tire load by 1.1. It must be greater than one-half of the vehicle’s Gross Axle Weight Rating – GAWR. Note, front vs. rear GAWR and tire loads, respectively.

Speed letter

Designation	Maximum speed
Q	up to 100 mph/160 km/h
R:	up to 106 mph/170 km/h
S	up to 112 mph/180 km/h
T	up to 118 mph/190 km/h
H	up to 131 mph/210 km/h
V	up to 150 mph/240 km/h
W	up to 167 mph/270 km/h
Y	up to 186 mph/300 km/h

Tire Identification Number

DOT-Code: DOT xxxx xxx 2119

xxxx: manufacturer code for the tire brand

xxx: tire size and tire design

2119: tire age

Tires with DOT codes meet the guidelines of the U.S. Department of Transportation.

Tire age

Recommendation

Regardless of the tire tread, replace tires at least every 6 years.

Manufacture date

You can find the manufacture date of the tire on the tire’s sidewall.

Designation	Manufacture date
DOT ... 2119	21st week, 2019

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

E.g.: Treadwear 200; Traction AA; Temperature A

DOT Quality Grades

Treadwear

Traction AA A B C

Temperature A B C

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades.

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. E.g., a tire graded 150 would wear one and one-half, 1 g, times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The traction grades, from highest to lowest, are AA, A, B, and C.

Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration,

cornering, hydroplaning, or peak traction characteristics.

Temperature

The temperature grades are A, the highest, B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades Band A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

RSC – Run-flat tires

Run-flat tires, refer to page 274, are labeled with a circular symbol containing the letters RSC marked on the sidewall.

M+S

Winter and all-season tires with better cold weather performance than summer tires.

Tire tread


Summer tires

Do not drive with a tire tread of less than 0.12 in/3 mm, otherwise there is an increased risk of hydroplaning.

Winter tires

Do not drive with a tire tread of less than 0.16 in/4 mm, as such tires are less suitable for winter operation.

Minimum tread depth

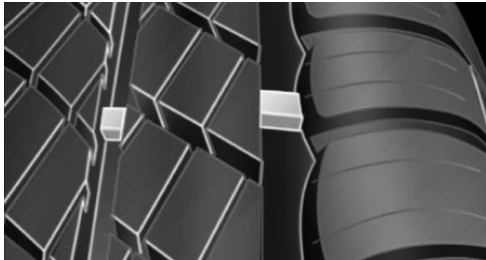

Wear indicators are distributed around the tire's circumference and have the legally required minimum height of 0.063 inches/1.6 mm.

The positions of the wear indicators are marked on the tire sidewall with TWI, Tread Wear Indicator.

Tire damage

General information

Inspect your tires regularly for damage, foreign objects lodged in the tread, and tread wear.

Driving over rough or damaged road surfaces, as well as debris, curbs and other obstacles can cause serious damage to wheels, tires and suspension parts. This is more

likely to occur with low-profile tires, which provide less cushioning between the wheel and the road. Be careful to avoid road hazards and reduce your speed, especially if your vehicle is equipped with low-profile tires.

Indications of tire damage or other vehicle malfunctions:

- Unusual vibrations.
- Unusual tire or running noises.
- Unusual handling such as a strong tendency to pull to the left or right.

Damage can be caused by the following situations, for instance:

- Driving over curbs.
- Road damage.
- Tire inflation pressure too low.
- Vehicle overloading.
- Incorrect tire storage.

Safety information

Warning

Damaged tires can lose tire inflation pressure, which can lead to loss of vehicle control. There is a risk of accident. If tire damage is suspected while driving, immediately reduce speed and stop. Have wheels and tires checked. For this purpose, drive carefully to the nearest dealer's service center or another qualified service center or repair shop. Have vehicle towed or transported as needed. Do not repair damaged tires, but have them replaced.

Warning

Tires can become damaged by driving over obstacles, e.g., curbs or road damage, at high speed. Larger wheels have a smaller tire cross-section. The smaller the tire cross-section, the higher the risk of tire

damage. There is a danger of accidents and property damage. If possible, avoid driving over objects or road conditions that may damage tires, or drive over them slowly and carefully.

Changing wheels and tires

Mounting and wheel balancing

Have mounting and wheel balancing carried out by a dealer's service center or another qualified service center or repair shop.

Wheel and tire combination

General information

You can ask the dealer's service center or another qualified service center or repair shop about the correct wheel/tire combination and wheel rim versions for the vehicle.

Safety information

Warning

Wheels and tires which are not suitable for your vehicle can damage parts of the vehicle, for instance due to contact with the body due to tolerances despite the same official size rating. There is a risk of an accident. The manufacturer of your vehicle strongly suggests that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type.

Warning

Incorrect wheel/tire combinations will have a negative impact on the vehicle's handling and on the function of a variety of systems, such as the Anti-lock Brake

System or Dynamic Stability Control.

There is a risk of accident. To maintain good handling and vehicle response, use only tires with a single tread configuration from a single manufacturer. The manufacturer of the vehicle recommends that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type. Following tire damage, have the original wheel/tire combination remounted on the vehicle as soon as possible.

Recommended tire brands



For each tire size, the manufacturer of the vehicle recommends certain tire brands. The tire brands can be identified by a star on the tire sidewall.

New tires

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

Retreaded tires

Warning

Retreaded tires can have different tire casing structures. With advanced age the service life can be limited. There is a risk of an accident. The manufacturer of your vehicle does not recommend the use of re-treaded tires.

The manufacturer of the vehicle does not recommend the use of retreaded tires.

Winter tires

Winter tires are recommended for operating on winter roads.

Although so-called all-season M+S tires provide better winter traction than summer tires, they usually do not provide the same level of performance as winter tires.

Maximum speed of winter tires

If the maximum speed of the vehicle is higher than the permissible speed for the winter tires, then attach a label showing the permissible maximum speed in the field of view. The label is available from a dealer's service center or another qualified service center or repair shop.

With winter tires mounted, observe and do not exceed the permissible maximum speed.

Changing runflat tires

For your own safety, use only runflat tires. No spare tire is available in the case of a flat tire. Further information is available from a dealer's service center or another qualified service center or repair shop.

Rotating wheels between axles

Different wear patterns can occur on the front and rear axles depending on individual driving conditions. The tires can be rotated

in pairs between the axles to achieve even wear. Further information is available from a dealer's service center or another qualified service center or repair shop. After rotating, check the tire pressure and correct, if needed.

Storing tires

Tire inflation pressure

Do not exceed the maximum tire inflation pressure indicated on the side wall of the tire.

Storage

Store wheels and tires in a cool, dry and dark place.

Always protect tires against all contact with oil, grease, and solvents.

Do not leave tires in plastic bags.

Remove dirt from wheels or tires.

Run-flat tires

Concept

Run-flat tires permit continued driving under restricted conditions even in the event of a complete loss of tire inflation pressure.

General information

The wheels are composed of tires that are self-supporting to a limited degree.

The support of the sidewall allows the tire to remain drivable to a restricted degree in the event of a tire inflation pressure loss.

Follow the instructions for continued driving with a flat tire.

Safety information

Warning

Your vehicle handles differently with a run-flat tire with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.

Label



The tires are marked on the tire sidewall with RSC Run-flat System Component.

Repairing a flat tire

Safety measures

- Park the vehicle as far away as possible from passing traffic and on solid ground.
- Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.
- Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- Have all vehicle occupants get out of the vehicle and ensure that they remain out-

side the immediate area in a safe place, such as behind a guardrail.

- If necessary, set up a warning triangle at an appropriate distance.

Mobility System

Concept

With the Mobility System, minor tire damage can be sealed temporarily to enable continued travel. To accomplish this, sealant is pumped into the tires, which seals the damage from the inside.

General information


- Follow the instructions on using the Mobility System found on the compressor and sealant container.
- Use of the Mobility System may be ineffective if the tire puncture measures approx. 1/8 inches/4 mm or more.
- Contact a dealer's service center or another qualified service center or repair shop if the tire cannot be made drivable.
- Do not remove foreign bodies that have penetrated the tire. Only remove foreign objects if they are visibly protruding from the tire.
- Pull the speed limit sticker off the sealant container and apply it to the steering wheel.
- The use of a sealant can damage the TPM wheel electronics. In this case, have the TPM wheel electronics replaced at the next opportunity.
- The compressor can be used to check the tire inflation pressure.

Overview

Storage

The Mobility System is located in a bag on the right side trim in the cargo area.


Sealant container

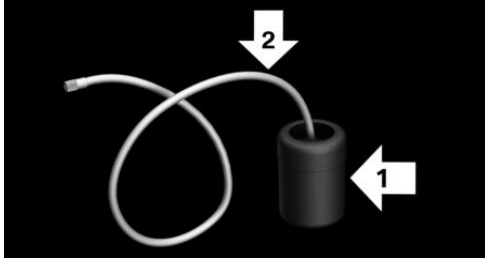

- Sealant container, arrow 1.
- Filling hose, arrow 2.

Observe use-by date on the sealant container.

Compressor

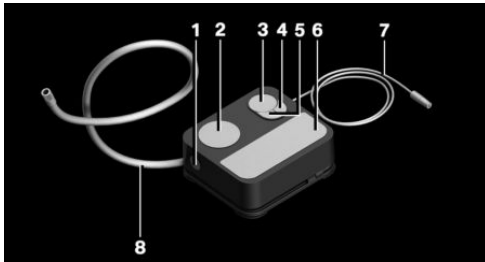

- 1 Sealant container unlocking
- 2 Sealant container holder
- 3 Tire pressure gage
- 4 Reduce tire inflation pressure button
- 5 On/off switch
- 6 Compressor
- 7 Connector/cable for socket
- 8 Connection hose

Safety measures

- Park the vehicle as far away as possible from passing traffic and on solid ground.
- Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.
- Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- Have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- If necessary, set up a warning triangle at an appropriate distance.

Filling the tire with sealant

Safety information

DANGER


If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain pollutants which are colorless and odorless. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

NOTICE


The compressor can overheat during extended operation. There is a risk of damage to property. Do not run the compressor for more than 10 minutes.

Filling


1. Shake the sealant container.

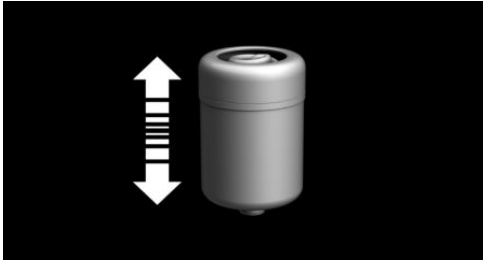

2. Pull filling hose completely out of the cover of the sealant container. Do not kink the hose.

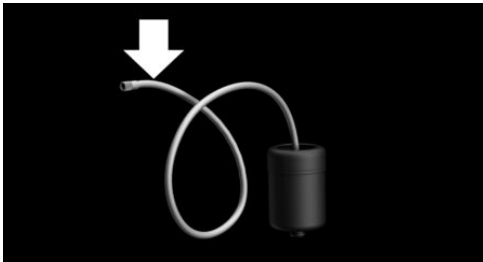

3. Slide the sealant container into the holder on the compressor housing, ensuring that it engages audibly.

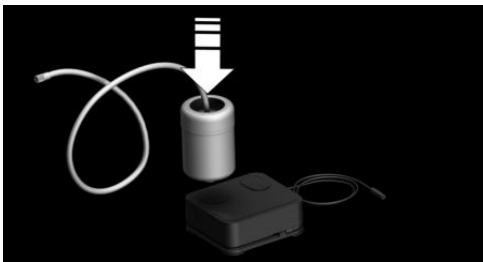

4. Screw the filling hose of the sealant container onto the tire valve of the non-working wheel.



5. With the compressor switched off, insert the plug into the power socket inside the vehicle.



6. With the ignition switched on or the engine running, switch on the compressor.



Let the compressor run for max. 10 minutes to fill the tire with sealant and achieve a tire inflation pressure of approx. 2.5 bar.

While the tire is being filled with sealant, the tire inflation pressure may sporadically reach approx. 5 bar. Do not switch off the compressor at this point.

Checking and adjusting the tire inflation pressure

Checking

1. Switch off the compressor.
2. Read the tire inflation pressure on the tire pressure gage.


To continue the trip, a tire inflation pressure of at least 2 bar must be reached.

Removing and stowing the sealant container


1. Unscrew the filling hose of the sealant container from the tire valve.
2. Press the red unlocking device.
3. Remove the sealant container from the compressor.
4. Wrap and store the sealant container in suitable material to avoid dirtying the cargo area.

Minimum tire inflation pressure is not reached

1. Pull the connector out of the power socket inside the vehicle.
2. Drive 33 ft/10 m forward and back to distribute the sealant in the tire.
3. Screw the connection hose of the compressor directly onto the tire valve stem.

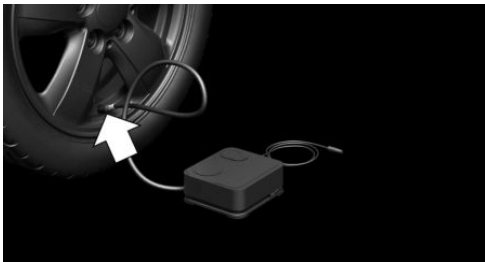

4. Insert the connector into the power socket inside the vehicle.

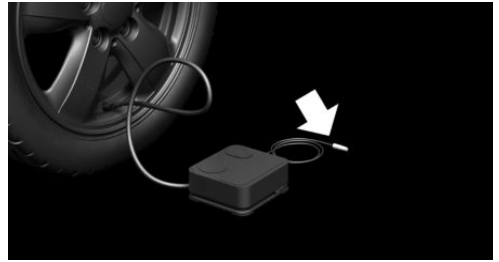


5. With the ignition switched on or the engine running, switch on the compressor. If a tire inflation pressure of at least 2 bar cannot be reached, contact your dealer's service center or another qualified service center or repair shop. If a tire inflation pressure of at least 2 bar is reached, see Minimum tire inflation pressure is reached.
6. Unscrew the connection hose of the compressor from the tire valve.
7. Pull the connector out of the power socket inside the vehicle.
8. Stow the Mobility System in the vehicle.

Minimum tire inflation pressure is reached


1. Unscrew the connection hose of the compressor from the tire valve.
2. Pull the connector out of the power socket inside the vehicle.
3. Stow the Mobility System in the vehicle.
4. Immediately drive approx. 5 miles/10 km to ensure that the sealant is evenly distributed in the tire. Do not exceed a speed of 50 mph/80 km/h. If possible, do not drive at speeds less than 12 mph/20 km/h.

Adjustment

1. Stop at a suitable location.
2. Screw the connection hose of the compressor directly onto the tire valve stem.

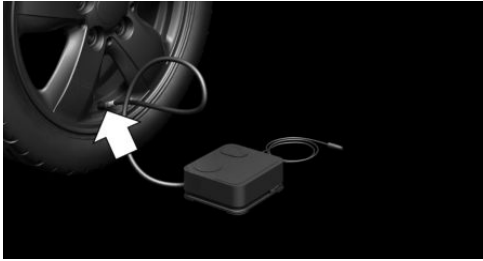

3. Insert the connector into the power socket inside the vehicle.

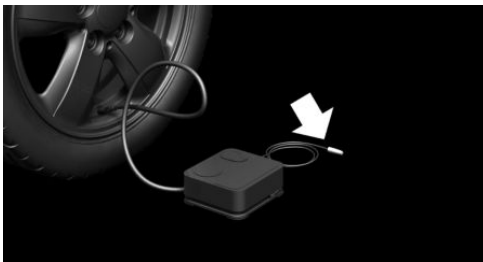

4. Correct the tire inflation pressure to at least 2.0 bar.
 - Increase tire inflation pressure: with the ignition switched on or the engine running, switch on the compressor.
 - Reduce tire inflation pressure: press the button on the compressor.
5. Unscrew the connection hose of the compressor from the tire valve.
6. Pull the connector out of the power socket inside the vehicle.
7. Stow the Mobility System in the vehicle.

Continuing the trip

Do not exceed the maximum permissible speed of 50 mph/80 km/h.

Reinitialize the Flat Tire Monitor, refer to page 178.

Reset the Tire Pressure Monitor, refer to page 173.

Replace the nonworking tire and the sealant container of the Mobility System promptly.

Snow chains

Safety information

Warning

With the mounting of snow chains on unsuitable tires, the snow chains can come into contact with vehicle parts. There may be a risk of accident or risk of damage to property. Only mount snow chains on tires that are designated by their manufacturer as suitable for the use of snow chains.

Warning

Insufficiently tight snow chains may damage tires and vehicle components. There may be a risk of accident or risk of damage to property. Make sure that the snow chains are always sufficiently tight. Retighten as needed according to the snow chain manufacturer's instructions.

Fine-link snow chains

The manufacturer of the vehicle recommends the use of fine-link snow chains. Certain types of fine-link snow chains have been tested by the manufacturer of the vehicle and recommended as road-safe and suitable.

Information regarding suitable snow chains is available from a dealer's service center or another qualified service center or repair shop.

Use

Use only in pairs on the front wheels, equipped with the tires of the following size:

- 205/60 R 17.

Follow the snow chain manufacturer's instructions.

Do not initialize the Flat Tire Monitor after mounting snow chains, as doing so may result in incorrect readings.

Do not reset the Tire Pressure Monitor TPM after mounting snow chains, as doing so may result in incorrect readings.

When driving with snow chains, briefly activate Dynamic Traction Control DTC, if needed.

Maximum speed with snow chains

Do not exceed a speed of 30 mph/50 km/h when using snow chains.

General information

The manufacturer of the vehicle has determined certain wheels and tires to be suitable for operation on the vehicle. Mounting of snow chains on these wheels and tires is not permitted.

Safety information

Warning

With the mounting of snow chains on unsuitable tires, the snow chains can come into contact with vehicle parts. There may be a risk of accident or risk of damage to property. Do not mount snow chains.

Changing wheels/tires

General information

When using run-flat tires or a flat tire kit, a wheel does not always need to be changed immediately when there is a loss of tire inflation pressure due to a flat tire.

If needed, the tools for changing wheels are available as accessories from a dealer's service center or another qualified service center or repair shop.

Safety information

DANGER

The vehicle jack is only provided for short-term lifting of the vehicle for wheel changes. Even if all safety measures are observed, there is a risk of the raised vehicle falling, if the vehicle jack tips over. There is a risk of injuries or danger to life. If the vehicle is raised, do not lie under the vehicle and do not start the engine.

DANGER

Supports such as wooden blocks under the vehicle jack reduce the capacity of the vehicle jack to bear weight. They have the potential to exert too much strain on the vehicle jack, causing it to tip over and the vehicle to fall. There is a risk of injuries or danger to life. Do not place supports under the vehicle jack.

Warning

The jack, issued by the vehicle manufacturer, is provided in order to perform a wheel change in the event of a breakdown. The jack is not designed for frequent use; for example, changing from summer to winter tires. Using the jack frequently may

cause it to become jammed or damaged. There is a risk of injury and risk of damage to property. Only use the jack to attach an emergency or spare wheel in the event of a breakdown.

Warning

On soft, uneven or slippery ground, for example snow, ice, tiles, etc., the vehicle jack can slip away. There is a risk of injury. If possible, change the wheel on a flat, solid, and slip-resistant surface.

Warning

The vehicle jack is optimized for lifting the vehicle and for the jacking points on the vehicle only. There is a risk of injury. Do not lift any other vehicle or cargo using the vehicle jack.

Warning

If the vehicle jack is not inserted into the jacking point provided for this purpose, the vehicle may be damaged or the vehicle jack may slip when it is being cranked up. There is a risk of injury or risk of damage to property. When cranking up the vehicle jack, ensure that it is inserted in the jacking point next to the wheel housing.

Warning

A vehicle that is raised on a vehicle jack may fall off of the jack if lateral forces are exerted on it. There is a risk of injury and risk of damage to property. While the vehicle is raised, do not exert lateral forces on the vehicle or pull abruptly on the vehicle. Have a stuck wheel removed by a deal-

er's service center or another qualified service center or repair shop.

Securing the vehicle against rolling

General information


The vehicle manufacturer recommends to additionally secure the vehicle against rolling away when changing a wheel.

On a level surface



Place wheel chocks or other suitable objects in front and behind the wheel that is diagonal to the wheel to be changed.

On a slight downhill gradient

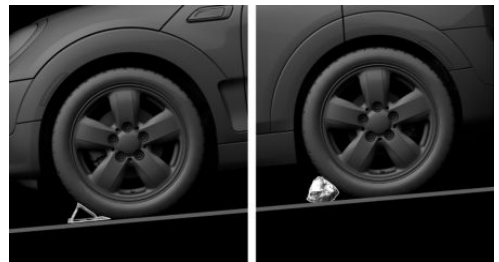

If you need to change a wheel on a slight downhill grade, place chocks and other suitable objects, for instance a rock, under the wheels of both the front and rear axles against the rolling direction.


Lug bolt lock

Concept

The wheel lug bolts have a special coding. The lug bolts can only be released with the adapter which matches the coding.

Overview

The adapter of the lug bolt lock is located in the onboard vehicle tool kit, refer to page 296.

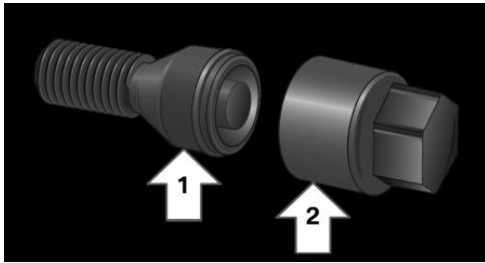

- Lug bolt, arrow 1.
- Adapter, arrow 2.

Unscrewing

1. Attach the adapter to the lug bolt.
2. Unscrew the lug bolt.
3. Remove the adapter after unscrewing the lug bolt.

Screwing on


1. Attach the adapter to the lug bolt. If necessary, turn the adapter until it fits on the lug bolt.
2. Screw on the lug bolt. The tightening torque is 140 Nm.
3. Remove the adapter and stow it after screwing on the lug bolt.

Preparing the vehicle

- Park the vehicle on solid and non-slip ground at a safe distance from traffic.

- Switch on the hazard warning system.
- Set the parking brake.
- Engage a gear or move the selector lever to position P.
- As soon as permitted by the traffic flow, have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- Depending on the vehicle equipment, get wheel change tools and, if necessary, the emergency wheel from the vehicle.
- If necessary, set up a warning triangle or portable hazard warning light at an appropriate distance.
- Secure the vehicle additionally against rolling.
- Loosen the lug bolts a half turn.

Jacking points for the vehicle jack

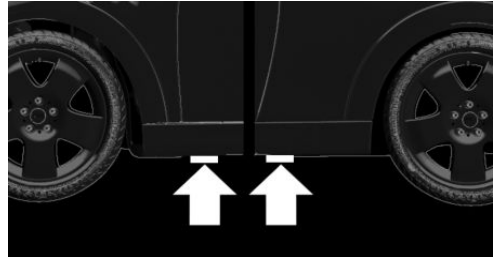


The jacking points for the vehicle jack are located at the marked positions.

Jacking up the vehicle


Warning

Hands and fingers can be jammed when using the vehicle jack. There is a risk of injury. Comply with the described hand position and do not change this position while using the vehicle jack.


1. Hold the vehicle jack with one hand, arrow 1, and grasp the vehicle jack crank or lever with your other hand, arrow 2.

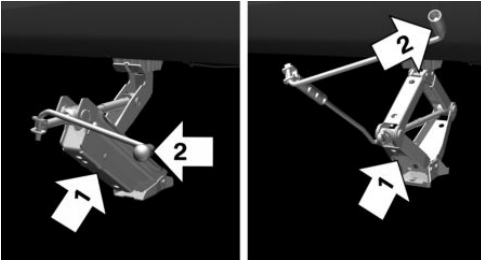


2. Insert the vehicle jack into the rectangular recess of the jacking point closest to the wheel to be changed.

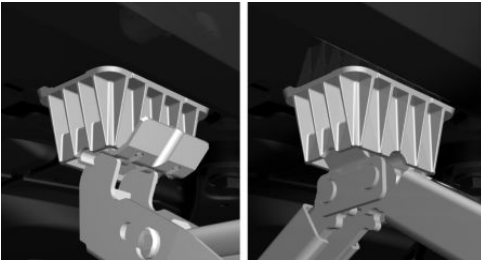


3. Extend the vehicle jack by turning the vehicle jack crank or lever clockwise.

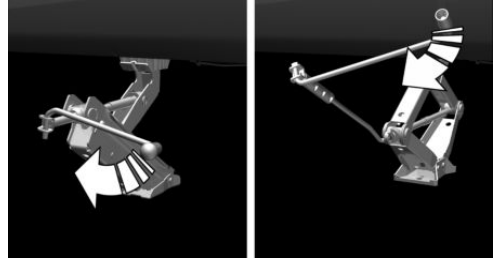

4. Take your hand away from the vehicle jack as soon as the vehicle jack is under load and continue turning the vehicle jack crank or lever with one hand.
5. Make sure that the vehicle jack foot stands vertically and at a right angle beneath the jacking point.

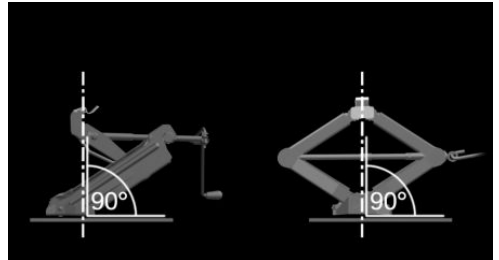

6. Make sure that the vehicle jack foot stands vertically and perpendicularly beneath the jacking point after extending the vehicle jack.

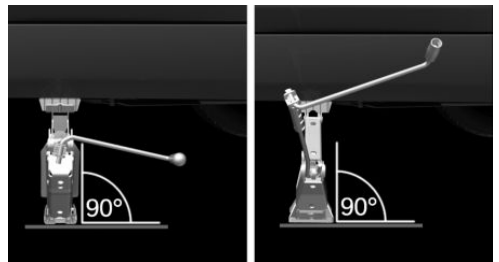

7. Crank the vehicle up, until the vehicle jack is with the entire surface on the

ground and the relevant wheel is maximum 1.2 inches/3 cm above ground.

other qualified service center or repair shop.

Mounting a wheel

Mount one emergency wheel only, as required.

1. Unscrew the lug bolts.
2. Remove the wheel.
3. Put the new wheel or emergency wheel on and screw in at least two lug bolts in a crosswise pattern until hand-tight.

If non-original light-alloy wheels of the vehicle manufacturer are mounted, the accompanying lug bolts may have to be used as well.

4. Hand-tighten the remaining lug bolts and tighten all lug bolts well in a crosswise pattern.
5. Turn the vehicle jack crank counter-clockwise to retract the vehicle jack and lower the vehicle.
6. Remove the vehicle jack and stow it securely.

After the wheel change

1. Tighten the lug bolts crosswise. The tightening torque is 101 lbs ft/140 Nm.
2. Stow the nonworking wheel in the cargo area, if necessary.

The nonworking wheel cannot be stored under the cargo floor panel because of its size.

3. Check tire inflation pressure at the next opportunity and correct as needed.
4. Reinitialize the Flat Tire Monitor.
Reset the Tire Pressure Monitor TPM.
5. Check to make sure the lug bolts are tight with a calibrated torque wrench.
6. Have the damaged tire replaced at the nearest dealer's service center or an-


Engine compartment

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for

instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Overview

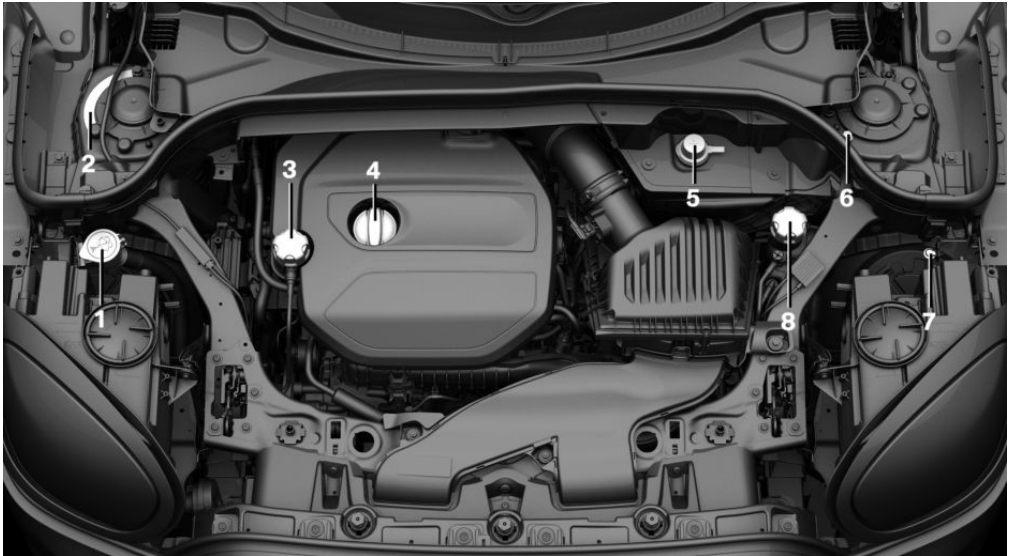

- | | | | |
|---|--|---|----------------------------------|
| 1 | Filler neck for washer fluid | 5 | Jump-starting, positive terminal |
| 2 | Vehicle identification number | 6 | Jump-starting, negative terminal |
| 3 | Coolant reservoir, high-voltage technology | 7 | Unlocking, charging cable |
| 4 | Oil filler neck | 8 | Coolant reservoir, engine |

Hood

Safety information

Warning

Improperly executed work in the engine compartment can damage vehicle components and impair vehicle functions. There is a risk of an accident and damage to property. Have work in the engine compartment performed by a dealer's service center or another qualified service center or repair shop.

Warning

The engine compartment accommodates moving components. Certain components in the engine compartment can also move with the vehicle switched off, for instance the radiator fan. There is a risk of injury. Do not reach into the area of moving parts. Keep articles of clothing and hair away from moving parts.

Warning

There are protruding parts, for instance locking hook, on the inside of the hood. There is a risk of injury. If the hood is open, pay attention to protruding parts and keep clear of these areas.

Warning

An incorrectly locked hood can open while driving and restrict visibility. There is a risk of accident. Stop immediately and correctly close the hood.

Warning

Body parts can be jammed when opening and closing the hood. There is a risk of injury. Make sure that the area of movement of the hood is clear during opening and closing.

NOTICE

Folded-away wipers can be jammed when the hood is opened. There is a risk of damage to property. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

NOTICE

When the hood is closed, it must engage on both sides. Pressing again can damage the hood. There is a risk of damage to property. Open the hood again and then close it energetically. Avoid pressing again.

Opening the hood

1. Pull lever, arrow 1.
Hood is unlocked.



2. After the lever is released, pull the lever again, arrow 2.
Hood can be opened.

Indicator/warning lights

When the hood is opened, a Check Control message is displayed.

Closing the hood



Energetically close the hood from approx. 20 in/50 cm.

The hood must engage on both sides.

Engine oil

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

The engine oil consumption is dependent on your driving style and driving conditions.

Therefore, regularly check the engine oil level after refueling by taking a detailed measurement.

The engine oil consumption can increase in the following situations, for instance:

- Sporty driving style.
- Break-in of the engine.
- Idling of the engine.
- With use of engine oil types that are classified as not suitable.

Different Check Control messages appear, depending on the engine oil level.

Safety information

NOTICE

An engine oil level that is too low causes engine damage. There is a risk of damage to property. Immediately add engine oil.

NOTICE

Too much engine oil can damage the engine or the catalytic converter. There is a risk of damage to property. Do not add too much engine oil. When too much engine oil is added, have the engine oil level corrected by a dealer's service center or another qualified service center or repair shop.

Electronic oil measurement

General information

The electronic oil measurement has two measuring principles:

- Monitoring.
- Detailed measurement.

When making frequent short-distance trips or using a dynamic driving style, for instance when taking curves aggressively, regularly perform a detailed measurement.

Monitoring

Concept

The engine oil level is monitored electronically while driving and can be shown on the Control Display.

If the engine oil level is outside its permissible operating range, a Check Control message is displayed.





A red indicator light indicates that the engine oil pressure is too low.

Functional requirements

A current measured value is available after approx. 30 minutes of normal driving with the combustion engine running.

Displaying the engine oil level

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Engine oil level"

The engine oil level is displayed.

System limits

When making frequent short-distance trips or using a dynamic driving style, it may not be possible to calculate a measured value. In this case, the measured value for the last, sufficiently long trip is displayed.

Detailed measurement

Concept

The engine oil level is checked when the vehicle is stationary and displayed via a scale. If the engine oil level is outside its permissible operating range, a Check Control message is displayed.

General information



During the measurement, the idle speed is increased somewhat.

Functional requirements

- Vehicle is parked in a horizontal position.
- Drive-ready state is activated.
- Steptronic transmission: selector lever in selector lever position N or P and accelerator pedal not depressed.
- The combustion engine is at operating temperature.

Performing a detailed measurement

Via the Central Information Display (CID):

1.  "My MINI"
2. "Vehicle status"
3.  "Engine oil level"
4. "Measure engine oil level"
5. "Start measurement"

The engine oil level is checked and displayed via a scale.

Adding engine oil

General information

Only add engine oil when the message is displayed in the instrument cluster. The quantity to be added is indicated in the message displayed in the instrument cluster.

Only add suitable types of engine oil, refer to page 290.

Safely park the vehicle and switch off the ignition and drive-ready state before adding engine oil.

Take care not to add too much engine oil.

Safety information

Warning

Operating materials, for instance oils, greases, coolants, fuels, can contain harmful ingredients. There is a risk of injuries or danger to life. Follow the instructions on the containers. Avoid the contact of articles of clothing, skin or eyes with operating materials. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

⚠ NOTICE

An engine oil level that is too low causes engine damage. There is a risk of damage to property. Immediately add engine oil.

⚠ NOTICE


Too much engine oil can damage the engine or the catalytic converter. There is a risk of damage to property. Do not add too much engine oil. When too much engine oil is added, have the engine oil level corrected by a dealer's service center or another qualified service center or repair shop.

Overview

The oil filler neck is located in the engine compartment, refer to page 285.

Adding engine oil

1. Open the hood, refer to page 286.
2. Open the lid counterclockwise.

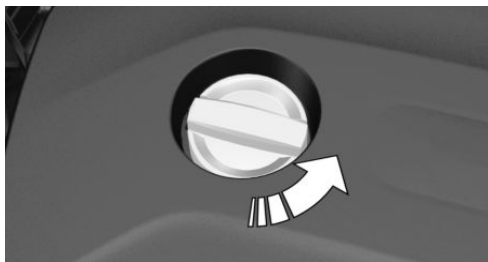

3. Add engine oil.
4. Close the lid.

Engine oil types to add**General information**

The engine oil quality is critical for the life of the engine.

Only add the types of engine oil which are listed.

Safety information**⚠ NOTICE**

Oil additives can damage the engine. There is a risk of damage to property. Do not use oil additives.

⚠ NOTICE

Incorrect engine oil can cause malfunctions in the engine or damage it. There is a risk of damage to property. When selecting an engine oil, make sure that the engine oil has the correct oil rating.

Suitable engine oil types

Add engine oils that meet the following oil rating standards:

Oil rating

BMW Longlife-01 FE.

BMW Longlife-14 FE+.

BMW Longlife-17 FE+.

Alternative engine oil types

If an engine oil suitable for continuous use is not available, up to 1 US quart/liter of an engine oil with the following oil rating can be added:

Oil rating

API SL.

API SM.

API SN.

**MINI recommends
MINI Original Engine Oil.****Viscosity grades**

When selecting an engine oil, make sure that the engine oil belongs to one of the following viscosity grades:

Viscosity grades

SAE 0W-20.

SAE 0W-30.

More information about suitable oil ratings and viscosity grades of engine oils can be requested from a dealer's service center or another qualified service center or repair shop.

Engine oil change** NOTICE**

Engine oil that is not changed in timely fashion can cause increased engine wear and thus engine damage. There is a risk of damage to property. Do not exceed the service data indicated in the vehicle.

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop change the engine oil.

Coolant

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

Coolant consists of water and additives.

Not all commercially available additives are suitable for the vehicle. Information about suitable additives is available from a dealer's service center or another qualified service center or repair shop.

Safety information

Warning

With the engine hot and the cooling system open, coolant can escape and lead to scalding. There is a risk of injury. Only open the cooling system with the engine cooled down.

Warning

Additives are harmful and incorrect additives can damage the engine. There is a risk of injury and risk of damage to property. Do not allow additives to come into

contact with skin, eyes or articles of clothing. Use suitable additives only.

Coolant level

Concept

The vehicle features two cooling circuits. Always check the coolant levels of both coolant reservoirs and refill as needed.

Checking

There are yellow Min and Max marks in the coolant reservoir.

1. Let the engine cool.
2. Open the hood, refer to page 286.
3. Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.



4. Open the coolant reservoir lid.


- The coolant level is correct if it lies between the minimum and maximum marks in the filler neck.



- Close the lid.

Adding

- Let the engine cool.
- Open the hood, refer to page 286.
- Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.

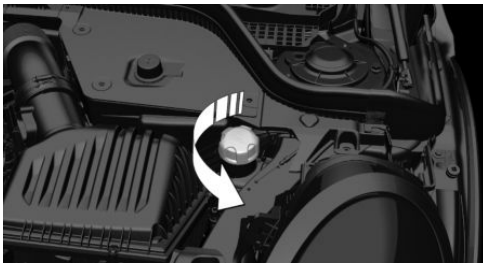

- Open the coolant reservoir lid.
- If the coolant is low, slowly add coolant up to the specified level; do not overfill.
- Close the lid.
- Have the cause of the coolant loss eliminated as soon as possible.

Disposal



Comply with the relevant environmental protection regulations when disposing of coolant and coolant additives.

Maintenance

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

MINI maintenance system

The maintenance system indicates required maintenance measures, and thereby provides support in maintaining road safety and the operational reliability of the vehicle.

In some cases, scopes and intervals of the maintenance system may vary according to the country version. Replacement work, spare parts, fuels and lubricants, and wear materials are calculated separately. Further information is available from a dealer's service center or another qualified service center or repair shop.

Condition Based Service CBS

Concept

Sensors and special algorithms take into account the driving conditions of the vehicle. CBS uses these to calculate the need for maintenance.

The system makes it possible to adapt the amount of maintenance corresponding to your user profile.

General information

Information on service requirements, refer to page 150, can be displayed on the Control Display.

Service data in the vehicle key

Information on the required maintenance is continuously stored in the vehicle key. The dealer's service center can read this data out and suggest an optimized maintenance scope for the vehicle.

Therefore, hand the service advisor the vehicle key with which the vehicle was driven most recently.

Storage periods

Storage periods during which the vehicle battery was disconnected are not taken into account.

If this occurs, have a dealer's service center or another qualified service center or repair shop update the time-dependent maintenance procedures, such as checking brake fluid and, if necessary, changing the engine oil and the microfilter/activated-charcoal filter.

Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models

Please consult your Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models for additional information on service requirements.

The manufacturer of your vehicle recommends that maintenance and repair be performed by a service center or another qualified service center or repair shop. Records of regular maintenance and repair work should be retained.

Socket for OBD Onboard Diagnosis

General information


Devices connected to the OBD socket trigger the alarm system when the vehicle is locked. Remove any devices connected at the OBD socket before locking the vehicle.

Safety information

NOTICE

The socket for Onboard Diagnosis is an intricate component intended to be used in conjunction with specialized equipment to check the vehicle's primary emissions system. Improper use of the socket for Onboard Diagnosis, or contact with the socket for Onboard Diagnosis for other than its intended purpose, can cause vehicle malfunctions and creates risks of personal and property damage. Given the foregoing, the manufacture of your vehicle strongly recommends that access to the socket for Onboard Diagnosis be limited to a dealer's service center or another qualified service center or repair shop or other persons that have the specialized training and equipment for purposes of properly utilizing the socket for Onboard Diagnosis.

Position

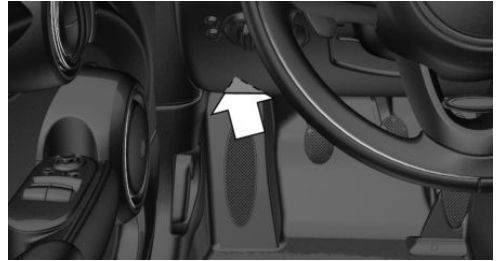

There is an OBD socket on the driver's side for checking the primary components in the vehicle's emissions.

Emissions




- The warning light lights up:
Emissions are deteriorating.
Have the vehicle checked as soon as possible.
- The warning light flashes under certain circumstances:
This indicates that there is excessive misfiring in the engine.
Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

Replacing components

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Vehicle tool kit

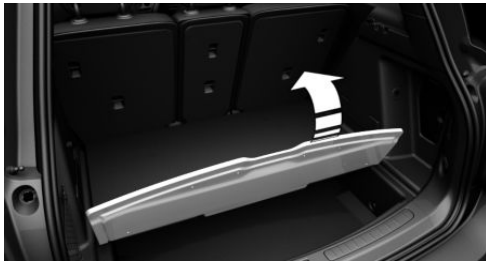

The bag containing the onboard vehicle tool kit is located beneath the cargo floor panel.

After use, secure the bag with the onboard vehicle tool kit on a lashing eye again.

Wiper blades

Safety information

⚠ NOTICE

The window may sustain damage if the wiper falls onto it without the wiper blade installed. There is a risk of damage to property. Hold the wiper firmly when


changing the wiper blade. Do not fold or switch on the wiper without a wiper blade installed.

⚠ NOTICE

Folded-away wipers can be jammed when the hood is opened. There is a risk of damage to property. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

Replacing the front wiper blades


1. To change the wiper blades, fold up the wiper arms.
2. Fold up and hold the wiper arm firmly.
3. Press the button, arrow 1, and swing out the wiper blade, arrow 2.

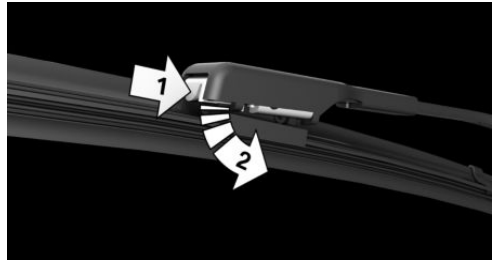

4. Attach a new wiper blade. The wiper blade must engage audibly.
5. Fold down the wiper arm.

Rear wiper blade

1. Fold up and hold the wiper arm firmly.
2. Pull the wiper blade out of the wiper arm.

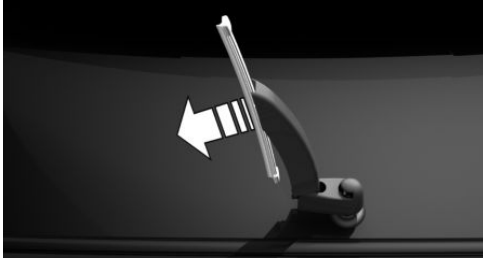

3. Attach a new wiper blade. The wiper blade must engage audibly.
4. Fold down the wiper arm.

Light and bulb replacement

General information

Lights and bulbs

Lights and bulbs make an essential contribution to vehicle safety.

The manufacturer of the vehicle recommends that you have appropriate work performed by a dealer's service center or another qualified service center or repair shop if you are unfamiliar with it or if it has not been described here.

A spare light box is available from a dealer's service center or another qualified service center or repair shop.

Follow the safety information, refer to page 297.

Light-emitting diodes (LEDs)

Some items of equipment use light-emitting diodes installed behind a cover as a light source. These light-emitting diodes are related to conventional lasers and are offi-

cially designated as Class 1 light-emitting diodes.

Follow the safety information, refer to page 297.

Safety information

Lights and bulbs

Warning

Bulbs can get hot during operation. Contact with the bulbs can cause burns. There is a risk of injury. Only change bulbs after they have cooled off.

Warning

Work on switched-on lighting systems can cause short circuits. There is a risk of injury or risk of damage to property. When working on the lighting system, switch off the lights in question. If necessary, heed the bulb manufacturer's instructions.

NOTICE

Dirty bulbs have a reduced service life. There is a risk of damage to property. Do not hold new bulbs with your bare hands. Use a clean cloth or something similar, or hold the bulb by its base.

Light-emitting diodes (LEDs)

Warning

Intensive brightness can irritate or damage the retina of the eye. There is a risk of injury. Do not look directly into the headlights or other light sources. Do not remove the LED covers.

Headlight glass

Condensation can form on the inside of the headlight glass in cool or humid weather. When driving with the lights switched on, the condensation evaporates after a short time. The headlight glass does not need to be changed.

If despite driving with the headlights switched on, increasing humidity forms, for instance water droplets in the light, have the headlights checked.


Headlight setting

The headlight adjustments can be affected by changing lights and bulbs. After the headlight adjustment was changed, have it checked and, if necessary, corrected by a dealer's service center or another qualified service center or repair shop.

Front halogen lights, bulb replacement

Overview

Halogen headlights

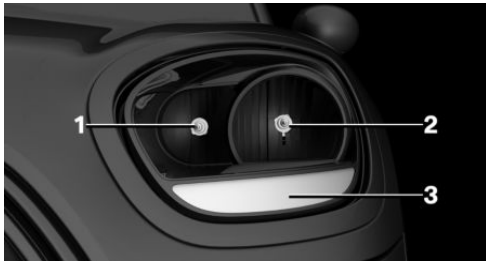

- 1 High beams
- 2 Low beams
- 3 Turn signal

High beams


Follow the general instructions on lights and bulbs, refer to page 297.

55-watt bulb, H7.

1. Open the hood, refer to page 286.
2. Turn the lid counterclockwise and remove.



3. Tilt the bulb holder up, arrow 1, and pull it out of the headlight toward the rear, arrow 2.

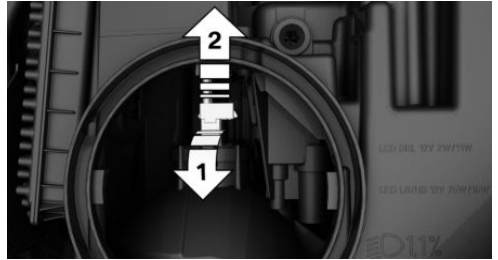

4. Pull the bulb out of the bulb holder.
5. Install the new bulb with the bulb holder in reverse order of removal. In doing so, ensure that the bulb tab is correctly positioned in the headlight housing and the bulb holder perceptibly engages.
6. Check the position of the bulb through the headlight glass.
7. Close the headlight housing with the lid. Make sure that the lid engages.

Low beams


Follow the general instructions on lights and bulbs, refer to page 297.

55-watt bulb, H7.

1. Turn the steering wheel.
2. – On the left facing the driving direction: turn the cover clockwise and remove it.
– On the right facing the driving direction: turn the cover counterclockwise and remove it.



3. Unscrew the inner cover counterclockwise, and remove it.

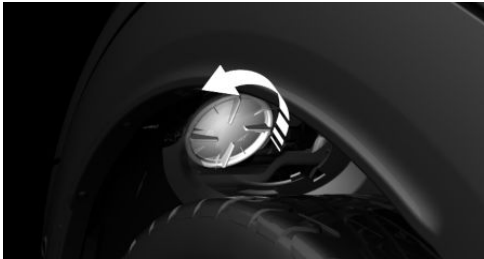

4. Tilt the bulb holder down, arrow 1, and pull it downward out of the headlight, arrow 2.



5. Pull the bulb out of the bulb holder.

6. Install the new bulb with the bulb holder in reverse order of removal. In doing so, ensure that the bulb tab is correctly positioned in the headlight housing and the bulb holder perceptibly engages.
7. Check the position of the bulb through the headlight glass.
8. Install the covers. Make sure that the covers engage.

Turn signal

Follow the general instructions on lights and bulbs, refer to page 297.

24-watt bulb, PWY24W.

1. Turn the steering wheel.
2. – On the left facing the driving direction: turn the cover clockwise and remove it.
– On the right facing the driving direction: turn the cover counterclockwise and remove it.



3. Unscrew the inner cover counterclockwise, and remove it.



- Turn the bulb holder counterclockwise, arrow 1, and remove, arrow 2.



- Press the bulb gently into the bulb holder, turn counterclockwise and remove.
- Insert the new bulb and install the covers in the reverse order. Make sure that the covers engage.

LED front lights, bulb replacement

General information


The following lights feature LED technology:

- Daytime running lights
- High beams
- Low beams
- Cornering light
- Parking lights
- Fog lights

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.


Overview

Position of the headlights

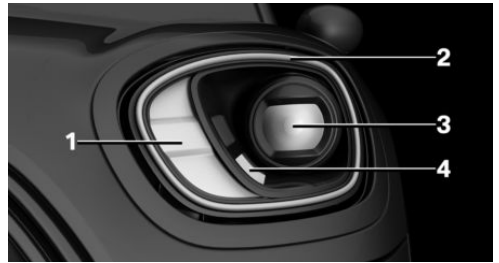

- Turn signal
- Daytime running lights
- Low beams/high beams
- Cornering light

LED bug light

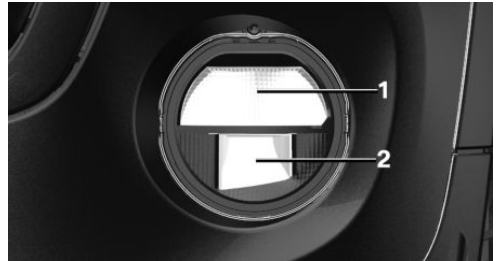


- Parking lights
- Fog lights

Turn signal

Follow the general instructions on lights and bulbs, refer to page [297](#).

24-watt bulb, PWY24W.

1. Open the hood, refer to page 286.
2. Turn the lid counterclockwise and remove.

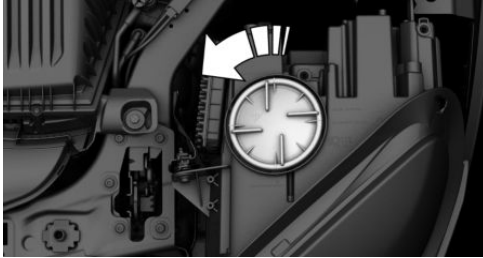

3. Turn the bulb holder counterclockwise, arrow 1, and remove, arrow 2.




4. Press the bulb gently into the bulb holder, turn counterclockwise and remove.
5. Insert the new bulb and install the cover in the reverse order.

LED front fog lights

These front fog lights are made using LED technology. In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.


Tail lights, bulb replacement

Overview

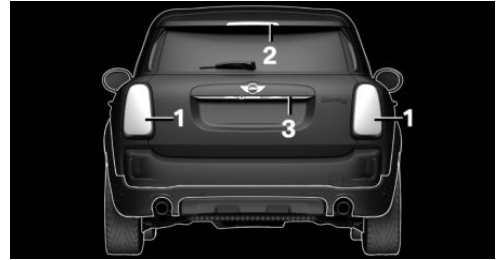

- 1 Side tail lights
- 2 Center brake light
- 3 License plate light

Side tail lights

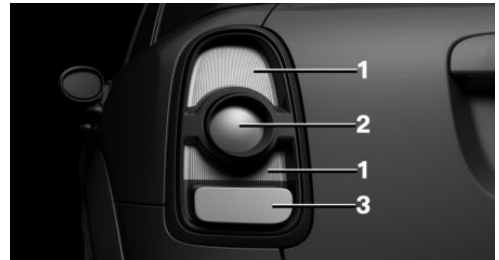

- 1 Brake lights/tail lights
- 2 Turn signal
- 3 Reversing lights

Side LED tail lights



- 1 Brake light
- 2 Tail lights
- 3 Turn signal
- 4 Reversing lights

Side tail lights


Follow the general instructions on lights and bulbs, refer to page 297.

- Bulb, brake lights/rear lights, tail lights: P21W.
 - Bulb, brake lights/LED tail lights: H21W.
 - Bulb, turn signals: P21W.
 - Bulb, reversing lights: P21W.
1. Open the tailgate.
 2. Remove left or right cover.




3. Through the opening, loosen the plug connector, arrow 2 on the bulb holder.

Press the latches together, arrows 1, and remove the bulb holder.

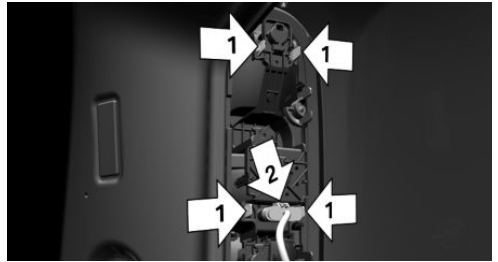

4. Remove the bulb holder from the opening.
5. Press the nonworking bulb gently into the socket, turn counterclockwise and remove.
 - Arrow 1: brake lights/tail lights
 - Arrow 2: turn signal
 - Arrow 3: reversing light

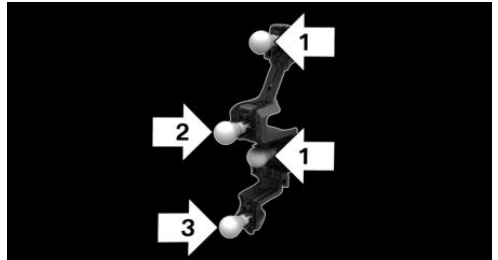

6. Proceed in the reverse order to insert the new bulb and attach the bulb holder. Make sure that the bulb holder engages in all fasteners.

Central brake light and license plate lights

Follow the general instructions on lights and bulbs, refer to page 297.

The lights feature LED technology. In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

Side turn signal, bulb replacement

Follow the general instructions on lights and bulbs, refer to page 297.

Bulb: WY5W.

1. Push the side turn signal forward in the driving direction, arrow 1, and swing it outward, arrow 2.



2.
 - On the left facing the driving direction: turn the bulb holder clockwise and remove.
 - On the right facing the driving direction: turn the bulb holder counter-clockwise and remove.
3. Replace the bulb.
4. Insert the bulb holder.
5. Insert the rear side turn signal, arrow 1, and swing it forward, arrow 2.



Vehicle battery

General information

The battery is maintenance-free.

More information about the battery can be requested from a dealer's service center or another qualified service center or repair shop.

Safety information

Warning

Vehicle batteries that are not compatible can damage vehicle systems and impair vehicle functions. There is a risk of an accident and damage to property. Only vehicle batteries that are compatible with your vehicle type should be installed in your vehicle. Information on compatible vehicle batteries is available at your dealer's service center.

Register the battery to the vehicle

The manufacturer of the vehicle recommends that you have a service center or another qualified service center or repair shop register the vehicle battery to the vehicle after the battery has been replaced. Once the battery has been registered again, all comfort features will be available without restriction and any Check Control messages displayed which relate to comfort features will disappear.

Charging the battery

General information

Make sure that the battery is always sufficiently charged to guarantee that the battery remains usable for its full service life.



A discharged battery is indicated by a red indicator light.

Charge the battery in the following situations:

- When the inspection glass on the top of the battery is black.
- When the take-off performance is insufficient.

The following circumstances can have a negative effect on the performance of the battery:

- Frequent short-distance drives.
- The vehicle is not used for more than a month.

Safety information

NOTICE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of damage to property. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.

Charging the battery

Charge the battery only when the engine is off and via the starting aid terminals, refer to page 309, in the engine compartment.

Power failure

After a power loss, some equipment needs to be newly initialized or individual settings updated, for example:

- Memory function: store the positions again.
- Time: update.
- Date: update.
- Glass sunroof: initialize the system.

Disposing of old batteries



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop or take them to a collection point.

Maintain the filled battery in an upright position for transport and storage. Secure the battery so that it does not tip over during transport.

Fuses

Safety information

Warning

Incorrect and repaired fuses can overload electrical lines and components. There is a risk of fire. Never attempt to repair a blown fuse. Do not replace a nonworking fuse with a substitute of another color or amperage rating.

Accessing the fuses

The fuses are located in the glove compartment.

1. Open the glove compartment.
2. Swing the cover down, arrow.



Information on the fuse types and locations, as well as the positions of any other fuse

boxes, is available on the Internet:
www.mini.com/fusecard.

Where applicable, information on the fuse types and locations is also found on a separate sheet in the fuse box.

Replacing fuses

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop replace the fuses.

Breakdown assistance

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Hazard warning flashers



The button is located above the Control Display.

The red light in the button flashes when the hazard warning flashers are activated.

Warning triangle



The warning triangle is located in the tailgate. To remove, loosen the brackets.

First-aid kit

General information

Some of the articles have a limited service life.

Check the expiration dates of the contents regularly and replace any expired items promptly.

Storage

The first-aid kit is located in the cargo area.

MINI Roadside Assistance

Concept

MINI Roadside Assistance can be contacted if assistance is needed in the event of a breakdown.

General information

In the event of a breakdown, data on the vehicle's condition is sent to the vehicle manufacturer.

There are various ways of making contact.

- Via a Check Control message, refer to page 144.
- Calling with a mobile phone.


Requirements

- Active MINI Connected contract or equipment version with intelligent emergency call.
- Cellular network reception.
- The ignition is switched on.

Starting

If the vehicle is equipped with Teleservices, support is offered through Teleservice Diagnosis.

Via the Central Information Display (CID):

1.  "MINI Connected"
2. "MINI Assist"
3. "MINI Roadside Assistance"

The contact to the Roadside Assistance of the manufacture is established.

A telephone number is displayed, if needed. Select to dial the telephone number on a connected mobile phone.

Teleservice Diagnosis

Teleservice Diagnosis enables the wireless transmission of detailed vehicle data that is important for vehicle diagnosis. This data is transmitted automatically.

Teleservice Help

Depending on the country, the Teleservice Help enables a more in-depth diagnosis of the vehicle via wireless transmission.

You can launch Teleservice Help by requesting it through the Service Specialist.

1. Park the vehicle in a safe place.
2. Set the parking brake.
3. Control Display is switched on.
4. "Teleservice Help"

The driving ability of the vehicle can be restored for specific functions.

If this is not possible, further measures will be initiated, for instance Roadside Assistance will be informed.

Emergency Request

Intelligent emergency call

Concept

In case of an emergency, an Emergency Request can be triggered automatically by the system or manually.

General information

Only press the SOS button in an emergency. The Intelligent Assist system establishes a connection with the MINI Response Center. For technical reasons, the Emergency Request cannot be guaranteed under unfavorable conditions.

Overview



SOS button in the roofliner

Functional requirements

- Standby state is switched on.
- The Assist system is functional.
- If the vehicle is equipped with intelligent emergency call: the SIM card integrated in the vehicle has been activated.

Automatic triggering

Under certain conditions, for instance if the airbags trigger, an Emergency Request is automatically initiated immediately after an accident of corresponding severity. Automatic Collision Notification is not affected by pressing the SOS button.

Manual triggering

1. Press the cover briefly to open it.
 2. Press the SOS button until the LED at the button lights up green.
- The LED is illuminated green when an Emergency Request has been initiated. If the situation allows, wait in your vehicle until the voice connection has been established.
 - The LED flashes green when a connection to the MINI Response Center has been established.

The MINI Response Center then makes contact with you and takes further steps to help you.

Even if you are unable to respond, the MINI Response Center can take further steps to help you under certain circumstances.

For this, data is transmitted to the MINI Response Center which serve to determine the necessary rescue measures. For instance, the current position of the vehicle, if it can be established.

If you can no longer hear the MINI Response Center through the loudspeakers, the hands-free system, for instance, may be broken. However, the MINI Response Center may still be able to hear you.

The MINI Response Center ends the Emergency Request.

Jump-starting

General information

If the battery is discharged, the engine can be started using the battery of another vehicle and two jumper cables. Only use jumper cables with fully insulated clamp handles.

Vehicles with hybrid drive cannot be used for jump-starting.

Safety information

DANGER

Contact with live components can lead to an electric shock. There is a risk of injuries or danger to life. Do not touch any components that are under voltage.

⚠ Warning


If the jumper cables are connected in the incorrect order, sparking may occur. There is a risk of injury. Pay attention to the correct order during connection.

⚠ NOTICE

In the case of body contact between the two vehicles, a short circuit can occur during jump-starting. There is a risk of damage to property. Make sure that no body contact occurs.


Preparation

1. Check whether the battery of the other vehicle has a voltage of 12 volts. The voltage information can be found on the battery.
2. Switch off the engine of the assisting vehicle.
3. Switch off any electronic systems/power consumers in both vehicles.

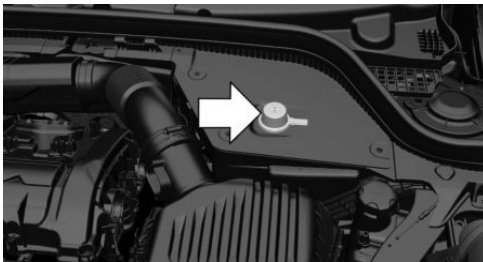Starting aid terminals

The starting aid terminal in the engine compartment acts as the battery's positive terminal.

Open the cover of the starting aid terminal.

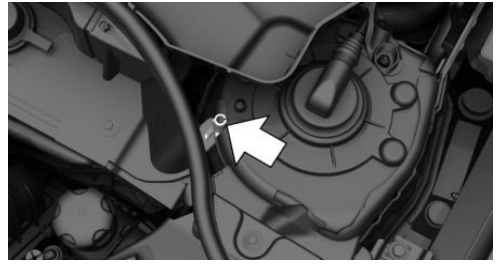

A special connection on the body acts as the battery negative terminal.

Connecting the cables

To prevent personal injury or damage to both vehicles, adhere strictly to the following procedure.

1. Pull off the lid of the starting aid terminal.
2. Attach one terminal clamp of the positive jumper cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle providing assistance.
3. Attach the terminal clamp on the other end of the cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle to be started.
4. Attach one terminal clamp of the negative jumper cable to the negative terminal of the battery, or to the corresponding engine or body ground of assisting vehicle.
5. Attach the second terminal clamp to the negative terminal of the battery, or to the corresponding engine or body ground of the vehicle to be started.

Establishing drive-ready state

1. Start the engine of the assisting vehicle and let it run for several minutes at an increased idle speed.

- Establish the drive-ready state for the vehicle to be started as usual.

If the first starting attempt is not successful, wait a few minutes before making another attempt in order to allow the discharged battery to recharge.

- Disconnect the jumper cables in the reverse order.

Check the battery and recharge, if needed.

Tow-starting and towing

Transporting the vehicle

General information

The vehicle is not permitted to be towed.

Safety information

NOTICE


The vehicle can be damaged when towing the vehicle with a single lifted axle. There is a risk of damage to property. The vehicle should only be transported on a loading platform.

Pushing the vehicle

To remove a broken-down vehicle from the danger area, push it for a short distance at a speed of no more than 6 mph/10 km/h.

For rolling or pushing the vehicle, refer to page 137.

Tow truck

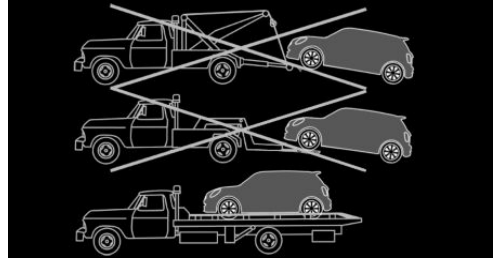

The vehicle should only be transported on a loading platform.

NOTICE

The vehicle can become damaged when lifting and securing it.

There is a risk of damage to property.

- Lift the vehicle using suitable means.
- Do not lift or secure the vehicle by its tow fitting, body parts, or suspension parts.

Towing other vehicles

General information

Switch on the hazard warning system, depending on local regulations.

If the electrical system has failed, clearly identify the vehicle being towed by placing a sign or a warning triangle in the rear window.

Safety information

Warning

If the approved gross vehicle weight of the towing vehicle is lighter than the vehicle to be towed, the tow fitting can tear off or it will not be possible to control the vehicle's response. There is a risk of accident. Make sure that the gross vehicle weight of

the towing vehicle is heavier than the vehicle to be towed.

NOTICE

If the tow bar or tow rope is attached incorrectly, damage to other vehicle parts can occur. There is a risk of damage to property. Correctly attach the tow bar or tow rope to the tow fitting.

Tow bar

The tow fittings used should be on the same side on both vehicles.

Should it prove impossible to avoid mounting the tow bar at an offset angle, please follow the following:

- Maneuvering capability is limited going around corners.
- The tow bar will generate lateral forces if it is secured with an offset.


Tow rope

When starting to tow the vehicle, make sure that the tow rope is taut.

Use nylon ropes or straps, which will enable the vehicle to be towed without jerking.

Tow fitting

General information

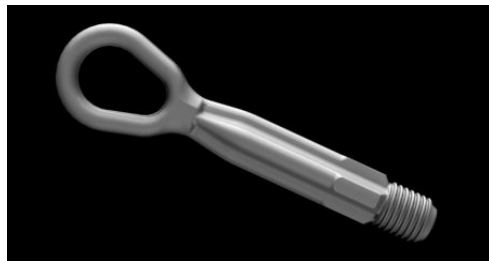

The screw-in tow fitting should always be carried in the vehicle.

The tow fitting can be screwed in at the front or rear of the vehicle.

The tow fitting and the onboard vehicle tool kit, refer to page 296, are together in the cargo area.

Use of the tow fitting:

- Use only the tow fitting provided with the vehicle and screw it all the way in.
- Use the tow fitting for towing on paved roads only.
- Avoid lateral loading of the tow fitting, for instance do not lift the vehicle by the tow fitting.

Safety information

NOTICE

If the tow fitting is not used as intended, there may be damage to the vehicle or to the tow fitting. There is a risk of damage to property. Follow the notes on using the tow fitting.

Screw thread for tow fitting



Threaded holes for the tow fitting are located in the front and rear of the vehicle on the right side with respect to the direction of travel.

Press on the mark on the edge of the cover to push it out.

Tow-starting

Steptronic transmission

Do not tow-start the vehicle.

Tow-starting the engine is not possible due to the Steptronic transmission.

Have the reasons for the starting difficulties corrected by a dealer's service center or another qualified service center or repair shop.

- Engage selector lever position P, set the parking brake, and switch off the ignition and drive-ready state.
- Lock the vehicle after exiting.
- Do not inhale any gases escaping from the high-voltage battery; if needed, maintain a safe distance from the vehicle.

What to do after an accident

Safety information

Warning

Contact with live components can lead to an electric shock. There is a risk of injuries or danger to life. After an accident, do not touch any high-voltage components such as orange colored high-voltage cables or parts that are in contact with exposed high-voltage cables.

Warning

Fluids in the high-voltage battery are corrosive. There is a risk of injury. Do not touch fluids escaping from the high-voltage battery.

General information

After an accident, comply with the following safety precautions with regard to the high-voltage system:

- Secure the crash site.
- Immediately notify rescue forces, police, or firefighters of the fact that your vehicle is equipped with a high-voltage system.

Care

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

Washing the vehicle

General information

Regularly remove foreign objects such as leaves in the area below the windshield when the hood is raised.

Wash your vehicle frequently, particularly in winter. Intense soiling and road salt can damage the vehicle.

Safety information

Warning

Contact with live components can lead to an electric shock. High voltage is present at the charging connection. There is a risk of injury or danger to life.

The manufacturer of your vehicle recommends that work on the charging connection, for instance cleaning, be performed by a dealer's service center or another qualified service center or repair shop.

NOTICE

When washing, water can get into the open charging socket. There is a risk of damage to property. Close the charging socket flap while washing.

Steam jets or high-pressure washers

Safety information

NOTICE

When cleaning with high-pressure washers, components can be damaged due to the pressure or temperatures being too high. There is a risk of damage to property. Maintain sufficient distance and do not spray too long continuously. Follow the operating instructions for the high-pressure washer.

Distances and temperature

- Maximum temperature: 140 °F/60 °C.
- Minimum distance from sensors, cameras, seals: 12 inches/30 cm.
- Minimum distance from glass sunroof: 31.5 in/80 cm.

Automatic vehicle washes

Safety information

NOTICE

Improper use of automatic vehicle washes can cause damage to the vehicle. There is a risk of damage to property. Follow the following instructions:

- Give preference to cloth vehicle washes or those that use soft brushes in order to avoid paint damage.
- Avoid vehicle washes with guide rails higher than 4 in/10 cm to avoid damage to the chassis.
- Observe the tire width of the guide rail to avoid damage to tires and rims.
- Fold in exterior mirrors to avoid damage to the exterior mirrors.
- With rod antenna: unscrew the rod antenna to avoid rod antenna breakage.
- Deactivate the wiper and, if necessary, rain sensor to avoid damage to the wiper system.

Driving into a vehicle wash with a Stronic transmission

In vehicle washes, the vehicle must be able to roll freely.

Rolling or pushing the vehicle, refer to page 137.

Some vehicle washes do not permit persons in the vehicle. The vehicle cannot be locked from the outside when in selector lever position N. A signal is sounded when an attempt is made to lock the vehicle.

Driving out of a vehicle wash

Ensure that the vehicle key is in the car.

For activating drive-ready state, refer to page 119.

Headlights

Do not rub wet headlights dry and do not use abrasive or acidic cleaning agents.

Soak areas that have been dirtied, for instance from insects, with shampoo and wash off with water.

Thaw ice with de-icing spray; do not use an ice scraper.

After washing the vehicle

After washing the vehicle, apply the brakes briefly to dry them; otherwise, braking action can be reduced. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

Completely remove all residues on the windows, to minimize loss of visibility due to smearing and to reduce wiper noises and wiper blade wear.

Vehicle care

Vehicle care products

General information

MINI recommends using vehicle care and cleaning products from MINI. Suitable care products are available from a dealer's service center or another qualified service center or repair shop.

Safety information

Warning

Cleansers can contain substances that are dangerous and harmful to your health. There is a risk of injury. When cleaning the interior, open the doors or windows.

Only use products intended for cleaning vehicles. Follow the instructions on the container.

Vehicle paint

General information

Regular care contributes to driving safety and value retention. Environmental influences in areas with elevated air pollution or natural contaminants, such as tree resin or pollen can affect the vehicle's paintwork. Tailor the frequency and extent of your vehicle care to these influences.

Aggressive substances such as spilled fuel, oil, grease or bird droppings, must be removed immediately to prevent the finish from being altered or discolored.

Matte finish

Only use cleaning and care products suitable for vehicles with matte finish.

Leather care

Remove dust from the leather regularly, using a cloth or vacuum cleaner.

Otherwise, particles of dust and road grime chafe in pores and folds, and lead to increased wear and premature degradation of the leather surface.

To guard against discoloration, such as from clothing, clean leather and provide leather care roughly every two months.

Clean light-colored leather more frequently because soiling on such surfaces is substantially more visible.

Use leather care products; otherwise, dirt and grease will gradually break down the protective layer of the leather surface.

Upholstery material care

General information

Vacuum the upholstery regularly with a vacuum cleaner.

If upholstery is very dirty, for instance with beverage stains, use a soft sponge or micro-fiber cloth with a suitable interior cleaner.

Clean the upholstery down to the seams using large sweeping motions. Avoid rubbing the material vigorously.

Safety information

NOTICE

Open Velcro® fasteners on articles of clothing can damage the seat covers. There is a risk of damage to property. Ensure that any Velcro® fasteners are closed.

Caring for special components

Light-alloy wheels

When cleaning the vehicle, use only neutral wheel cleaners having a pH value from 5 to 9. Do not use abrasive cleaning agents or steam jets above 140 °F/60 °C. Follow the manufacturer's instructions.

Aggressive, acidic or alkaline cleaning agents can destroy the protective layer of adjacent components, such as the brake disc.

After cleaning, apply the brakes briefly to dry them. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

Chrome surfaces

Carefully clean components such as the radiator grille or door handles with plenty of water, possibly with shampoo added, partic-

ularly when they have been exposed to road salt.

Rubber components

Environmental influences can cause surface soiling of rubber parts and a loss of gloss. Use only water and suitable cleaning agents for cleaning.

Treat especially worn rubber parts with rubber care agents at regular intervals. When cleaning rubber seals, do not use any silicon-containing vehicle care products in order to avoid damage or noises.

Fine wood parts

Clean fine wood facing and fine wood components only with a moist rag. Then dry with a soft cloth.

Plastic components

NOTICE

Cleansers that contain alcohol or solvents, such as lacquer thinners, heavy-duty grease removers, fuel, or such, can damage plastic parts. There is a risk of damage to property. Clean with a microfiber cloth. Dampen the cloth lightly with water, if needed.

Clean with a microfiber cloth.

Dampen the cloth lightly with water, if needed.

Do not soak the roofliner.

Safety belts

Warning

Chemical cleansers can destroy the safety belt webbing. Missing protective effect of the safety belts. There is a risk of injuries or danger to life. Use only a mild soapy solution for cleaning the safety belts.

Dirty belt straps impede the reeling action and thus have a negative impact on safety.

Use only a mild soapy solution, with the safety belts clipped into their buckles.

Safety belts should only be allowed to retract if they are dry.

Carpets and floor mats

Warning

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, for instance for cleaning.

Floor mats can be removed from the car's interior for cleaning.

If the floor carpets are very dirty, clean with a microfiber cloth and water or a textile cleaner. To prevent matting of the carpet, rub back and forth in the direction of travel only.

Sensor/camera lenses

To clean sensors and camera lenses, use a cloth moistened with a small amount of glass detergent.

Displays/Screens/Projection lenses

NOTICE

Chemical cleansers, moisture or fluids of any kind can damage the surface of displays and screens. There is a risk of damage to property. Clean with a clean, anti-static microfiber cloth.

NOTICE

The surface of displays can be damaged with improper cleaning. There is a risk of damage to property. Avoid pressure that is too high and do not use any scratching materials.

Clean with a clean, antistatic microfiber cloth.

For stubborn soiling on the projection lens of the Head-up Display, dampen the microfiber cloth with alcohol. Projection lens, refer to page [158](#).

Long idle times and long-term vehicle storage

Concept

For idle phases that last several weeks, park the vehicle with the high-voltage battery fully charged, if possible.

Do not park the vehicle for longer than 14 days if the electric range is exhausted.

With storage times of up to three months, if possible plug the vehicle into a compatible power source or park it with the high-voltage battery as fully charged as possible.

General information

Your dealer's service center or another qualified service center or repair shop can advise you on what to consider when storing the vehicle for longer than three months.

Safety information

NOTICE

The high-voltage battery can be damaged by excessive discharge. There is a risk of damage to property. Before storing the vehicle for an extended period, ensure that the high-voltage battery is fully charged. During the idle period, connect the vehicle to a charging station at a compatible charging location. If necessary, the high-voltage battery will be charged automatically. Make sure that charging is carried out. Regularly check the charge state.

Do not allow the vehicle to sit idle for longer than three months with a charge state below approx. 50 %.



Q REFERENCE

Technical data	320
Appendix	322
Everything from A to Z	324

Technical data

Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for

instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

General information

The technical data and specifications in the Owner's Manual are used as guidance values. The vehicle-specific data can deviate from this, for instance due to the selected special equipment, country version or country-specific measurement method. Detailed

values can be found in the approval documents, on labels on the vehicle or can be obtained from a dealer's service center or another qualified service center or repair shop.

Dimensions

The dimensions can vary depending on the model version, equipment or country-specific measurement method.

The specified heights do not take into account attached parts, for instance a roof an-

tenna, roof racks or spoiler. The heights can deviate, for instance due to the selected special equipment, tires, load and chassis version.

MINI Countryman

Width with mirrors	in/mm	78.9/2,005
Width without mirrors	in/mm	71.7/1,822
Height	in/mm	61.4/1,559
Length	in/mm	169.8/4,314
Wheelbase	in/mm	105.1/2,670
Smallest turning radius diam.	ft/m	37.4/11.4

Weights

MINI Cooper SE Countryman		
Approved gross vehicle weight	lbs/kg	5,016/2,275
Load	lbs/kg	988/448
Approved front axle load	lbs/kg	2,458/1,115
Approved rear axle load	lbs/kg	2,679/1,215

Capacities

MINI Countryman		
Fuel tank, approx.	US gal/liters	9.5/36.0

Observe further information on fuel quality, refer to page [266](#).

Appendix

Any updates to the Owner's Manual of the vehicle are listed here.

Updates made after the editorial deadline

The following chapters were updated in the printed version of the Owner's Manual after the editorial deadline for the Integrated Owner's Manual in the vehicle had closed:

- Climate: Stationary climate control.
- Replacing components: Light and bulb replacement: Front halogen lights, bulb replacement.

Everything from A to Z

Index

A

A/C button, see Air conditioning 217
 ABS, Antilock Brake System 189
 Accessories and parts 10
 Accident, what to do 312
 ACC, see Camera-based cruise control 193
 Acoustic pedestrian protection 124
 AC quick charging cable, see Level 2 charging cable 256
 Activated-charcoal filter 219
 Activating, drive-ready state 120
 Active Cruise Control, see Camera-based cruise control 193
 Active Guard, see Intelligent Safety 180
 Adapting to the course of the road, hybrid system 143
 Adaptive brake lights, see Brake force display 187
 Additives, engine oil types 290
 Adjustments, steering wheel 111
 Advance climate control, see Stationary climate control 220
 After washing vehicle 314
 Airbags 169
 Airbags, indicator and warning light 171
 Air circulation, see Recirculated-air mode 214, 218
 Air conditioner 213
 Air conditioning 214, 217
 Air distribution, manual 215, 219
 Air flow, air conditioner 215
 Air flow, automatic climate control 218
 Air pressure, tires 268
 Air vents, see Ventilation 219
 Alarm system 93
 Alarm triggering 93
 Alarm, unintentional 94
 All-season tires, see Winter tires 274
 Amazon Alexa Car Integration 53

Antifreeze, washer fluid 135
 Antilock Brake System, ABS 189
 Anti-slip control, see DSC 189
 Anti-theft protection, lug bolts 282
 Approach control warning with city light braking function 181
 Approved axle load 321
 Apps, see Owner's Handbook for Navigation, Entertainment, Communication 8
 Arrival time 155
 Artificial engine noise, see Acoustic pedestrian protection 124
 Ash tray 227
 Assistance for the combustion engine 125
 Assistance when driving off 192
 AUTO intensity 218
 Automatic climate control 216
 Automatic Curb Monitor 110
 Automatic deactivation, front-seat passenger airbags 171
 Automatic headlight control 164
 Automatic locking 92
 Automatic recirculated-air control 218
 Automatic transmission with Steptronic 136
 Automatic unlocking 92
 Automatic vehicle wash 314
 AUTO program, automatic climate control 217
 AUTO program, intensity 218
 Auto Start/Stop function 121
 Auto washing 313
 Average consumption 154
 Average speed 155
 Axle loads, weights 321

B

Backrest curvature, see Lumbar support 101, 102

Backrest, seats 100
Band-aids, see First-aid kit 306
Battery, disposing of 304
Battery, vehicle 303
Being towed, see Tow-starting and towing 310
Belts, safety belts 104
Beverage holder, cup holder 231
Blocking, power window 96
Bluetooth connection 60
Bottle holder, see Cup holder 231
Brake assistant 189
Brake discs, break-in 242
Brake force display 187
Brake lights, brake force display 187
Brake pads, break-in 242
Braking, information 244
Breakdown assistance 306
Break-in 242
Break recommendation, see Fatigue alert 187
Brightness of Control Display 57
Bulb replacement 297
Bulb replacement, front 298, 300
Bulb replacement, rear 301
Bulb replacement, side 303
Bulbs and lights 297
Button, SOS 307
Button, Start/Stop 118
Bypassing, see Jump-starting 308

C

Calendar, see Owner's Handbook for Navigation, Entertainment, Communication 8
California Proposition 65 Warning 11
Calling up mirror adjustment 92
Calling up seat adjustment 92
Camera-based assistance systems, see Intelligent Safety 180
Camera-based cruise control 193
Camera lenses, care 317
Camera, rearview camera 206
Can holder, see Cup holder 231
Care, displays 317
Care, vehicle 314

Care, washing the vehicle 313
Cargo area 233
Cargo area, adapting size 237
Cargo area, enlarging 236
Cargo area lid 86
Cargo area, loading 234
Cargo area, seating surface 238
Cargo area, storage compartments 235
Cargo cover 234
Cargo, stowing and securing 234
Cargo straps 234
Carpet, care 316
Catalytic converter, see Hot exhaust gas system 243
CBS Condition Based Service 294
Center armrest 231
Center console 42
Central Information Display (CID) 44
Central instrument cluster, LED ring 157
Central locking system, unlocking, from inside 81
Central screen, see Control Display 46
Changes, technical, see For Your Own Safety 10
Changing parts 296
Changing wheels 280
Changing wheels/tires 273
CHARGE, energy recovery 125
Charge state indicator, high-voltage battery 154
Charging battery, see Vehicle charging 254
Charging cable storage 257
Charging cable, unlocking manually 258
Charging screen 141
Charging, see Charging the vehicle 254
Charging, see Vehicle charging 254
Charging status, see Display of the charging status 259
Charging the vehicle 254
Charging the vehicle, see Vehicle charging 254
Chassis number, see Vehicle identification number 15
Check Control 144
Checking the oil level electronically 288
Children, seating position 112

Children, transporting safely 112
 Child restraint system 112
 Child restraint system LATCH 114
 Child restraint systems, mounting 113
 Child safety locks 117
 Child seat, mounting 113
 Child seats 112
 Chrome parts, care 315
 Cigarette lighter 227
 Cleaning, displays 317
 Climate control 213, 216
 Clothes hooks 232
 Coasting 124
 Combination switch, see Turn signals 127
 Combi switch, see Wiper system 128, 131
 Comfort Access 82
 Compartments in the doors 231
 Compass 225
 Compatible devices, see Suitable devices 60
 Compressor 275
 Computer, see Onboard Computer 153
 Condensation on windows 219
 Condensation under the vehicle 245
 Condition Based Service CBS 294
 Configuring driving program 192
 Confirmation signal 93
 Connecting device 59
 Connecting mobile phone 59
 Connecting smartphone 59
 Connecting telephone 59
 Connections 59
 Consumption, see Average consumption 154
 Consumption, see Current consumption 150
 Contacts, see Owner's Handbook for Navigation, Entertainment, Communication 8
 Contact with water, hybrid system 72
 Continued driving with a flat tire 176, 179
 Control Display 46
 Control Display, settings 55
 Controller 46
 Control systems, driving stability 189
 Convenient closing 78
 Convenient opening 77

Coolant 292
 Cooling, maximum 217
 Cooling system 292
 Cornering light 165
 Corrosion on brake discs 245
 Cosmetic mirror 227
 Country timer 160
 Coupling, see Pairing 59
 Courtesy lights during unlocking 77
 Courtesy lights with the vehicle locked 78
 Cruise control 200
 Cruise control, active 193
 Cruise control with distance control, see Camera-based cruise control 193
 Cruise control without distance control, see Cruise control 200
 Cruising range 149
 Cup holder 231
 Current consumption 150

D

Damage, tires 272
 Data memory 12
 Data protection, settings 58
 Data, technical 320
 Date 56
 Date display 149
 Daytime pedestrian collision mitigation 184
 Daytime running lights 165
 DCC, see Cruise control 200
 Deactivating drive-ready state 121
 Deactivation of the hybrid system 72
 Defrosting, see Defrosting the windows 215
 Defrosting, see Windows, defrosting 219
 Defrosting the windows 215
 Deleting personal data 58
 Deletion of personal data 58
 Departure times, stationary climate control 221
 Destination distance 155
 Device list 59
 Digital clock 148
 Digital compass 225

Dimensions 320
Dimmable exterior mirrors 110
Dimmable interior mirror 111
Direction indicator, see Turn signals 127
Display and input 44
Display, electronic, instrument cluster 141
Display, engine temperature 155
Display, GREEN Mode 249
Display lighting, see Instrument lighting 167
Displays 140
Displays, care 317
Displays, hybrid system 141
Disposal, coolant 293
Disposal, vehicle battery 304
Distance control, see PDC 202
Distance to destination 155
Divided screen view, split screen 45
Drive-off assistant 192
Drive-off assistant, see DSC 189
Driver assistance, see Intelligent Safety 180
Drive-ready state 118
Drive-ready state, activating 120
Drive-ready state, deactivate 121
Drive-ready state in detail 119
Driver profiles 89
Driver profiles, exporting profiles 91
Driver profiles, importing profiles 91
Driving Dynamics Control, see MINI Driving Modes switch 191
Driving Excitement, SPORT 156
Driving instructions 0
Driving instructions, break-in 242
Driving instructions, hybrid system 248
Driving mode, GREEN 249
Driving modes 191
Driving notes, general 243
Driving on poor roads 246
Driving on racetracks 246
Driving stability control systems 189
Driving tip, GREEN tip 250
Driving tips 243
Driving with combustion engine, POWER 124
Drying air, see Air conditioning 214, 217

DSC Dynamic Stability Control 189
DTC Dynamic Traction Control 190
DVD, video, see Owner's Handbook for Navigation, Entertainment, Communication 8
Dynamic Stability Control DSC 189
Dynamic Traction Control DTC 190

E

eASSIST, assistance for the combustion engine 125
Easy Opener 84
eBOOST, assistance for the combustion engine 125
eDRIVE button 122
eDRIVE, see Hybrid system 69
Electrical drive-ready state 120
Electric driving, ePOWER 122
Electric driving, MAX eDRIVE 123
Electric driving, SAVE BATTERY 123
Electronic displays, instrument cluster 141
Electronic oil measurement 288
Electronic Stability Program ESP, see DSC 189
E-mail, see Owner's Handbook for Navigation, Entertainment, Communication 8
Emergency release, fuel filler flap 264
Emergency Request 307
Emergency service, see Breakdown assistance 306
Emergency unlocking, charging cable 258
Energy control 150
Energy recovery, CHARGE 125
Engine, automatic stop 121
Engine compartment 285
Engine compartment, working in 286
Engine coolant 292
Engine noise, artificial, see Acoustic pedestrian protection 124
Engine oil 288
Engine oil, adding 289
Engine oil change 291
Engine oil filler neck 289
Engine oil types to add 290
Engine start, combustion engine 120
Engine start, jump-starting 308

Engine temperature, display 155
 Entering a destination, see Owner's Handbook for Navigation, Entertainment, Communication 8
 Entering an address, navigation, see Owner's Manual for Navigation, Entertainment and Communication 8
 Entering a vehicle wash 314
 ePOWER, electric driving 122
 Equipment, interior 222
 Error displays, see Check Control 144
 ESP Electronic Stability Program, see DSC 189
 Exchanging wheels/tires 273
 Exhaust gas system 243
 Exiting a vehicle wash 314
 Exterior mirror, automatic dimming feature 110
 Exterior mirrors 109
 Exterior mirrors, Automatic Curb Monitor 110
 Exterior mirrors, malfunction 109
 External start 308
 External temperature display 148
 External temperature warning 148
 Eyes for securing cargo 234

F

Failure message, see Check Control 144
 False alarm, see Unintentional alarm 94
 Fan, see Air flow 215, 218
 Fastening safety belts, see Safety belts 104
 Fatigue alert 187
 Filler neck for engine oil 289
 Filter, see Microfilter 215
 Filter, see Microfilter/activated-charcoal filter 219
 Finding charging stations, see Charging stations and points of interest, see Owner's Handbook for Navigation, Entertainment, Communication 8
 Fine wood, care 316
 First-aid kit 306
 Flat tire, changing wheels 280
 Flat Tire Monitor F™M 178

Flat tire, repairing 275
 Flat tire, Tire Pressure Monitor TPM 173
 Flat tire, warning light 174, 178
 Flooding 243
 Floor carpet, care 316
 Floor mats, care 316
 Fogged up windows 215
 Fold-away position, windshield wipers 130, 134
 Fold back rear seat backrests 236
 Foot brake 244
 For Your Own Safety 10
 Front airbags 169
 Front fog lights 166
 Front fog lights, LED, bulb replacement 301
 Front-seat passenger airbags, automatic deactivation 171
 Front-seat passenger airbags, indicator light 172
 Front seats 100
 FTM Flat Tire Monitor 178
 Fuel 266
 Fuel cap 264
 Fuel filler flap 264
 Fuel gauge 148
 Fuel quality 266
 Fuel recommendation 266
 Fuel, tank capacity 321
 Functions, hybrid system 69
 Fuse 304

G

Garage door opener, see Integrated Universal Remote Control 222
 Gasoline 266
 General driving notes 243
 General settings 55
 Glare shield 227
 Glass sunroof, initialize the system 99
 Glass sunroof, see Panoramic glass sunroof 97
 Glove compartment 230
 GPS geolocation, vehicle position 56

GPS, navigation, see Owner's Handbook for Navigation, Entertainment, Communication **8**
GREEN Mode **249**
GREEN - program, driving dynamics **191**
GREEN tip, driving tip **250**
Gross vehicle weight, approved **321**
Ground clearance **245**

H

Halogen headlights **298**
Handbrake, see Parking brake **125**
Hand-held transmitter, alternating code **223**
Hands-free device, see Owner's Handbook for Navigation, Entertainment, Communication **8**
Hazard warning flashers **306**
Head airbag **170**
Headlight control, automatic **164**
Headlight courtesy delay feature **164**
Headlight flasher **127**
Headlight glass **298**
Headlights, care **314**
Head restraints, front **106**
Head restraints, rear **107**
Head-up Display **158**
Head-up Display, see Memory function **108**
Head-up Display, standard view **159**
Heavy cargo, stowing cargo **234**
High-beam Assistant **165**
High beams **127**
High beams/low beams, see High-beam Assistant **165**
High-voltage battery, charge state indicator **154**
Hills **244**
Hill start assistant, see Drive-off assistant **192**
Holder for beverages **231**
HomeLink, see Integrated Universal Remote Control **222**
Homepage **8**
Hood **286**
Horn **40**

Hot exhaust gas system **243**
Hotline, see Owner's Handbook for Navigation, Entertainment, Communication **8**
HUD Head-up Display **158**
Hybrid system, adapting to the course of the road **143**
Hybrid system, at a glance **69**
Hybrid system, automatic deactivation **72**
Hybrid system, contact with water **72**
Hybrid system, displays **141**
Hybrid system, safety **72**
Hybrid system, working on **72**
Hydroplaning **243**

I

Ice warning, see External temperature warning **148**
Icy roads, see External temperature warning **148**
Identification marks, tires **270**
Identification number, see Vehicle identification number **15**
Ignition off **118**
Ignition on **118**
Illuminated ring, central instrument cluster **157**
Indication of a flat tire **174, 178**
Indicator light, see Check Control **144**
Individual air distribution **215, 219**
Individual settings, see Driver profiles **89**
Inductive charging of a smartphone, see Wireless charging tray, see Owner's Manual for Navigation, Entertainment, Communication **8**
Inflation pressure, tires **268**
Inflation pressure warning, tires **178**
Info Display, see Onboard Computer **153**
Information **8**
Initialize, Tire Pressure Monitor TPM **174**
Initializing, Flat Tire Monitor FTM **178**
Input and display **44**
Instrument cluster **140**
Instrument cluster, electronic displays **141**
Instrument lighting **167**
Integrated key **80**

Integrated Owner's Manual in the vehicle 67
 Integrated Universal Remote Control 222
 Intelligent emergency call 307
 Intelligent Safety 180
 Intended use 10
 Intensity, AUTO program 218
 Interior equipment 222
 Interior lights 167
 Interior lights during unlocking 77
 Interior lights with the vehicle locked 78
 Interior mirror 109
 Interior mirror, automatic dimming feature 111
 Interior mirror, compass 225
 Interior mirror, manually dimmable 110
 Interior motion sensor 94
 Internet site 8
 Interval display, service requirements 150
 Interval mode 129, 132
 In the vicinity of the center console 42
 In the vicinity of the roofliner 43
 In the vicinity of the steering wheel 40
 IOM, see Integrated Owner's Manual in the vehicle 67

J

Jacking points for the vehicle jack 282
 Jam protection system, glass sunroof 98
 Jam protection system, windows 96
 Jump-starting 308

K

Keyless Go, see Comfort Access 82
 Key, see Integrated key 80
 Key, see Vehicle key 76
 Kickdown, Steptronic transmission 138
 Knee airbag 170

L

Label on recommended tires 273
 Label, runflat tires 274

Language, on the Control Display 55
 Lashing eyes 234
 LATCH child restraint fixing system 114
 Leather, care 315
 LED ring, central instrument cluster 157
 LEDs, light-emitting diodes 297
 Letters and numbers, entering 48
 Level 1 charging 260
 Level 1 charging cable 256
 Level 2 charging cable 256
 Light 163
 Light-alloy wheels, care 315
 Light-emitting diodes, LEDs 297
 Lighter 227
 Lighting 163
 Light replacement 297
 Light replacement, front 298, 300
 Light replacement, rear 301
 Light replacement, side 303
 Lights and bulbs 297
 Light switch 163
 List of all messages 57
 Load 234
 Loading 233
 Location, vehicle position 56
 Locking, automatic 92
 Locking, from inside 81
 Locking, see Opening and Closing 76
 Locking, settings 91
 Longer idle phases 317
 Long idle times and long-term vehicle storage 317
 Long-term vehicle storage 317
 Low beams 163
 Low beams, automatic, see High-beam Assistant 165
 Lower back support 102
 Lower back support, mechanical 101
 Lug bolt lock 282
 Luggage rack, see Roof-mounted luggage rack 245
 Lumbar support 102
 Lumbar support, mechanical 101

M

Maintaining the charge state, SAVE BATTERY 123

Maintenance 294

Maintenance requirements 294

Maintenance, service requirements 150

Maintenance system, MINI 294

Make-up mirror 227

Malfunction displays, see Check Control 144

Manual air distribution 215, 219

Manual air flow 215, 218

Manual brake, see Parking brake 125

Manual mode, transmission 138

Manual operation, fuel filler flap 264

Manual operation, PDC Park Distance Control 203

Manual operation, rearview camera 206

Manufacturer of the MINI 10

Map update, see Owner's Handbook for Navigation, Entertainment, Communication 8

Matte finish 315

MAX eDRIVE, electric driving 123

Maximum cooling 217

Maximum speed, display 151

Maximum speed, winter tires 274

Measurement, units of 56

Mechanical key 80

Media of the Owner's Manual 67

Medical kit 306

Memory function 108

Menu in instrument cluster 153

Menus, Central Information Display (CID) 47

Messages 57

Messages, see Check Control 144

Microfilter 215, 219

MID - program, driving dynamics 191

MINI Connected, see Owner's Handbook for Navigation, Entertainment, Communication 8

MINI driving modes 191

MINI eDRIVE, see Hybrid system 69

MINI logo projection during unlocking 77

MINI maintenance system 294

Minimum tread, tires 272

MINI Picnic Bench 238

Mirrors 109

Mirror, see Memory function 108

Mobile communication devices in the vehicle 243

Mobility System 275

Modifications, technical, see For Your Own Safety 10

Moisture in headlight 298

Monitor, see Control Display 46

Mounting of child restraint systems 113

MP3 player, see Audio, see Owner's Handbook for Navigation, Entertainment, Communication 8

Multifunction steering wheel, buttons 40

Multimedia, see Owner's Manual for Navigation, Entertainment and Communication 8

Music hard disk, see Owner's Handbook for Navigation, Entertainment, Communication 8

N

Navigation, see Owner's Manual for Navigation, Entertainment and Communication 8

Neck restraints, front, see Head restraints 106

Neck restraints, rear, see Head restraints 107

Neutral cleaner, see Wheel cleaner 315

New wheels and tires 273

Notes, see Owner's Handbook for Navigation, Entertainment, Communication 8

No-touch closing of the tailgate 84

No-touch opening of the tailgate 84

O

OBD Onboard Diagnostics 295

Obstacle marking, rearview camera 207

Octane rating, see Recommended fuel grade 267

Odometer 148

Office, see Owner's Manual for Navigation, Entertainment and Communication 8

Officially use hybrid system 248

Oil 288

Oil, adding 289

Oil change 291

Oil change interval, service requirements 150

Oil filler neck 289

Oil types to add, engine 290

Onboard Computer 153

Onboard Diagnostics OBD 295

Onboard literature, printed 67

Onboard vehicle tool kit 296

On-call service, see Breakdown assistance 306

Opening and Closing 76

Opening, from inside 81

Operating concept Central Information Display (CID) operating concept 44

Operating menus, Central Information Display (CID) 44

Operation via the Controller 47

Operation via touchscreen 49

Optional equipment 9

Outside air, see Automatic recirculated-air control 218

Owner's Manual, printed 67

P

Paint, vehicle 315

Panic alarm, see Panic mode 94

Panic mode 94

Panoramic glass sunroof 97

Parallel parking assistant 208

Park Distance Control PDC 202

Parked vehicle, condensation 245

Parked vehicle ventilation, see Stationary climate control 220

Parking aid, see PDC 202

Parking assistant 208

Parking brake 125

Parking lights 163

Parts and accessories 10

Passenger's side mirror, tilting 110

Pathway lines, rearview camera 207

PDC Park Distance Control 202

Pedestrian protection, acoustic 124

Performance Control 191

Personal profile, see Driver profiles 89

Picnic Bench 238

Plastic, care 316

Poor roads, driving on 246

PostCrash — iBrake 188

POWER, driving with combustion engine 124

Power failure 304

Power windows 95

Pressure, tires 268

Pressure warning, tires 178

Printed onboard literature 67

Profiles, see Driver profiles 89

Programmable memory buttons, Central Information Display (CID) 50

Protective function, glass sunroof 98

Protective function, windows 96

Push-and-turn reel, see Controller 46

Q

Quick charging cable, see Level 2 charging cable 256

R

Racetrack operation 246

Radiator fluid 292

Radio-ready state 118

Radio, see Owner's Manual for Navigation, Entertainment and Communication 8

Rain sensor 129, 132

Ratchet straps 234

Rear lights 301

Rear seats 103

Rearview camera 205

Rear window defroster 215, 219

Rear window wiper, operation 130, 133

Recirculated-air filter 219

Recirculated-air mode 214, 218

Recommended fuel grade 267

- Recommended tire brands 273
 - Refueling 263
 - Remaining range 149
 - Remote control, universal 222
 - Replacing parts 296
 - Replacing the battery, vehicle key 79
 - Replacing wheels/tires 273
 - Reporting safety malfunctions 15
 - RES CNCL button, see Camera-based cruise control 193
 - RES CNCL button, see Cruise control 200
 - Reserve warning, see Range 149
 - Reset, Tire Pressure Monitor TPM 174
 - Retreaded tires 274
 - Roadside Assistance, see Breakdown assistance 306
 - Roadside parking lights 164
 - Rolling code hand-held transmitter 223
 - RON recommended fuel grade 267
 - Roofliner 43
 - Roof-mounted luggage rack 245
 - Route, navigation, see Owner's Handbook for Navigation, Entertainment, Communication 8
 - RSC Runflat System Component, see Runflat tires 274
 - Rubber components, care 316
 - Runflat tires 274
- S**
- Safe braking 244
 - Safety belt reminder for driver's seat and front passenger seat 106
 - Safety belts 104
 - Safety belts, care 316
 - Safety locks, doors, and windows 117
 - Safety of the hybrid system 72
 - Safety switch, windows 96
 - Safety systems, airbags 169
 - SAVE BATTERY, electric driving 123
 - Saving fuel 247
 - Screen, see Control Display 46
 - Screwdriver 296
 - Sealant, see Mobility System 275
 - Seat heating, front 103
 - Seating position for children 112
 - Seat, see Memory function 108
 - Seats, front 100
 - Seats, rear 103
 - Securing cargo 234
 - Selection list in instrument cluster 153
 - Sensors, care 317
 - Service and warranty 11
 - Service requirements, Condition Based Service CBS 294
 - Service requirements, display 150
 - Servotronic 192
 - SET button, see Camera-based cruise control 193
 - SET button, see Cruise control 200
 - Settings, locking/unlocking 91
 - Settings, mirrors 109
 - Settings on the Control Display 55
 - Shift gate rotary switch 191
 - Side airbag 169
 - Signaling, horn 40
 - Signals when unlocking 93
 - Sitting safely 100
 - Size 320
 - Slide/tilt glass roof 97
 - SMS, see Short messages, see Owner's Handbook for Navigation, Entertainment, Communication 8
 - SMS text messages, supplementary 147
 - Snow chains 279
 - Socket 227
 - Socket, OBD Onboard Diagnostics 295
 - Software update 65
 - SOS button 307
 - Sound output, see Owner's Handbook for Navigation, Entertainment, Communication 8
 - Speed, average 155
 - Speed Limit Info 151
 - Speed Limit Info, Onboard Computer 155
 - Speed limits, display 151
 - Speed warning 157
 - Split screen 45
 - Sport displays 156
 - SPORT program, driving dynamics 192
 - Sport program, transmission 138

Stability control systems 189
 Standard charging cable, see Level 1 charging cable 256
 Standard charging, see Level 1 charging 260
 Standard equipment 9
 Standard view, Head-up Display 159
 Start/Stop button 118
 Starting of combustion engine 120
 Stationary climate control 220
 Stations, AM/FM, see Owner's Handbook for Navigation, Entertainment, Communication 8
 Status control display, tires 173
 Status information, Central Information Display (CID) 45
 Status of Owner's Manual 10
 Status, vehicle 161
 Steering assistance 192
 Steering wheel, adjusting 111
 Steptronic transmission 136
 Storage compartments 230
 Storage, tires 274
 Storing the charging cable, see Storage 257
 Storing the vehicle 317
 Stowing and securing cargo 234
 Suitable devices 60
 Suitable mobile phones 60
 Summer tires, tread 272
 Sun visor 227
 Supplementary Owner's Manuals 67
 Supplementary SMS text messages 147
 Switch for driving dynamics 191
 Switch, see Cockpit 40
 Symbols 9

T

Tailgate 86
 Tailgate, closing with no-touch activation 84
 Tailgate, opening with no-touch activation 84
 Tailgate via remote control 78
 Tail lights 301
 Tank unlocking, see Tank vent 263

Tank vent 263
 Technical changes, see For Your Own Safety 10
 Technical data 320
 Telephone, see Owner's Manual for Navigation, Entertainment and Communication 8
 Teleservices, see Owner's Handbook for Navigation, Entertainment, Communication 8
 Temperature, air conditioner 214
 Temperature, automatic climate control 216
 Temperature display for external temperature 148
 Temperature, engine 155
 Terminal, starting aid 309
 Theft alarm system, see Alarm system 93
 Thigh support 103
 Tilt alarm sensor 94
 Tilting, passenger's side mirror 110
 Time 55
 Time of arrival 155
 Tire damage 272
 Tire identification marks 270
 Tire inflation pressure 268
 Tire inflation pressure monitor, see FTM 178
 Tire pressure 268
 Tire Pressure Monitor TPM 173
 Tire repair kit, see Mobility System 275
 Tires, changing 273
 Tire sealant, see Mobility System 275
 Tires, everything on wheels and tires 268
 Tires, runflat 274
 Tire tread 272
 Tone, see Owner's Manual for Navigation, Entertainment and Communication 8
 Tools 296
 Total vehicle weight 321
 Touchscreen 49
 Towing 310
 Tow-starting 310
 TPM Tire Pressure Monitor 173
 Traction control 190
 TRACTION driving mode, driving dynamics 190

Traffic bulletins, see Owner's Handbook for Navigation, Entertainment, Communication 8

Transmission lock, releasing manually 139

Transmission, see Steptronic transmission 136

Transporting children safely 112

Tread, tires 272

Trip computer 155

Triple turn signal activation 127

Trip odometer 148

Trip recorder, see Trip odometer 148

Turning radius lines, rearview camera 207

Turn signal, front 298, 300

Turn signal, indicator light 146

Turn signal, side 303

Turn signals, operation 127

Turn signals, rear, bulb replacement 301

U

Unintentional alarm 94

Units of measurement 56

Universal remote control 222

Unlocking, automatic 92

Unlocking, see Opening and Closing 76

Unlocking, settings 91

Updates made after the editorial deadline 10

Upholstery care 315

USB connection 62

USB interface, position in vehicle 228

USB port, see USB interface 228

Used battery, disposing of 304

Use, intended 10

Using a smartphone via voice activation 53

V

Vanity mirror 227

Vehicle battery 303

Vehicle, break-in 242

Vehicle care 314

Vehicle care products 314

Vehicle features and options 9

Vehicle identification number 15

Vehicle jack 282

Vehicle key, additional 79

Vehicle key, loss 79

Vehicle key, malfunction 79

Vehicle key, opening/closing 76

Vehicle key, replacing the battery 79

Vehicle key, see Vehicle key 76

Vehicle paint 315

Vehicle position, vehicle location 56

Vehicle status 161

Vehicle wash 314

Vehicle wash, automatic 314

Vehicle, washing 313

Ventilation 219

Venting, see Stationary climate control 220

VIN, see Vehicle identification number 15

Voice activation system 51

Voice command response, see Owner's Handbook for Navigation, Entertainment, Communication 8

W

Warning and indicator lights, see Check Control 144

Warning displays, see Check Control 144

Warning messages, see Check Control 144

Warning triangle 306

Warranty 10

Washer fluid 135

Washer nozzles, windshield 130, 133

Washing the vehicle 313

Water, hybrid system 72

Water on roads 243

Weights 321

Welcome lights 164

Welcome lights during unlocking 77

Wheel cleaner 315

Wheels, changing 273

Wheels, everything on wheels and tires 268

Wheels, Flat Tire Monitor FTM 178

Wheels, Tire Pressure Monitor TPM 173

Windows, powered 95

Windshield cleaning system 128, 131

- Windshield defroster [215](#), [219](#)
Windshield washer fluid [135](#)
Windshield washer nozzles [130](#), [133](#)
Windshield wipers, fold-away position [130](#), [134](#)
Windshield wipers, see Wiper system [128](#), [131](#)
Winter storage, care [317](#)
Winter tires, suitable tires [274](#)
Winter tires, tread [272](#)
Wiper blades, replacing [296](#)
Wiper fluid [135](#)
Wiper system [128](#), [131](#)
Wireless charging of a smartphone, see
Wireless charging tray, see Owner's
Manual for Navigation, Entertainment,
Communication [8](#)
Wireless charging tray, see Owner's Manual
for Navigation, Entertainment, Communi-
cation [8](#)
Wood, care [316](#)
Word match concept, navigation [44](#)
Working on the hybrid system [72](#)
Wrench [296](#)

01402628632 ue



California Proposition 65 Warning

For vehicles sold in California:

California Proposition 65 Warning



WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

MINI MOTORER'S GUIDE APP.

Your customized information about the vehicle in an app.
Optimized for smartphones & tablets. Can be used offline.



01402628632 ue

